

Anderic RR787T

Anderic RR787T Replacement Remote Control

INSTRUCTION MANUAL

Model: RR787T

Introduction

This instruction manual provides detailed guidance for the Anderic RR787T Replacement Remote Control. Designed as a direct replacement for RH787T and UC787T remotes, it offers comprehensive control for Casablanca DC motor ceiling fans and other compatible high-end models. Features include six fan speeds, reverse airflow, and dimmable light control (for incandescent bulbs). This remote is specifically engineered for ceiling fans utilizing receivers with 4 dip switches, including those originally paired with the RH786R receiver.

Package Contents

Verify that all items are present in your package:

- Anderic RR787T Remote Control
- Wall Mount Bracket
- Mounting Screws and Wall Anchors
- *Note: Two AAA batteries are required and not included.*



Image: Anderic RR787T remote control securely placed in its wall mount holder.

Setup

Follow these steps to set up your new remote control:

1. **Install Batteries:** Open the battery compartment on the back of the remote. Insert two AAA batteries (not included), ensuring correct polarity.
2. **Set Dip Switches:** Locate the 4 dip switches inside the battery compartment. Match the dip switch settings on your new Anderic RR787T remote to the settings on your existing ceiling fan receiver or old remote. This step is crucial for proper communication between the remote and the fan.
3. **Mount Wall Bracket:** Use the provided screws and wall anchors to securely mount the wall bracket in a convenient location.
4. **Insert Remote:** Slide the remote control into the mounted wall bracket.



Image: Rear view of the Anderic RR787T remote, highlighting the battery compartment and dip switches for configuration.

Setup Demonstration Video

Video: A demonstration of a similar Anderic remote (UC7225T) showing its features and operation, which can provide general guidance for setup and use. Note that this video is for a different model (UC7225T) but from the same brand.

Operating Instructions

The Anderic RR787T remote offers intuitive control over your ceiling fan and light:

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed Control:** Use the fan speed buttons (typically marked I, II, III, IV, V, VI or Low, Med, High) to adjust the fan's rotation speed. The RR787T supports 6 fan speeds.
- **Reverse Airflow:** Press the reverse button to change the direction of the fan blades, allowing for seasonal comfort (downward airflow for cooling, upward for circulating warm air).
- **Light Control:**
 - Press the light button to turn the light on or off.
 - To dim the light (with incandescent bulbs), press and hold the light button. Release when the desired brightness is reached.
 - *Note: For LED, CFL, or other non-incandescent bulbs, the dimming function can be disabled inside the battery compartment to prevent issues.*
- **Timer Function:** The remote includes timer buttons (e.g., 1H, 2H, 4H, 8H) to set the fan to operate for a specific duration before automatically turning off.



Image: Front view of the Anderic RR787T remote control, displaying its intuitive button layout for easy operation.

Compatibility

The Anderic RR787T is designed for broad compatibility with specific ceiling fan systems:

- **Receivers:** Designed for ceiling fans that use receivers with 4 dip switches, including models originally paired with RH786R, RH787T, and UC787T remotes.
- **Fan Brands:** Compatible with high-end ceiling fans from brands such as Casablanca, Monte Carlo, Fanimation, Regency, and Home Decorators Collection.
- **Supported Models:** Includes Casablanca Panama, Stealth, Stingray, Fellini, and Monte Carlo Vision, Arcade, Hicks, and Dover series.
- **Important Note:** Not compatible with Fanimation Slinger fans (especially newer models), fans requiring 5 dip switch receivers, or 315 MHz systems like Harbor Breeze ZJF-HH-YK-A008. Always verify your fan's receiver type before purchase.

Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's performance diminishes. Ensure correct battery type (2 AAA) and polarity.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

If you encounter issues with your remote control, refer to the following common solutions:

- **Remote Not Responding:**
 - Check battery levels and replace if necessary.
 - Ensure the dip switch settings on the remote match the receiver.
 - Verify the fan's power supply is active.
- **Light Not Dimming:**
 - Confirm that incandescent bulbs are being used.
 - Check if the dimming function is enabled inside the battery compartment.
- **Fan Not Changing Speed/Direction:**
 - Ensure the remote is within range of the receiver.
 - Re-check dip switch settings.

Specifications

Brand	Anderic
Model Number	RR787T (replaces RH787T)
Package Dimensions	4.96 x 4.92 x 2.8 inches
Item Weight	3.2 ounces

Batteries	2 AAA batteries (not included)
Special Feature	Wall Mount Included
Color	White
Max Number of Supported Devices	1
Compatible Devices	Fan

Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact Anderic customer service directly. Keep your proof of purchase for any warranty claims.