

[Manuals.plus](#) /

› [Arlo](#) /

› Arlo Pro 5S 2K Spotlight Camera User Manual (Model VMC4060P)

Arlo Pro 5S 2K Spotlight Camera User Manual (Model VMC4060P)

Arlo Pro 5S 2K Spotlight Camera User Manual (Model VMC4060P)

Comprehensive instructions for setup, operation, and maintenance of your Arlo Pro 5S 2K Spotlight Camera.

PRODUCT OVERVIEW

The Arlo Pro 5S 2K Spotlight Camera is a wireless home security camera designed for both indoor and outdoor surveillance. It features 2K HDR video quality, color night vision, an integrated spotlight, two-way audio, and motion detection capabilities. This camera connects via dual-band Wi-Fi and is powered by a rechargeable battery, offering flexible placement options.



Image: Front view of the Arlo Pro 5S 2K Spotlight Camera, showcasing its sleek white design and camera lens.

WHAT'S IN THE BOX

- (1) Arlo Pro Camera
- (1) Rechargeable Battery
- (1) Magnetic Charging Cable
- (1) Wall Mount and Screw Kit
- (1) Quick Start Guide

SETUP

1. **Charge the Battery:** Fully charge the included rechargeable battery using the magnetic charging cable.
2. **Download the Arlo App:** Install the Arlo Secure app on your smartphone or tablet. The app is available for both Android and iOS devices.
3. **Create an Account:** Open the Arlo Secure app and follow the on-screen instructions to create a new account or log in to an existing one.
4. **Add Your Camera:** In the app, select "Add Device" and choose the Arlo Pro 5S 2K Spotlight Camera from the list.
5. **Follow In-App Instructions:** The app will guide you through the pairing process, which typically involves pressing a pairing button on the camera and connecting it to your dual-band Wi-Fi network (2.4 GHz or 5 GHz).
6. **Mount the Camera:** Use the provided wall mount and screw kit to securely install the camera in your desired indoor or outdoor location. Ensure the camera has a clear field of view and is within Wi-Fi range.
7. **Adjust Camera Angle:** Position the camera to cover the area you wish to monitor.

For optimal performance, ensure your Wi-Fi signal is strong at the camera's installation location. The camera automatically connects to the stronger band (2.4 GHz or 5 GHz).

OPERATING INSTRUCTIONS

Live View

To view live footage from your camera, open the Arlo Secure app and select your Arlo Pro 5S camera from the device list. You can access the live feed from anywhere with an internet connection.

Two-Way Audio

Utilize the two-way audio feature through the Arlo Secure app to listen in on your property or speak to visitors. Tap the microphone icon in the live view to activate the audio.

Motion Detection and Alerts

The camera is equipped with advanced motion detection. You can customize motion zones and sensitivity settings within the Arlo Secure app. When motion is detected, you will receive instant alerts on your connected devices.

Integrated Spotlight and Color Night Vision

The integrated spotlight can be activated manually or set to trigger automatically upon motion detection, providing illumination and deterring intruders. This feature, combined with color night vision, ensures clear, full-color video recordings even in low-light conditions.

Integrated Siren

Activate the integrated siren remotely via the Arlo Secure app to scare off unwanted visitors or alert neighbors to an incident.

MAINTENANCE

- **Battery Charging:** Monitor the battery level through the Arlo Secure app. Recharge the battery as needed using the magnetic charging cable.
- **Lens Cleaning:** Periodically clean the camera lens with a soft, lint-free cloth to ensure clear video quality. Avoid abrasive cleaners.
- **Firmware Updates:** Ensure your camera's firmware is always up to date. The Arlo Secure app will notify you of available updates.
- **Physical Inspection:** Regularly check the camera and mount for any signs of wear or damage, especially if

installed outdoors.

TROUBLESHOOTING

Camera Not Connecting to Wi-Fi:

Ensure your Wi-Fi network is active and the camera is within range. Try restarting your router and the camera. Verify that you are connecting to a 2.4 GHz or 5 GHz network as supported by the camera.

Poor Video Quality:

Check for obstructions in front of the lens and clean the lens if necessary. Ensure the camera has a strong Wi-Fi signal. Adjust video settings in the Arlo Secure app if needed.

Battery Draining Quickly:

Frequent motion detection, live streaming, or spotlight activation can consume battery faster. Adjust motion sensitivity and recording settings in the app to optimize battery life.

No Motion Alerts:

Verify motion detection is enabled in the Arlo Secure app and that motion zones are correctly configured. Check your app notification settings on your device.

SPECIFICATIONS

Model Name	ARLO PRO 5S
Model Number	VMC4060P
Video Resolution	2K HDR (1440p)
Field of View	160° Diagonal
Connectivity	Dual-Band Wi-Fi (2.4 GHz & 5 GHz)
Power Source	Rechargeable Battery
Special Features	Color Night Vision, Integrated Spotlight, 2-Way Audio, Motion Sensor, Integrated Siren
Indoor/Outdoor Use	Yes
Compatible Devices	Desktop, Smartphone, Tablet (via Arlo Secure App)
Dimensions	3.5 x 2 x 3 inches

WARRANTY AND SUPPORT

This Arlo Pro 5S 2K Spotlight Camera is a manufacturer-renewed product and typically comes with a 1-year warranty. Please refer to the specific warranty documentation included with your product for full details on coverage and terms. For technical support, product registration, or additional information, please visit the official Arlo support website or contact their customer service. You can also find helpful resources and FAQs within the Arlo Secure app.

Note: Arlo offers optional subscription plans that provide additional features such as cloud recording history and advanced object detection. These plans are not required for live viewing but enhance the camera's security capabilities.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question