

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Memorex](#) /

› [Memorex AM/FM Top Loading CD Player | Portable Stereo with Programmable Memory | Auxiliary Input and LED Display \(Black, with Cassette Player\) - Instruction Manual](#)

Memorex MX-BCCD50

Memorex AM/FM Top Loading CD Player with Cassette Player

Model: MX-BCCD50 | Brand: Memorex

INTRODUCTION

This instruction manual provides detailed information on the operation and maintenance of your Memorex Portable Stereo System. Designed for versatile audio playback, this unit combines a top-loading CD player, an AM/FM radio, and a cassette player, along with an auxiliary input for external devices. Its portable design allows for use both at home and on the go.



Front view of the Memorex Portable Stereo System, showing the top-loading CD compartment, control buttons, volume and tuning knobs, and front speakers.

SAFETY INFORMATION

Please read all safety instructions carefully before using this product. Retain this manual for future reference.

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Ensure proper power source (AC adapter or 6 'C' batteries).
- Avoid placing the unit near heat sources or direct sunlight.
- Do not attempt to service the unit yourself. Refer all servicing to qualified personnel.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Memorex Portable Stereo System (1 unit)
- AC Power Adapter (1 unit)
- Instruction Manual (this document)

Note: 6 'C' batteries are not included and must be purchased separately for portable operation.

SETUP

Powering the Unit

Your Memorex Portable Stereo System can be powered by either the included AC adapter or by 6 'C' batteries.

AC Power:

1. Locate the AC IN jack on the back of the unit.
2. Insert the small end of the AC adapter into the AC IN jack.
3. Plug the other end of the AC adapter into a standard wall outlet (AC 120V ~ 60Hz).

Battery Power:

1. Open the battery compartment located on the bottom of the unit.
2. Insert 6 'C' size batteries (not included), ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

★ One Touch Recording

★ CD-R/RW Compatible



★ Also Works With 6x C Battery
(Battery Not Included)

★ Auto-stop cassette deck with soft eject door

Rear view of the unit, highlighting the battery compartment and the telescopic antenna.

OPERATING INSTRUCTIONS

General Controls

- **Power Button:** Press to turn the unit ON or OFF.
- **Volume Knob:** Rotate to adjust the audio output level.
- **Function Selector:** Switch between CD, Tape, and Radio modes. (Located on the side/back of the unit)
- **LED Display:** Shows track numbers for CD playback and other status indicators.

Programmable Memory



RADIO



memorex

Top view of the unit, illustrating the control layout and the LED display.

CD Player Operation

1. Ensure the Function Selector is set to "CD".
2. Open the top-loading CD compartment cover.
3. Place a CD (or CD-R/RW) with the label side facing up onto the spindle.
4. Close the CD compartment cover firmly.
5. Press the **PLAY/PAUSE** button to begin playback.
6. Use the **SKIP/SEARCH** buttons (<< / >>) to navigate between tracks. Press and hold to fast forward or rewind within a track.
7. Press the **STOP** button to stop playback.
8. The **RPT** (Repeat) button allows you to repeat the current track or all tracks.
9. The **PROG** (Program) button allows you to program a custom playback order for CD tracks.



The unit with its top-loading CD compartment open and the cassette door also open, ready for media insertion.

Cassette Player Operation

1. Ensure the Function Selector is set to "TAPE".
2. Press the **STOP/EJECT** button to open the cassette door.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette door.
5. Press the **PLAY** button to begin playback.
6. Use the **FAST FORWARD (">>**) and **REWIND (<<)** buttons to quickly advance or rewind the tape.
7. Press the **STOP/EJECT** button to stop playback and eject the tape.
8. The cassette deck features an auto-stop mechanism.



PORTABLE CASSETTE PLAYER



The unit displaying its cassette player functionality with the tape door open and the antenna extended for radio reception.

AM/FM Radio Operation

1. Ensure the Function Selector is set to "RADIO".
2. Extend the telescopic antenna for optimal FM reception. For AM reception, rotate the unit for best signal.
3. Rotate the **TUNING** knob to select your desired radio station.
4. Adjust the **VOLUME** knob to your preferred listening level.



The Memorex Portable Stereo System with its telescopic antenna fully extended, ready for radio tuning.

Auxiliary Input (AUX IN)

The 3.5mm auxiliary input allows you to connect external audio devices such as smartphones, MP3 players, or tablets.

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN jack on the unit.
2. Connect the other end of the audio cable to the headphone jack or audio output of your external device.
3. Ensure the Function Selector is set to "AUX".
4. Play audio from your external device. The sound will be output through the stereo system's speakers.
5. Adjust the volume using the unit's Volume knob and/or your external device's volume control.

MAINTENANCE

Cleaning:

- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- For the CD lens, use a specialized CD lens cleaner.
- Regularly clean the cassette player's head and pinch rollers with a cotton swab lightly dampened with isopropyl alcohol to ensure optimal sound quality and prevent tape damage.

Storage:

When not in use for extended periods, remove batteries to prevent leakage and store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	AC adapter not connected; Batteries depleted or incorrectly inserted.	Check AC connection; Replace batteries or ensure correct polarity.
No Sound	Volume too low; Incorrect function selected; Headphones connected.	Increase volume; Select correct function (CD/Tape/Radio/AUX); Disconnect headphones.
CD Skips/Doesn't Play	CD dirty or scratched; CD inserted incorrectly; CD compartment not closed.	Clean or replace CD; Insert CD label-side up; Close compartment firmly.
Poor Radio Reception	Antenna not extended; Weak signal.	Fully extend FM antenna; Rotate unit for better AM reception; Try different location.
Cassette Tape Issues	Tape tangled or damaged; Cassette heads dirty.	Inspect tape for damage; Clean cassette heads and pinch rollers.

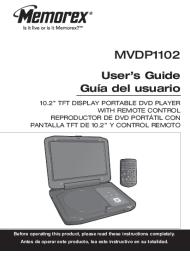
SPECIFICATIONS

- **Model Number:** MX-BCCD50
- **Brand:** Memorex
- **Product Dimensions:** 10 x 10 x 6 inches (L x W x H)
- **Item Weight:** 2.14 pounds
- **Power Source:** AC 120V ~ 60Hz or 6 x 'C' Batteries (not included)
- **Connectivity:** Auxiliary Input (3.5mm)
- **Speaker Type:** Stereo
- **Color:** Black
- **CD Compatibility:** CD, CD-R/RW
- **Cassette Deck:** Auto-stop
- **Radio Tuner:** AM/FM

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Memorex website. Keep your purchase receipt as proof of purchase for any warranty claims.

Related Documents - MX-BCCD50

	<p>Stereo Review's 1981 Tape Recording & Buying Guide: Audio Equipment Reviews and Features</p> <p>Explore the 1981 Stereo Review's Tape Recording & Buying Guide, featuring in-depth reviews of cassette decks, open-reel recorders, video recorders, and audio accessories, along with technical explanations and buying advice.</p>
	<p>Memorex MVDP1102 Portable DVD Player User Guide</p> <p>This comprehensive user guide provides detailed instructions for operating the Memorex MVDP1102 portable DVD player, covering setup, basic functions, DVD/CD/MP3 playback, remote control usage, and troubleshooting.</p>
	<p>Stereo Review's Tape Recording & Buying Guide 1979</p> <p>A comprehensive guide to tape recording equipment and accessories from 1979, featuring product reviews, technical explanations, manufacturer directories, and buying advice for home and car stereo systems.</p>
	<p>Memorex MKS2430 Karaoke System User Guide</p> <p>Comprehensive user guide for the Memorex MKS2430 Karaoke System, covering setup, operation of CD/CD+G playback, cassette functions, radio tuning, and recording. Includes safety instructions and troubleshooting tips.</p>
	<p>Memorex Model 630 Disc Drive Maintenance Manual</p> <p>Comprehensive maintenance manual for the Memorex Model 630 Disc Drive, detailing installation, operation, theory of operation, and adjustment procedures for customer engineers. Includes technical specifications and troubleshooting guidance.</p>
	<p>Memorex MP3862 Bluetooth CD Boombox User Guide</p> <p>Comprehensive user guide for the Memorex MP3862 Bluetooth CD Boombox, detailing setup, operation of CD and Bluetooth functions, maintenance, and troubleshooting tips.</p>