

Bell+Howell Chelsea

Bell+Howell Chelsea Cordless LED Table Lamp User Manual

Model: Chelsea | Item Number: 6437

1. PRODUCT OVERVIEW

The Bell+Howell Chelsea Cordless LED Table Lamp is a versatile and portable lighting solution designed for various indoor settings. It features touch activation, three distinct light color modes (warm, white, and daylight), and dimmable brightness. Its cordless and rechargeable design offers flexibility and convenience.



Image: The Bell+Howell Chelsea Cordless LED Table Lamp in silver finish, demonstrating its three light color settings: warm, white, and daylight.

2. PACKAGE CONTENTS

Upon opening your product package, please ensure all items listed below are present and in good condition:

- 2 x Bell+Howell Chelsea Cordless LED Table Lamps
- 2 x USB-C Charging Cables (approximately 31.5 inches each)
- User Manual (this document)

3. SETUP

3.1 Initial Charging

1. Locate the USB-C charging port on the base of the lamp.
2. Connect the provided USB-C cable to the lamp's charging port.
3. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a powered USB port.
4. Allow the lamp to charge fully before first use. A charging indicator light (if present) will typically

change color or turn off when charging is complete.

Use Anywhere

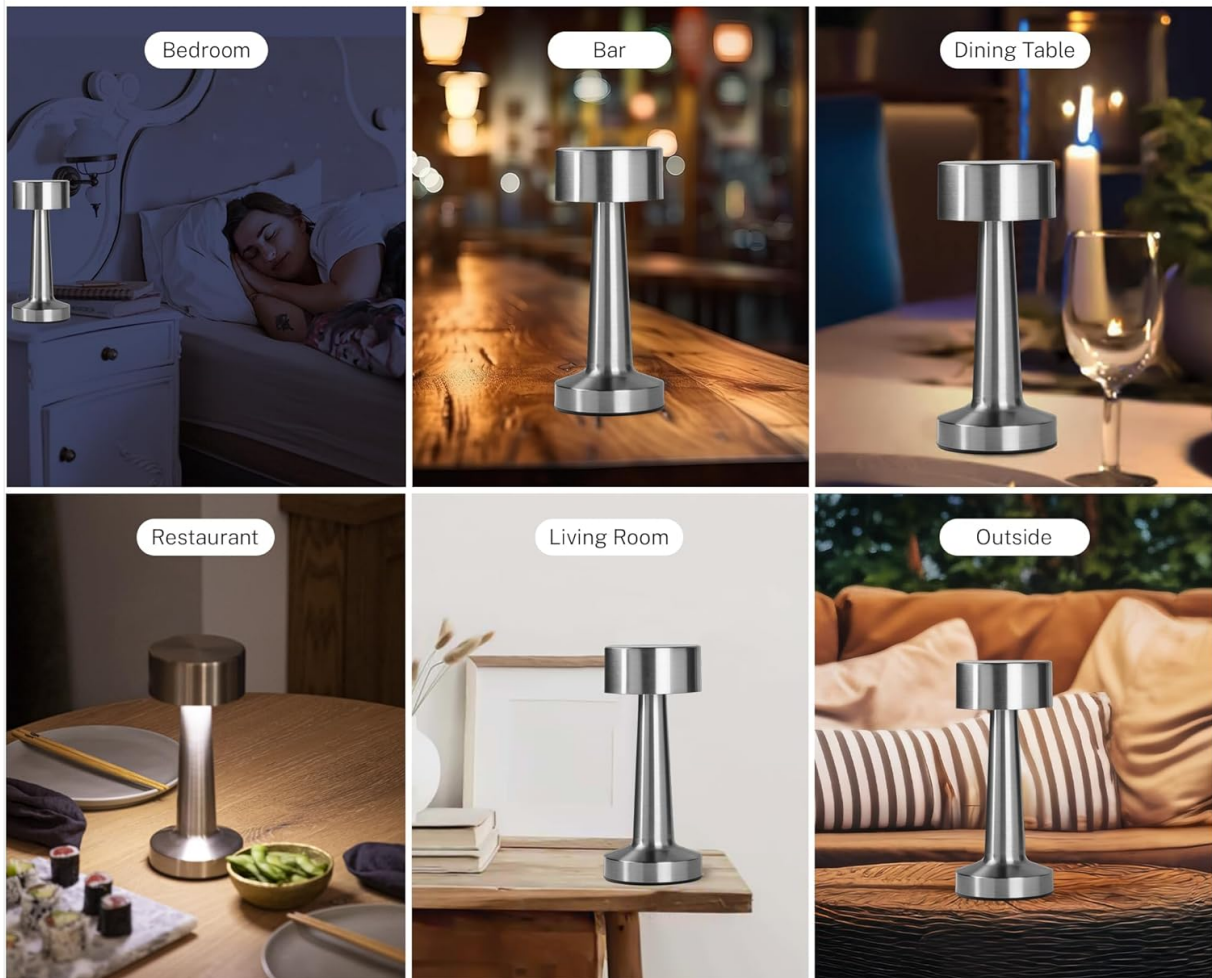


Image: The Bell+Howell Chelsea Cordless LED Table Lamp highlighting its lightweight design and the included USB-C charging cable for portability and convenience.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Light Color Selection

The lamp features a touch-activated control located on the top surface.

1. To turn the lamp **on**, gently tap the top surface once. The lamp will illuminate in its last used setting or a default warm light.
2. To cycle through the three light color modes (Warm, White, Natural Daylight), tap the top surface repeatedly.
3. To turn the lamp **off**, continue tapping until the light extinguishes, or tap and hold for a few seconds.

Tap to Turn On



Image: A hand demonstrating the touch activation feature by tapping the top of the Bell+Howell Chelsea Cordless LED Table Lamp to turn it on.

3 Different Light Settings



Image: Three Bell+Howell Chelsea Cordless LED Table Lamps, each displaying one of the three available light settings: White, Warm, and Natural Daylight.

4.2 Adjusting Brightness (Dimming)

The lamp features a stepless dimming function, allowing you to adjust the brightness within each light color mode.

1. With the lamp on, press and hold your finger on the top touch surface.
2. The brightness will gradually increase or decrease. Release your finger when the desired brightness level is reached.
3. To reverse the dimming direction, release and press and hold again.

Brighten & Dim

Adjust the brightness by tapping and holding down until it reaches your desired mode.

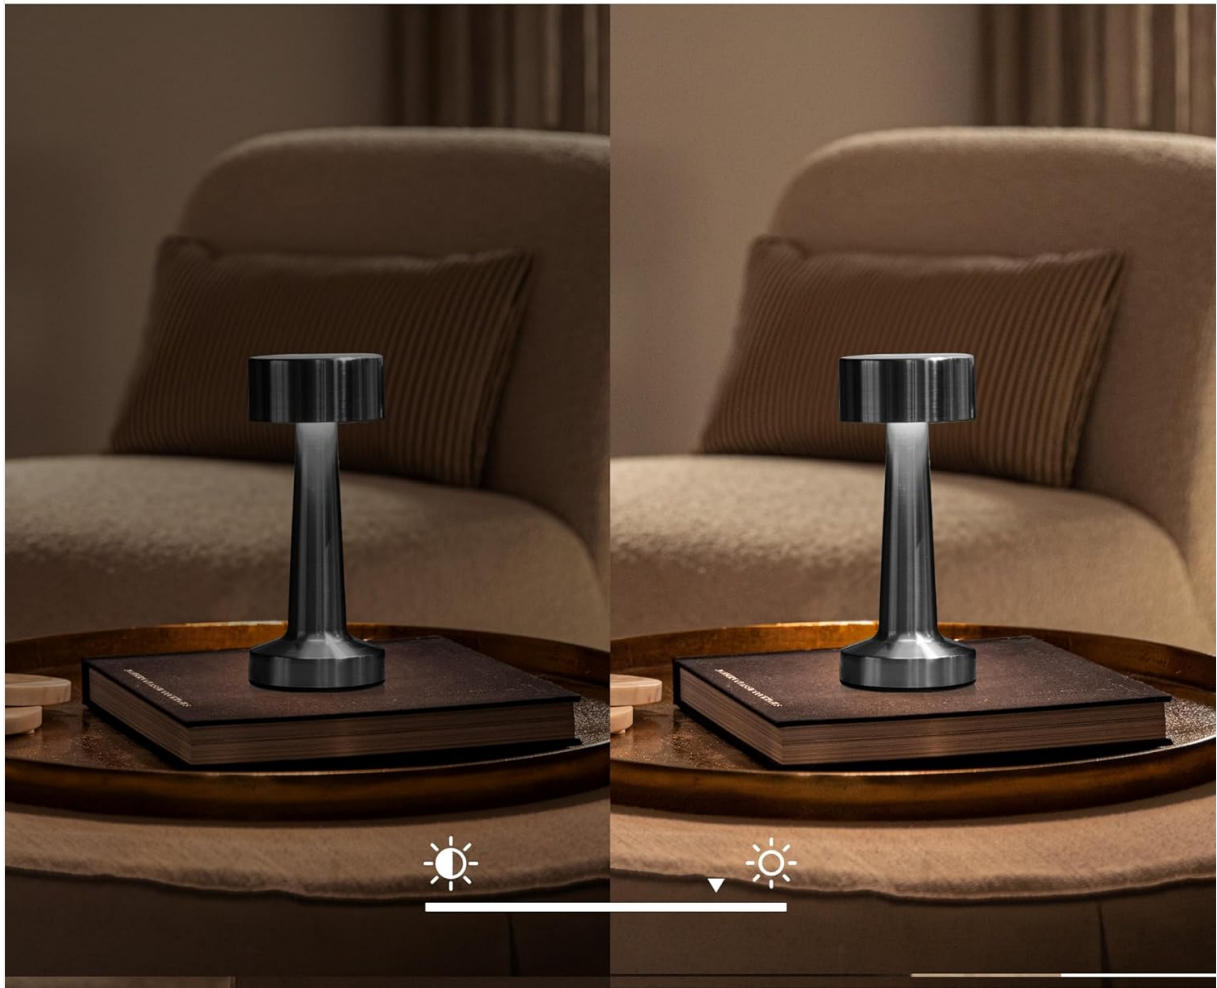


Image: Two Bell+Howell Chelsea Cordless LED Table Lamps demonstrating the dimmable feature, with one lamp set to a lower brightness and the other to a brighter setting.

4.3 Placement and Portability

The lightweight and cordless design allows for flexible placement. The lamp is intended for indoor use.

- Place the lamp on any flat, stable surface.
- Its portability makes it suitable for bedrooms, desks, kitchen counters, dining tables, or living room accent lighting.



Image: A collage illustrating the versatility of the Bell+Howell Chelsea Cordless LED Table Lamp, shown in various indoor and outdoor settings such as a bedroom, bar, dining table, restaurant, living room, and patio.

4.4 Official Product Video: Bell+Howell By Design Cordless Lamp

Video: An official product video from Bell+Howell demonstrating the features and usage of the Bell+Howell By Design Cordless Lamp, including its touch controls and various light settings.

5. MAINTENANCE

5.1 Cleaning

To maintain the appearance and functionality of your lamp:

- Ensure the lamp is turned off and disconnected from any charging source before cleaning.
- Wipe the lamp's exterior with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.
- Avoid getting moisture into the charging port or light components.

5.2 Storage

When not in use for extended periods, store the lamp in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (around 50%) before storage to prolong

battery life.

6. TROUBLESHOOTING

If you encounter issues with your Bell+Howell Chelsea Cordless LED Table Lamp, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted.	Charge the lamp using the provided USB-C cable and a compatible power source. Ensure the charging indicator light activates.
Light is dim or flickers.	Low battery or lamp is in a dim setting.	Fully charge the lamp. If already charged, tap and hold the top surface to increase brightness.
Cannot change light color.	Incorrect tapping action.	Ensure you are tapping the top surface briefly to cycle through modes, not pressing and holding (which activates dimming).
Lamp does not respond to touch.	Internal malfunction or severe battery depletion.	Ensure the lamp is fully charged. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Bell+Howell
Model Name	Chelsea
Item Model Number	6437
UPC	080313064371
Product Dimensions	3.54"D x 3.54"W x 8.2"H
Item Weight	1.96 pounds (for 2 lamps)
Material	Iron (Base), Plastic (Shade)
Finish Type	Silver
Light Source Type	LED
Number of Light Sources	6
Light Color Modes	Warm White, Cool White (Daylight)
Special Features	Color Changing, Cordless, Dimmable, Lightweight, Touch Activated
Power Source	Battery Powered
Switch Type	Touch Activated

Feature	Detail
Indoor/Outdoor Usage	Indoor

8. WARRANTY INFORMATION

Specific warranty details for the Bell+Howell Chelsea Cordless LED Table Lamp are not provided in the product data. For information regarding warranty coverage, duration, and claims, please refer to the product packaging, the official Bell+Howell website, or contact Bell+Howell customer support directly. Keep your proof of purchase for any warranty claims.

9. SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please contact Bell+Howell customer service. Contact information can typically be found on the product packaging or the manufacturer's official website.

Please retain this manual for future reference.