

[manuals.plus](#) /› [DEATTI](#) /› [DEATTI Digital Camera User Manual](#)**DEATTI CV01**

DEATTI Digital Camera User Manual

Model: CV01

Brand: DEATTI

INTRODUCTION

Thank you for choosing the DEATTI Digital Camera. This 4K 64MP camera with dual screens is designed for ease of use, making it ideal for teens, boys, girls, and beginners. It features 18X digital zoom, anti-shake technology, and a portable, rechargeable design, perfect for capturing high-quality photos and videos on the go. This manual provides detailed instructions to help you get the most out of your new camera.



Image: The DEATTI Digital Camera, showcasing its dual screen design and compact form factor.

WHAT'S IN THE BOX

Upon unboxing your DEATTI Digital Camera, please ensure all the following items are present:

- DEATTI 4K Digital Camera (Model: CV01)
- Rechargeable Batteries (2 included)
- 64GB SD Card
- Type-C USB Cable
- Camera Bag
- Lanyard
- User Manual

The Perfect Gift for Beginners

Includes Everything They Need to Start Their Photography Adventure!



Packlist



4K Digital Camera



Rechargeable Battery



64GB SD Card



Type C Cable



Camera Bag Lanyard



Manual

Image: A visual representation of all items included in the DEATTI Digital Camera package.

PRODUCT FEATURES

Dual Screens & Anti-Shake Design

The camera features a 1.4-inch front HD display for perfect selfies and a 2.8-inch rear display for clear image viewing. Press the "OK" button for 3 seconds to switch to selfie mode. The built-in anti-shake function helps capture smooth and stable photos and videos.

Your Perfect Selfie Awaits!

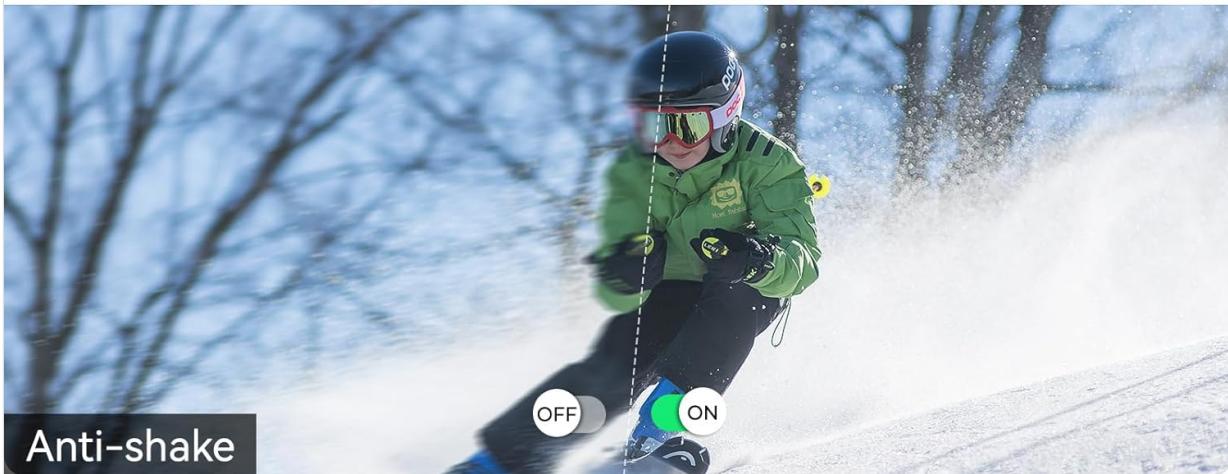
Press "OK" Button 3s and Transfer to Selfie Mode.



Image: The camera's front screen in use for taking a selfie.

Unleash Your Creativity – Stability, Focus, and Clarity in Every Shot!

Experience the power of advanced features and capture perfect memories effortlessly!



18X Digital Zoom



Image: Visual representation of the anti-shake function and digital zoom levels.

4K Ultra HD & 64MP Digital Camera

Capture stunning 4K videos and highly detailed 64MP photos. With 18X digital zoom, full-light function, and autofocus, this camera is designed for clear and crisp imagery, suitable for beginners.

4K Videos & 64MP Images

Providing clearer videos and pictures than ever before



Image: Demonstrates the clarity of 4K video and 64MP photos.

Lightweight & Compact Design

This travel-friendly camera is designed to fit easily into your pocket or bag, ensuring you're always ready to capture moments. It comes with two batteries to extend your shooting time.

Compact Design for Every Adventure!

Take your memories anywhere with DEATTI portable digital camera!



Image: The camera's compact design for easy portability.

Webcam for Live Streaming

The camera can function as a webcam for live streaming, video calls, or online tutorials on platforms like TikTok, YouTube, and Facebook. Easily transfer photos and videos to your computer or smartphone for sharing.

Webcam & Vlogging Camera



Image: The camera's versatility as a webcam and vlogging tool.

Additional Features

Explore various functions including self-timer mode (press and hold "OK"), auto shutdown, image rotation, automatic picture taking, continuous shooting, zoom in/out, and a range of special effects. A built-in fill light ensures quality pictures even in low lighting conditions.



Image: Examples of different shooting modes available on the camera.

Built-in Fill Light

Take quality pictures even under low lighting conditions



Image: Demonstration of the built-in fill light feature.

SETUP GUIDE

Installing Batteries and SD Card

- Open the Battery Cover:** Locate the battery compartment on the bottom of the camera and slide the cover open.
- Insert Battery:** Insert one of the provided rechargeable batteries into the compartment, ensuring the correct orientation as indicated inside the compartment.
- Insert SD Card:** Insert the 64GB SD card into the designated slot next to the battery, pushing gently until it clicks into place.
- Close Battery Cover:** Close the battery compartment cover securely.
- To Remove Battery:** Push the battery lock lever to release the battery.



Image: Illustrated steps for battery and SD card installation.

OPERATING INSTRUCTIONS

Basic Operation

- Power On/Off:** Press and hold the Power Button (located on top) to turn the camera on or off.
- Taking Photos:** Frame your shot using the rear display. Lightly press the Photo Button to focus, then press fully to capture the image.
- Recording Videos:** Switch to video mode using the Mode Button (M). Press the Photo Button to start/stop recording.
- Selfie Mode:** Long press the "OK" button for 3 seconds to switch to the front screen for selfies.
- Zoom In/Out:** Use the Zoom In/Out buttons (T/W) to adjust the 18X digital zoom.
- Navigation:** Use the directional pad (Up/Flash, Right/Timed Photo, Down/Delete, Left/Continuous Shooting) and OK button to navigate menus and select options.

Advanced Settings

- Menu Access:** Press the Menu/Return button to access camera settings.
- Image Rotation:** Find this option in the settings menu to rotate captured images.
- Continuous Shooting:** Select this mode for capturing a series of photos rapidly.
- Self-Timer:** Set a delay (e.g., 2s, 5s, 10s) before the photo is taken.
- Fill Light:** Activate the built-in fill light for improved illumination in low-light conditions.



Image: Detailed diagram of camera controls and dimensions.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens and screens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- Battery Care:** Fully charge batteries before first use. Do not expose batteries to high temperatures or dispose of them in fire.
- SD Card Care:** Format the SD card periodically to maintain optimal performance. Back up important data regularly.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not turn on.	Battery is low or not inserted correctly. Ensure batteries are charged and properly seated.
Images are blurry.	Insufficient light, camera shake, or subject too close/far. Use fill light, enable anti-shake, ensure proper focus.
SD card error.	SD card not inserted correctly, full, or corrupted. Reinsert, delete files, or format the card (backup data first).
Cannot transfer files to computer.	USB cable connection issue or driver problem. Ensure cable is secure. Try a different USB port or computer.

SPECIFICATIONS

Feature	Detail
Brand	DEATTI
Model Name	CV01
Effective Still Resolution	64 MP
Video Resolution	4K (2160p)
Digital Zoom	18x
Image Stabilization	Optical
Front Screen Size	1.4 inches
Rear Screen Size	2.8 inches
Photo Sensor Technology	CMOS
Supported File Format	JPEG (Images), MP4 (Video)
Memory Storage Capacity	64 GB (Micro SD included), supports up to 128 GB

Feature	Detail
Battery Type	Lithium Ion (2 included)
Connectivity Technology	USB
Special Feature	Webcam Functionality
Color	Black
Enclosure Material	Plastic

WARRANTY AND SUPPORT

 
The DEATTI Digital Camera comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

 
 
For technical support, troubleshooting assistance, or warranty inquiries, please visit the official DEATTI Store or contact customer service through the platform where you purchased the product.

You can visit the DEATTI Store online at: [DEATTI Store](#)

© 2025 DEATTI. All rights reserved.

Related Documents - CV01

 <p>Official Email: support@deatti.com</p>	<p>DEATTI Smart Battery Camera User Manual Comprehensive user manual for the DEATTI Smart Battery Camera, covering setup, Wi-Fi connection, features, charging, and troubleshooting.</p>
 <p>ATORCH CV01 User Manual</p>	<p>ATORCH CV01 User Manual - Dive Flashlight Specifications and Instructions Official user manual for the ATORCH CV01 dive flashlight, detailing features, specifications, instructions for use, and warranty information. Includes technical data on output, beam, battery, and durability.</p>
 <p>Official Email: support@deatti.com</p>	<p>Manuel d'utilisation de la caméra de chasse DEATTI DET-T4 Découvrez comment installer, configurer et utiliser votre caméra de chasse DEATTI DET-T4. Ce manuel couvre l'installation des piles et de la carte SD, la connexion WiFi via l'application Trailcam Go, les modes de fonctionnement, les réglages photo/vidéo et le dépannage.</p>

 <p>User Manual Model No.: DET-T4 Official Email: support@deatti.com</p>	<p>DEATTI DET-T4 User Manual: Setup, Features, and Operation Guide</p> <p>This user manual provides comprehensive instructions for the DEATTI DET-T4 trail camera, covering device overview, battery and SD card installation, WiFi connection via the TrailCam Go app, operating modes, detailed settings for photo and video, and playback functions.</p>
 <p>Smart Battery Camera USER MANUAL Official Email: support@deatti.com</p>	<p>DEATTI Smart Battery Camera User Manual</p> <p>User manual for the DEATTI Smart Battery Camera, covering product overview, installation, Wi-Fi connection, charging, function overview, motion detection settings, camera sharing, and FAQs.</p>
 <p>4G LTE Cellular Trail Camera User Manual Model: F11 Before using the product, please read the Quick Guide carefully and keep it well. Official Email: support@deatti.com This manual is valid for www.deatti.com</p>	<p>DEATTI F11 4G LTE Cellular Trail Camera User Manual</p> <p>Comprehensive user manual for the DEATTI F11 4G LTE Cellular Trail Camera, covering setup, app connection, installation, features, and troubleshooting.</p>