

Juskys 301031

Juskys 9L Dual-Chamber Air Fryer Instruction Manual

MODEL: 301031

1. Important Safety Information

Please read all instructions carefully before using the Juskys 9L Dual-Chamber Air Fryer. Retain this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a grounded outlet. Do not immerse the main unit, cord, or plug in water or other liquids.
- **Hot Surfaces:** The air fryer's exterior and interior surfaces become very hot during operation. Use oven mitts when handling hot components.
- **Children:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.
- **Ventilation:** Ensure adequate air circulation around the appliance during use. Do not block air vents.
- **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other heat-sensitive materials.
- **Maintenance:** Always unplug the appliance before cleaning or performing maintenance.

2. Product Overview

The Juskys 9L Dual-Chamber Air Fryer is designed for healthy cooking with hot air. It features two independent cooking chambers for versatile meal preparation.



Image: The Jusky's 9L Dual-Chamber Air Fryer, showcasing its sleek black design and the two distinct cooking chambers with handles.

Components:

- Main Unit with Control Panel
- 2 x 4.5 Liter Frying Baskets (Non-stick coated)
- 2 x Insert Grids
- Power Cord

Control Panel Features:

- **Digital Display:** Shows time, temperature, and program settings.
- **Temperature Control:** Adjusts cooking temperature (30-200°C).
- **Time Control:** Sets cooking duration.
- **Program Buttons:** Selects one of 9 preset cooking programs.
- **Smart Finish Function:** Synchronizes cooking times for both chambers to finish simultaneously.
- **Start/Pause Button:** Initiates or temporarily stops cooking.

3. Setup and First Use

Unpacking:

1. Remove all packaging materials from the air fryer and its accessories.
2. Check for any damage. Do not use if damaged.

Before First Use:

1. Wash the frying baskets and insert grids with warm, soapy water. Rinse thoroughly and dry completely. These parts are also dishwasher safe.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. Place the air fryer on a stable, level, heat-resistant surface. Ensure there is at least 10 cm of clear space around the back and sides of the appliance.
4. Plug the power cord into a grounded electrical outlet.
5. It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight odor or smoke may occur during this initial use; this is normal.

4. Operating Instructions

Basic Operation:

1. Place the insert grid into the frying basket.
2. Place food into the frying basket. Do not overfill.
3. Slide the basket back into the air fryer until it clicks into place.
4. Press the power button to turn on the appliance.
5. Select the desired chamber (Left or Right) if using only one.
6. Adjust the temperature using the temperature control buttons (30-200°C).
7. Set the cooking time using the time control buttons.
8. Press the Start/Pause button to begin cooking.
9. The air fryer will beep when cooking is complete. Carefully pull out the basket and remove food.

Using Preset Programs:

The air fryer features 9 preset programs for common dishes:

- Reheating/Defrosting
- Dehydration
- Fries
- Poultry
- Seafood
- Bacon
- Roasting
- Baking
- Vegetables

To use a preset program:

1. After placing food in the basket(s), select the desired chamber(s).
2. Press the 'Program' button repeatedly until the desired program icon is displayed.

3. The air fryer will automatically set a default temperature and time for that program. You can adjust these settings manually if needed.
4. Press Start/Pause to begin.

Smart Finish Function (Dual-Chamber Cooking):

The Smart Finish function allows you to cook two different foods in separate chambers, ensuring they both finish cooking at the same time, even if they require different temperatures and durations.

1. Prepare food for both chambers and insert the baskets.
2. Select the Left chamber and set its desired temperature and time (or choose a preset program).
3. Select the Right chamber and set its desired temperature and time (or choose a preset program).
4. Press the 'Smart Finish' button. The air fryer will calculate and adjust the start times for each chamber so they conclude simultaneously.
5. Press Start/Pause to begin the synchronized cooking process.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Always unplug the air fryer** and allow it to cool completely before cleaning.
2. **Frying Baskets and Insert Grids:** These components are dishwasher safe. Alternatively, wash them with warm, soapy water using a non-abrasive sponge. The non-stick coating makes cleaning easy.
3. **Main Unit Exterior:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
4. **Interior Chamber:** If necessary, wipe the interior of the air fryer with a damp cloth. Ensure no food particles remain.
5. **Heating Element:** Gently clean any food residue from the heating element using a soft brush after the unit has cooled.
6. Ensure all parts are completely dry before storing or using the appliance again.

6. Troubleshooting

If you encounter issues with your Juskys Air Fryer, refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
- **Food is not cooked:** Increase the cooking time or temperature. Ensure the basket is not overfilled, allowing hot air to circulate.
- **White smoke coming from the appliance:** This can be caused by fatty food residue from previous use. Clean the baskets and the interior thoroughly. Ensure the heating element is free of debris.
- **Food is not crispy:** Ensure food is not overcrowded in the basket. For some foods, a light coating of oil can improve crispiness.
- **Appliance smells during first use:** This is normal and will dissipate after a few uses. Run the air fryer empty for 10-15 minutes as described in the 'Setup and First Use' section.

If the problem persists after trying these solutions, please contact customer support.

7. Specifications

Feature	Specification
Model Number	301031
Brand	Juskys
Capacity	9 Liters (2 x 4.5 L Chambers)
Power	1800 - 2000 Watts
Voltage	230 Volts (AC)
Temperature Range	30 - 200 °C
Control Method	Push Button
Number of Programs	9 Preset Programs
Special Features	Dual Chambers, Smart Finish Function, Non-stick Baskets
Product Dimensions (L x W x H)	41 x 39 x 30 cm
Item Weight	8.05 kg
Material	Plastic (ABS, PP, PC, Nylon), Steel Sheet, Teflon
Color	Black
Dishwasher Safe Parts	Frying Baskets, Insert Grids

8. Warranty and Support

For warranty information, please refer to the documentation provided at the time of purchase. Warranty terms and conditions may vary by region and retailer.

For technical support, spare parts, or any questions regarding the operation of your Juskys Air Fryer, please contact Juskys customer service through their official website or the contact information provided with your product.