

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Porodo](#) /

› [Porodo Gaming PS4 Gamepad Controller PDX628-WH User Manual](#)

Porodo PDX628

Porodo Gaming PS4 Gamepad Controller PDX628-WH User Manual

Model: PDX628-WH



INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Porodo Gaming PS4 Wireless Controller, model PDX628-WH. This controller is designed for multi-platform compatibility, including PlayStation 4, PlayStation 3, Mac, Windows, Steam Deck, iOS, and Android devices. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

PACKAGE CONTENTS

- Porodo Gaming PS4 Wireless Controller (PDX628-WH)
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the controller's layout and functions.

Front View



Image: Front view of the Porodo Gaming PS4 Wireless Controller PDX628-WH. This image displays the white controller with illuminated light patterns on the handles and around the joysticks. Key buttons visible include the D-pad, left and right analog sticks, action buttons (Triangle, Circle, Cross, Square), Home button, and Turbo button.

1. **Left Analog Stick:** For movement and camera control.
2. **D-Pad:** Directional input.
3. **Home Button:** Powers on/off the controller and accesses system menus.
4. **Turbo Button:** Activates turbo function for assigned buttons.
5. **Right Analog Stick:** For movement and camera control.
6. **Action Buttons (Triangle, Circle, Cross, Square):** Primary in-game actions.
7. **Share Button:** Shares gameplay content.
8. **Options Button:** Accesses in-game menus.
9. **Touchpad:** Interactive input surface.
10. **LED Light Bar:** Indicates player number, charging status, and customizable light patterns.

Rear View



Image: Rear view of the Porodo Gaming PS4 Wireless Controller PDX628-WH. This image shows the back of the white controller, highlighting the small reset button located in a recessed hole and the screw points.

1. **L1/L2 Buttons:** Left shoulder and trigger buttons.
2. **R1/R2 Buttons:** Right shoulder and trigger buttons.
3. **Reset Button:** Small recessed button for factory reset (requires a thin tool).

SETUP INSTRUCTIONS

1. Charging the Controller

1. Connect the supplied USB charging cable to the controller's charging port.
2. Connect the other end of the USB cable to a USB power source (e.g., PS4 console, PC, or USB wall adapter).
3. The LED light bar will indicate charging status. A full charge takes approximately 2.5 hours.
4. Once fully charged, the LED light bar will change its indication or turn off, depending on the current mode.

2. Pairing with a Device (First Time Use)

The controller uses Bluetooth 5.3 for wireless connection.

1. For PS4/PS3:

- Connect the controller to the console using the USB cable.
- Press the **Home** button. The controller will pair automatically.
- Once paired, you can disconnect the USB cable for wireless play.

2. For PC/Mac/Steam Deck:

- Ensure your device's Bluetooth is enabled.
- On the controller, press and hold the **Share** button and the **Home** button simultaneously until the LED light bar starts flashing rapidly, indicating pairing mode.

- On your device, search for new Bluetooth devices and select "Porodo Gaming Controller" (or similar name) from the list.
- Once connected, the LED light bar will stop flashing and remain solid.

3. For iOS/Android:

- Enable Bluetooth on your mobile device.
- On the controller, press and hold the **Share** button and the **Home** button simultaneously until the LED light bar starts flashing rapidly.
- On your mobile device, search for new Bluetooth devices and select "Porodo Gaming Controller" (or similar name) from the list.
- Confirm pairing if prompted. The LED light bar will indicate a successful connection.

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press the **Home** button.
- **To Power Off:** Press and hold the **Home** button for approximately 10 seconds until the controller powers down. The controller will also power off automatically after a period of inactivity.

RGB Lighting Patterns

The controller features customizable LED light patterns. Specific instructions for changing patterns may vary or be controlled by the connected device's settings or a dedicated button combination not explicitly detailed in the product description. Generally, a dedicated button or a combination with the "Share" or "Options" button might cycle through patterns. Refer to the product's official website or packaging for precise instructions if not found here.

Using the 3.5mm Stereo Port

The controller includes a 3.5mm TRRS stereo port for audio. This allows you to connect a headset (headphones with a microphone) for in-game audio and voice communication.

1. Plug your compatible 3.5mm headset into the port located at the bottom of the controller.
2. Audio output and microphone input will be routed through the controller to your connected device.
3. Adjust audio settings (volume, microphone sensitivity) through your console or device's system settings.

Turbo Function

The Turbo button allows for rapid, repeated input of a specific button. To activate:

1. Press and hold the **Turbo** button.
2. While holding **Turbo**, press the action button (e.g., X, Square, Circle, Triangle, L1, R1, L2, R2) you wish to apply the turbo function to.
3. Release both buttons. The selected action button will now repeatedly register input when held down.
4. To deactivate, repeat the process: hold **Turbo** and press the same action button again.

SPECIFICATIONS

Feature	Detail
Model	PDX628-WH

Feature	Detail
Connectivity	Bluetooth 5.3
Working Distance	Up to 10 meters
Battery Capacity	1000mAh Lithium Ion
Playtime (RGB On)	Up to 8 hours
Playtime (RGB Off)	Up to 20 hours
Charging Time	Approximately 2.5 hours
Input Voltage	USB 5.2V-1000mA
Operating Voltage	3.7V-50mA
Dimensions	15 x 10 x 4 cm
Weight	300 g
Sensors	3D Acceleration, Gyroscope
Audio Port	3.5mm TRRS Stereo Port
Compatibility	PS4, PS3, Mac, Windows, Steam Deck, iOS, Android

TROUBLESHOOTING

- Controller not turning on:**

Ensure the controller is fully charged. Connect it to a power source using the USB cable and allow it to charge for at least 30 minutes before attempting to power on again.

- Controller not connecting via Bluetooth:**

Make sure the controller is in pairing mode (LED light bar flashing rapidly). Check that Bluetooth is enabled on your device and that the controller is within the 10-meter range. Try removing previous pairings from your device's Bluetooth settings and re-pairing. For PS4/PS3, try connecting with the USB cable first.

- Input lag or disconnection:**

Ensure there are no strong electromagnetic interferences nearby. Move closer to the connected device. If the issue persists, try resetting the controller using the small reset button on the back (requires a thin pin).

- Audio issues with 3.5mm port:**

Ensure your headset is fully plugged in and compatible with TRRS jacks. Check audio settings on your connected device (console/PC/mobile) to ensure the controller's audio output is selected and volume levels are appropriate.

- Buttons not responding:**

Try resetting the controller. If specific buttons are unresponsive, ensure no debris is lodged around them. If the issue persists after a reset, contact customer support.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid

using harsh chemicals or abrasive materials.

- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in use for extended periods.
- **Avoid Drops:** Protect the controller from physical shocks and drops, which can damage internal components.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Porodo website. Keep your proof of purchase for any warranty claims.

© 2024 Porodo. All rights reserved.