

WINFLIKE MAG420 MAG420w1

WINFLIKE MAG420 MAG420w1 Remote Control User Manual

For Infomir MAG 522, Mag 520, Mag 420, Mag 322, Mag 254 Set Top Box TV Box

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your WINFLIKE MAG420 MAG420w1 Remote Control. Please read this guide thoroughly before using the remote control to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The WINFLIKE MAG420 MAG420w1 is an infrared remote control designed as a replacement for various Infomir MAG Set Top Box models. It offers full access to all necessary functions without requiring any programming.





Figure 2.1: Front view of the WINFLIKE MAG420 MAG420w1 Remote Control. This image displays the front face of the WINFLIKE MAG420 MAG420w1 Remote Control, showcasing its full button layout, including power, number pad, navigation, volume, channel, and media control buttons, along with colored function keys.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.





Figure 3.1: Back view of the remote control with battery compartment open. This image shows the rear side of the remote control with the battery compartment cover removed, revealing the slots for two AAA batteries. The positive and negative terminals are clearly marked for correct battery insertion.

The remote control is now ready for use. No additional programming is required.

4. OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. Ensure a clear line of sight between the remote control and your Infomir MAG Set Top Box for proper function.

4.1 Basic Functions

- **Power Button (Ø):** Turns the Set Top Box on or off.
- **Number Pad (0-9):** Used for direct channel input or numerical selections.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Channel Up/Down (CHAN +/-):** Changes the television channel.
- **Mute Button (Ø):** Mutes or unmutes the audio.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **Colored Function Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions within the Set Top Box's interface, as indicated on-screen.

4.2 Compatible Models

This remote control is compatible with the following Infomir MAG Set Top Box models:

- MAG 522
- MAG 520
- MAG 420
- MAG 322
- MAG 254

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the remote's surface or internal components.

5.2 Battery Replacement

If the remote control's performance degrades or it stops responding, replace the batteries with new AAA alkaline batteries. Refer to Section 3.1 for battery installation instructions.

6. TROUBLESHOOTING

6.1 Remote Control Not Responding

- Check Batteries:** Ensure the batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA alkaline batteries if necessary.
- Line of Sight:** Verify there is a clear, unobstructed line of sight between the remote control's infrared emitter and the Set Top Box's IR receiver. Obstacles can block the signal.
- Distance:** Ensure you are within the effective operating range of the remote control.
- Interference:** Strong light sources, such as direct sunlight or certain types of fluorescent lighting, can interfere with infrared signals. Try operating the remote in a different environment.

7. SPECIFICATIONS

| Feature | Specification |
|--------------------|---|
| Product Dimensions | 6 x 2 x 0.5 inches (15.24 x 5.08 x 1.27 cm) |
| Item Weight | 0.7 ounces (19.8 grams) |
| Model Number | MAG420 MAG420w1 |
| Batteries Required | 2 AAA batteries (not included) |
| Special Features | Ergonomic, Lightweight, No Programming Required |
| Compatible Devices | Infomir MAG Set Top Box (MAG 522, 520, 420, 322, 254) |



21 cm / 8.27 in



Figure 7.1: Dimensions of the WINFLIKE MAG420 MAG420w1 Remote Control. This image illustrates the physical dimensions of the remote control, showing its length as 21 cm (8.27 inches) and width as 5 cm (1.97 inches), providing a clear understanding of its size.

8. WARRANTY INFORMATION

For specific warranty details regarding your WINFLIKE MAG420 MAG420w1 Remote Control, please refer to the documentation provided at the time of purchase or contact the retailer. General warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

9. SUPPORT

If you encounter issues not covered in this manual or require further assistance, please contact the WINFLIKE customer support through their official website or the retailer from whom the product was purchased. Provide your product model number (MAG420 MAG420w1) and a detailed description of the issue for efficient support.

© 2024 WINFLIKE. All rights reserved.