

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cecotec](#) /
- › [Cecotec Proclean 5010 Inverter White Microwave Instruction Manual](#)

Cecotec Proclean 5010

Cecotec Proclean 5010 Inverter Microwave User Manual

Model: Proclean 5010 (Part Number: A01_EU01_100005)

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Cecotec Proclean 5010 Inverter Microwave. Please read this manual thoroughly before using the appliance and retain it for future reference.

The Cecotec Proclean 5010 Inverter Microwave features inverter technology for even and fast cooking, a 19-liter capacity, and 700W power with 5 adjustable levels. It includes 8 pre-configured programs, a 30-minute timer, an LED display, and a child lock for safety.

SETUP

Unpacking and Placement

Carefully remove the microwave oven and all packaging materials. Inspect the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged. Place the microwave on a stable, level countertop surface that can support its weight (approximately 6.1 kg). Ensure adequate ventilation space around the unit: at least 20 cm above, 10 cm at the rear, and 5 cm on each side.



Image: The Cecotec Proclean 5010 Inverter Microwave positioned on a kitchen counter, ready for use.

Turntable Installation

1. Place the roller ring in the center of the oven cavity floor.
2. Place the glass turntable on top of the roller ring, ensuring it sits securely in the center hub.

Ensure the turntable rotates freely. The turntable is essential for even cooking and must always be in place when operating the microwave.

Power Connection

Plug the microwave oven into a grounded electrical outlet. The appliance operates on 230 Volts and consumes 700 Watts of power. Do not use extension cords or adapters.

Initial Cleaning

Before first use, wipe the interior and exterior of the microwave with a soft, damp cloth to remove any dust or manufacturing residues.

OPERATING INSTRUCTIONS

Control Panel Overview

The microwave features an intuitive control panel with an LED display, buttons for various functions, and a rotary knob for time and power adjustments.



Image: Detailed view of the microwave's control panel, highlighting the digital display and buttons.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable. Close the door securely.
2. Use the rotary knob to set the desired cooking time (up to 30 minutes).
3. Press the appropriate power level button (the microwave has 5 power levels, with a maximum of 700W).
4. Press the Start button to begin cooking. The LED display will show the remaining time.



Image: A user adjusting the cooking time using the rotary knob.



Image: Food being heated inside the microwave cavity.

Using Pre-configured Programs

The microwave offers 8 pre-configured programs for common dishes. To use them:

1. Press the 'Program' button (or similar, refer to specific button icons on your unit) to cycle through the available programs. The LED display will show the program number (e.g., 'A-01', 'A-08').
2. Once the desired program is selected, press the Start button. The microwave will automatically set the cooking time and power level.



Image: A user selecting a pre-configured program on the control panel.

Defrosting

The inverter technology ensures even and quick defrosting. To defrost food:

1. Place the frozen food in the microwave.
2. Press the 'Defrost' button (often indicated by a snowflake icon).
3. Use the rotary knob to select the defrost time or weight, if applicable.
4. Press Start.

Two-Phase Cooking

This feature allows you to set two different cooking stages with varying times and power levels, useful for thawing followed by cooking. Consult the specific instructions on your control panel for setting up two-phase cooking.

Child Lock

To prevent accidental use, especially by children, activate the child lock. Refer to your microwave's specific instructions for activating and deactivating this feature, typically involving pressing and holding a specific button for a few seconds.

MAINTENANCE

Cleaning the Microwave Oven

Regular cleaning helps maintain the performance and longevity of your microwave. Always unplug the appliance before cleaning.

- **Interior:** Wipe the interior cavity, including the stainless steel inner material, with a soft cloth dampened with mild soap and water. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue, then wipe clean.
- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Door and Seal:** Keep the door and door seal clean to ensure proper closure. Wipe with a soft cloth.
- **Turntable:** The glass turntable and roller ring can be washed in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.

General Care

Do not operate the microwave when empty, as this can damage the appliance. Avoid placing heavy objects on top of the microwave.

TROUBLESHOOTING

If you encounter issues with your microwave, consult the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not securely plugged in. Door not closed properly. Fuse blown or circuit breaker tripped.	Ensure power cord is firmly plugged into outlet. Close door completely. Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set. Microwave-safe dish not used.	Adjust cooking time and power level. Use only microwave-safe cookware.
Turntable not rotating	Turntable or roller ring not correctly positioned. Debris under turntable.	Ensure turntable and roller ring are properly seated. Clean any debris from under the turntable.
Unusual noise during operation	Food container touching oven walls. Turntable not centered.	Ensure container is not touching oven walls. Reposition turntable.

If the problem persists after attempting these solutions, please contact Cecotec customer support.

SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Name	Proclean 5010
Part Number	A01_EU01_100005

Feature	Detail
Capacity	19 Litres (listed as 20 litres in some specifications)
Installation Type	Countertop
Wattage	700 Watts
Voltage	230 Volts
Inner Material Type	Stainless Steel
Defrost System	Manual Defrost
Special Features	Inverter Technology, Lightweight, Programmable, Child Lock
Product Dimensions (LxWxH)	34D x 43W x 24H Centimeters
Item Weight	6 kg 100 g
Included Components	Microwave, Instruction Manual

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Cecotec website. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Cecotec