

[manuals.plus](#) /

› [G Keni](#) /

› [G Keni CD Cassette Player Radio with AM/FM, Portable Stereo Speaker, USB/SD/MP3/AUX, Model 9225 Instruction Manual](#)

## **G Keni 9225**

# **G Keni CD Cassette Player Radio Model 9225 Instruction Manual**

Model: 9225 | Brand: G Keni

## **INTRODUCTION**

This manual provides detailed instructions for the safe and efficient operation of your G Keni CD Cassette Player Radio, Model 9225. Please read this manual thoroughly before using the product and retain it for future reference.



Image: Front view of the G Keni CD Cassette Player Radio, Model 9225, showing the CD compartment, cassette deck, control buttons, and extendable antenna.

## PRODUCT OVERVIEW

### Key Features

- Multi-function playback: Supports CD, CD-R, CD-RW, cassette tapes, USB, SD/MMC/TF cards, and AUX input.
- AM/FM Stereo Radio: Features a high-sensitivity tuner with an extendable antenna and a backlit LCD display for clear frequency indication.
- High-Quality Stereo Speakers: Integrated dual speakers provide clear audio output.
- Headphone Jack: A 3.5mm headphone jack allows for private listening.
- Dual Power Options: Operates via AC power cord or 8 D-size batteries (not included) for portable use.
- Compact Design: Lightweight and portable.

- Recording Function: Record FM radio broadcasts directly to a blank cassette tape.



Image: Overview of the G Keni portable speaker's multi-functional capabilities, including AM/FM radio, LCD display, AUX, headphone jack, AC/battery power, USB/SD/MMC, top-loading CD, and cassette.

## Dimensions

# 多機能ポータブルCDプレーヤー

屋内・屋外使用可能




Image: The G Keni CD Cassette Player Radio displayed with its approximate dimensions: 29cm length, 22cm width, and 16.5cm height.

## Components and Controls

Familiarize yourself with the various parts and controls of your device.


# ■ ラジオを聴く

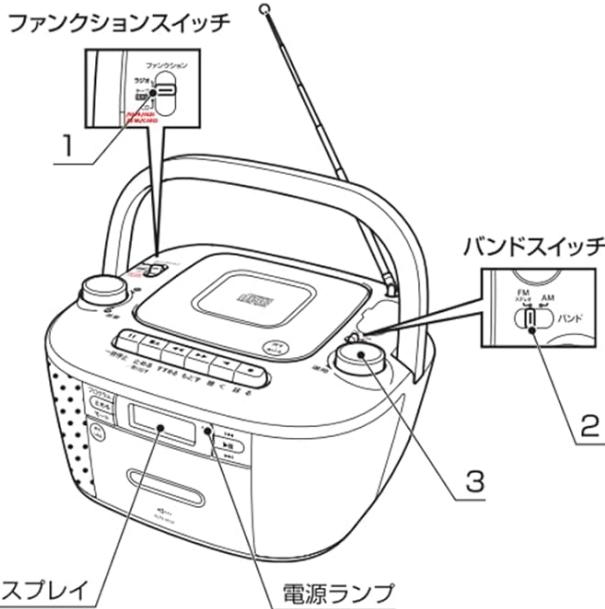1. ファンクションスイッチを[ラジオ]にする。
  - 電源ランプが点灯します。



2. バンドスイッチで[FMステレオ]または[AM]を選ぶ。

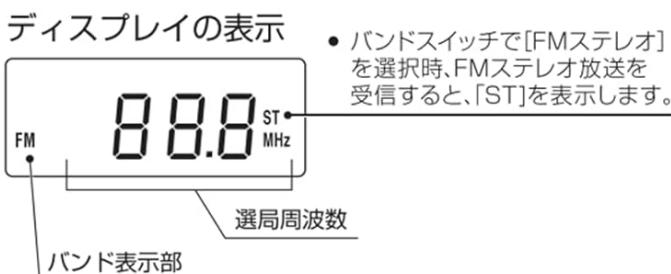3. 選局ダイヤルでお好みの局を選ぶ。



雑音が多い場合	アンテナの向きを変えたり、本機の位置を窓際に移動することで、雑音が少なくなる場合があります。	ラジオを切るとき	ファンクションスイッチを[テープ 電源切]にする。
---------	--	----------	---------------------------

Image: Diagram illustrating the main controls and components of the G Keni CD Cassette Player Radio, including the function switch, band switch, display, and power lamp.

- Function Switch:** Selects between CD, Radio, Tape, USB/SD, and AUX modes.
- Volume Knob:** Adjusts the audio output level.
- Tuning Knob:** Used to tune into radio stations.
- LCD Display:** Shows current mode, radio frequency, and track information.
- CD Compartment:** Top-loading tray for CDs.
- Cassette Deck:** Front-loading slot for cassette tapes.
- Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind, Skip Track (for CD/USB/SD).
- AM/FM Band Switch:** Selects between AM and FM radio bands.
- Extendable Antenna:** For improved FM radio reception.
- USB Port:** For USB flash drives.
- SD/MMC/TF Card Slot:** For memory cards.
- AUX Input:** 3.5mm jack for external audio devices.
- Headphone Jack:** 3.5mm jack for private listening.

## SETUP

### Power Supply

The unit can be powered by either AC power or batteries.

## 2つの電力供給方式

単二電池1.5V×8本



AC電源コード（付属）



Image: Illustration showing the two power supply methods: AC power cord connection and battery compartment with 8 D-size batteries.

#### AC Power Operation:

1. Ensure the unit is turned off.
2. Connect the supplied AC power cord to the AC IN jack on the back of the unit.
3. Plug the other end of the power cord into a standard AC wall outlet (AC 100V, 50/60Hz).

#### Battery Operation:

1. Ensure the unit is turned off and disconnected from AC power.

2. Open the battery compartment cover located on the bottom of the unit.
3. Insert 8 D-size (UM-1) batteries (not included) according to the polarity markings (+/-) inside the compartment.
4. Close the battery compartment cover securely.

**Note:** Remove batteries if the unit will not be used for an extended period to prevent leakage and damage.

## OPERATING INSTRUCTIONS

### Radio Operation (AM/FM)



Image: A person enjoying the G Keni CD Cassette Player Radio, highlighting its FM/AM stereo radio capabilities with a backlit display.

1. Set the **Function Switch** to [RADIO]. The power lamp will illuminate.
2. Use the **AM/FM Band Switch** to select either [FM STEREO] or [AM].
3. Extend the telescopic antenna for FM reception. For AM reception, rotate the unit for best signal.
4. Turn the **Tuning Knob** to select your desired radio station. The frequency will be displayed on the LCD.

5. Adjust the **Volume Knob** to your preferred listening level.

**Tip:** If reception is poor, adjust the position of the antenna or the unit itself to minimize static.

## CD Playback



Image: Close-up view of the top-loading CD player compartment on the G Keni CD Cassette Player Radio, showing a CD being placed inside.

1. Set the **Function Switch** to [CD].
2. Open the CD compartment cover.
3. Place a CD (CD, CD-R, CD-RW) onto the spindle with the label side facing up.
4. Close the CD compartment cover.
5. Press the **Play/Pause** button to start playback.
6. Use the **Skip Forward/Backward** buttons to navigate between tracks.
7. Press the **Stop** button to end playback.

## Cassette Tape Playback and Recording

# マルチファンクション・テープ・ドライブ

## 音楽の世界を楽しもう



Image: A hand inserting a cassette tape into the front-loading cassette deck of the G Keni CD Cassette Player Radio.

### Playback:

1. Set the **Function Switch** to [TAPE].
2. Open the cassette deck door.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette deck door.
5. Press the **Play** button to start playback.
6. Use the **Fast Forward** and **Rewind** buttons to quickly navigate the tape.
7. Press the **Stop/Eject** button to stop playback and eject the tape.

### Recording from FM Radio to Cassette:

1. Insert a blank cassette tape into the cassette deck.
2. Set the **Function Switch** to [RADIO] and tune to your desired FM station.
3. Press the **Record** button (usually red) on the cassette deck. The Play button will also engage.

- To stop recording, press the **Stop/Eject** button.

## USB/SD/AUX Playback



Image: Detailed view of the AUX input, headphone jack, USB port, and SD/MMC card slot on the G Keni CD Cassette Player Radio.

### USB/SD/MMC/TF Playback:

- Set the **Function Switch** to [USB/SD].
- Insert a USB flash drive into the USB port or an SD/MMC/TF card into the card slot.
- The unit will automatically detect and begin playing compatible audio files (e.g., MP3).
- Use the playback controls (Play/Pause, Skip Forward/Backward) to manage your music.

### AUX Input:

- Set the **Function Switch** to [AUX].
- Connect an external audio device (e.g., smartphone, MP3 player) to the 3.5mm AUX IN jack using an audio cable (not included).
- Start playback on your external device. The audio will be routed through the G Keni unit's speakers.
- Adjust the volume using the unit's **Volume Knob** and/or the external device's volume control.

### Headphone Use

For private listening, connect 3.5mm headphones (not included) to the headphone jack. The speakers will automatically mute when headphones are connected.

## MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- CD Lens Care:** If CD playback issues occur, use a commercially available CD lens cleaner.
- Cassette Head Cleaning:** Regularly clean the cassette heads with a cotton swab lightly dampened with isopropyl alcohol to ensure optimal sound quality.
- Storage:** When not in use for extended periods, store the unit in a cool, dry place, away from direct sunlight and extreme temperatures. Remove batteries if storing for a long time.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not securely connected. Batteries are depleted or incorrectly inserted.	Check AC power cord connection. Replace batteries or ensure correct polarity.
No sound	Volume is too low. Headphones are connected. Incorrect function mode selected.	Increase volume. Disconnect headphones. Select the correct function mode (CD, Radio, Tape, AUX, USB/SD).
Poor radio reception	Antenna not extended or positioned correctly. Interference from other electronic devices.	Extend and adjust the telescopic antenna (FM). Rotate the unit for better AM reception. Move the unit away from other electronics.
CD skipping or not playing	CD is dirty or scratched. CD is inserted incorrectly. Unit is on an unstable surface.	Clean or replace the CD. Ensure CD is placed correctly, label side up. Place the unit on a stable, flat surface.
Cassette tape issues	Tape is tangled or damaged. Cassette heads are dirty.	Inspect tape for damage; try another tape. Clean cassette heads as described in Maintenance.

## SPECIFICATIONS

---

# 仕様

## ●CD部

チャンネル数	2チャンネル(ステレオ)
再生可能ディスク	CD、CD-R、CD-RW、USB、SD、MP3
再生可能フォーマット	CD-DA

## ●ラジオ部

受信周波数	FM 76 ~ 108MHz AM 522 ~ 1629kHz
アンテナ	FM ロッドアンテナ AM フェライトバーアンテナ内蔵

## ●カセット部

方式	カセット方式
----	--------

## ●共通部

実用最大出力	1.5W+1.5W(JEITA)	電池持続時間 (JEITA規格)	ラジオ受信時 約60時間 CD再生時 約20時間 テープ再生時 約40時間
スピーカー	7.6cm(4Ω)×2	消費電力	15W
入出力端子	ヘッドホン端子 (φ3.5mmステレオミニプラグ) AUX端子 (φ3.5mmステレオミニプラグ)	最大外形寸法	約241(幅)×222(奥行)×141(高さ)mm
電源 (2電源方式)	AC100V 50/60Hz (付属電源コード使用時) 電池 DC12V (単2形アルカリ乾電池8本(別売))	質量	約2.1kg(乾電池含まず)
		付属品	電源コード(長さ:1.4m) 取扱説明書(本書)

※本機の仕様及び外観については、改良のため予告なく変更することがあります。

Image: A table detailing the technical specifications of the G Keni CD Cassette Player Radio, including CD, radio, cassette, and general features.

Feature	Detail
Model Number	9225
CD Section	Channels: 2 (Stereo) Playable Discs: CD, CD-R, CD-RW Playable Formats: CD-DA
Radio Section	FM Frequency Range: 76 - 108 MHz AM Frequency Range: 530 - 1710 KHz Antenna: FM Rod Antenna, AM Built-in Ferrite Bar Antenna
Cassette Section	Cassette Type

Feature	Detail
<b>Audio Output</b>	Practical Maximum Output: 1.5W + 1.5W (JEITA) Speakers: 7.6cm (4Ω) x 2
<b>Input Terminals</b>	Headphone Jack: 3.5mm stereo mini plug AUX Jack: 3.5mm stereo mini plug USB Port SD/MMC/TF Card Slot
<b>Power Supply</b>	AC: 100V, 50/60Hz (using included power cord) DC: 12V (8 D-size alkaline batteries, sold separately)
<b>Power Consumption</b>	15W
<b>Battery Life (Approx.)</b>	Radio Reception: 60 hours CD Playback: 20 hours Tape Playback: 40 hours
<b>Dimensions (W x D x H)</b>	Approx. 241 x 222 x 141 mm
<b>Weight</b>	Approx. 2.1 kg (excluding dry cell batteries)
<b>Included Accessories</b>	CD Radio Cassette Unit, Instruction Manual, AC Power Adapter

**Note:** Specifications are subject to change without notice for product improvement.

## WARRANTY AND SUPPORT

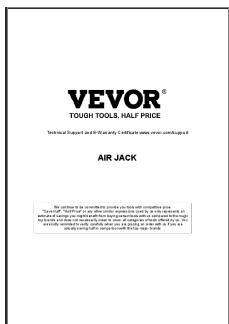
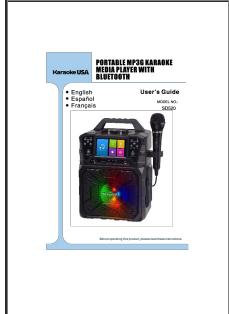
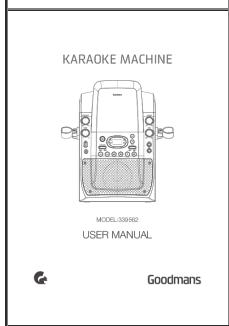
For warranty information and customer support, please refer to the warranty card included with your product or contact the retailer where you purchased the unit. Keep your proof of purchase for warranty claims.

Manufacturer: K&K INTERNATIONAL CO.,LIMITED

© 2024 G Keni. All rights reserved.

## Related Documents - 9225

 <p><b>KENI</b> WIRELESS CHARGER CD/MP3/USB BOOMBOX BLUETOOTH SPEAKER DUAL ALARM CLOCK RADIO LC-10W</p> <p>User Manual</p>	<p><a href="#">Keni LC-10W Wireless Charger, CD/MP3/USB Boombox, Bluetooth Speaker, Dual Alarm Clock Radio User Manual</a></p> <p>This user manual provides comprehensive instructions for the Keni LC-10W, a versatile audio device featuring a wireless charger, CD/MP3/USB boombox, Bluetooth speaker, and dual alarm clock radio. It covers setup, operation, troubleshooting, and safety precautions.</p>
---	--

	<p><a href="#"><u>VEVOR Air Jack - Technical Specifications and User Manual</u></a></p> <p>Comprehensive guide to VEVOR Air Jacks, covering technical data, safety precautions, packing lists, installation steps, and usage instructions for various models including ZG-G, ZG-H, ZG-E, ZG-B, ZG-C, and ZG-A.</p>
	<p><a href="#"><u>Karaoke USA SD520 Portable MP3+G Karaoke Media Player with Bluetooth User's Guide</u></a></p> <p>Comprehensive user's guide for the Karaoke USA SD520 portable MP3+G karaoke media player with Bluetooth. Learn about features, setup, operation, recording, connectivity, specifications, and troubleshooting.</p>
	<p><a href="#"><u>Singing Machine SML385UBK/SML385UW Instruction Manual</u></a></p> <p>User manual for the Singing Machine SML385UBK and SML385UW karaoke player, detailing setup, operation for CD+G, USB, and Bluetooth, safety precautions, and control locations.</p>
	<p><a href="#"><u>Renishaw TONIC T101x RSLM/RELM High Accuracy Linear Encoder System Installation Guide</u></a></p> <p>Comprehensive installation guide for the Renishaw TONIC T101x RSLM/RELM high accuracy linear encoder system. Covers product compliance, mounting, calibration, electrical connections, and specifications.</p>
	<p><a href="#"><u>Goodmans 339562 Karaoke Machine User Manual</u></a></p> <p>Comprehensive user manual for the Goodmans 339562 Karaoke Machine, covering setup, operation, troubleshooting, and technical specifications. Learn how to connect, play music, and use features like Bluetooth and microphone inputs.</p>

Documents - G Keni – 9225

no relevant documents