

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Proscenic](#) /

› [Proscenic P13 Cordless Vacuum Cleaner Instruction Manual](#)

Proscenic P13

Proscenic P13 Cordless Vacuum Cleaner Instruction Manual

Model: P13

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the appliance. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible materials, hot ashes, or large, sharp objects.
- Ensure the power adapter is compatible with your local power supply.
- Do not immerse the motor unit in water or other liquids.
- Regularly check the filters and brush roll for blockages or damage.

2. PACKAGE CONTENTS

Verify that all items are present in the package:



This image displays all components included in the Proscenic P13 package, such as the main body, floor brush, telescopic tube, HEPA filters, user manual, crevice tool, 2-in-1 dust brush, power adapter, and battery.

1. Main Body

2. Floor Brush
3. Telescopic Tube
4. HEPA Air Outlet Filter
5. User Manual
6. Crevice Tool
7. 2-in-1 Dust Brush
8. Wall Mount Bracket
9. Power Adapter
10. Battery
11. HEPA Air Inlet Filter (x2)

3. ASSEMBLY

Follow these steps to assemble your Proscenic P13 vacuum cleaner:

1. **Attach the Telescopic Tube:** Insert the telescopic tube into the main body until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the floor brush to the other end of the telescopic tube, ensuring it locks firmly.
3. **Install Filters:** Ensure both HEPA air inlet and outlet filters are correctly installed in their respective compartments.
4. **Insert Battery:** Slide the battery pack into the main body until it clicks.



The image displays the versatility of the P13, showing it configured as a full-size stick vacuum and as a compact handheld unit with various cleaning tools.

4. CHARGING THE BATTERY

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

- Connect the power adapter to the charging port on the main body or directly to the battery.
- The LED display will indicate charging status. A full charge typically takes 4-5 hours.
- For convenient storage and charging, use the included wall mount bracket.



The vacuum cleaner can be conveniently stored and charged on its wall-mounted bracket, with an additional battery charging separately.

Nuova Batteria ad Alte Prestazioni

L'aspirapolvere P13 è dotato di batterie aggiornate da 2.500 mAh che possono funzionare fino a 45 minuti con una sola carica!



La batteria è conforme agli standard europei, britannici, americani e giapponesi.

45min (± 3 min) Modalità Eco	30min (± 3 min) Modalità Standard	15min (± 1 min) Modalità Massima
--	---	--

This graphic illustrates the 2500 mAh high-performance battery, showing approximate runtimes: 45 minutes in Eco mode, 30 minutes in Standard mode, and 15 minutes in Max mode.



This image shows the simple process of detaching and reattaching the battery pack for flexible charging options.

5. OPERATION

5.1 Power On/Off and Suction Modes

- Press the power button to turn the vacuum cleaner on or off.
- Use the mode switch on the LED touch screen to cycle through Eco, Standard, and Max suction modes.

5.2 LED Smart Touch Screen

The LED screen provides real-time information:

- **Suction Power:** Displays the current suction mode.
- **Remaining Runtime:** Shows the estimated battery life in minutes.
- **Dustbin Full Alert:** Indicates when the dustbin needs emptying.
- **Brush Tangle Alert:** Warns if the brush roll is obstructed.

The smart LED touch screen provides real-time information including current suction mode, remaining battery runtime, alerts for a full dustbin, and warnings if the brush is tangled.

5.3 Using Attachments and Features

- **Floor Brush with Green LED Lights:** The green LED lights on the floor brush illuminate dust and debris on the floor, making it easier to spot and clean.
- **Flexible Floor Brush:** The brush head rotates 180° horizontally and 90° vertically for easy maneuverability around furniture and into tight spaces.
- **Crevice Tool:** Ideal for cleaning narrow gaps, corners, and edges.
- **2-in-1 Dust Brush:** Use for cleaning delicate surfaces, upholstery, and keyboards.



The green LED lights on the floor brush effectively reveal hidden dust and debris on the floor, ensuring thorough cleaning.



The floor brush offers flexible maneuverability with 180° horizontal and 90° vertical rotation, allowing easy cleaning around obstacles and under furniture.



The vacuum's design allows it to easily reach and clean under low-lying furniture.

Aspirapolvere a Bastone

Rimuove la polvere da pavimenti e tappeti.

Pulizia
Versatile
a 2 VIE

Aspirapolvere Portatile

Rimuove la polvere da varie superfici e spazi difficili da raggiungere.

Diverse Spazzole Incluse

Strumento per Fessure



Spazzola per la Polvere 2-in-1




This image highlights the dual functionality of the P13, demonstrating its use as a stick vacuum for general floor cleaning and as a handheld unit for detailed cleaning with the crevice tool and 2-in-1 dust brush.

6. MAINTENANCE

6.1 Emptying the Dustbin

- When the dustbin full alert appears on the LED screen, or when the dust level reaches the MAX line, empty the dustbin.
- Press the dustbin release button to detach it from the main body.
- Open the bottom cover of the dustbin and empty its contents into a trash can.
- Reattach the dustbin securely.

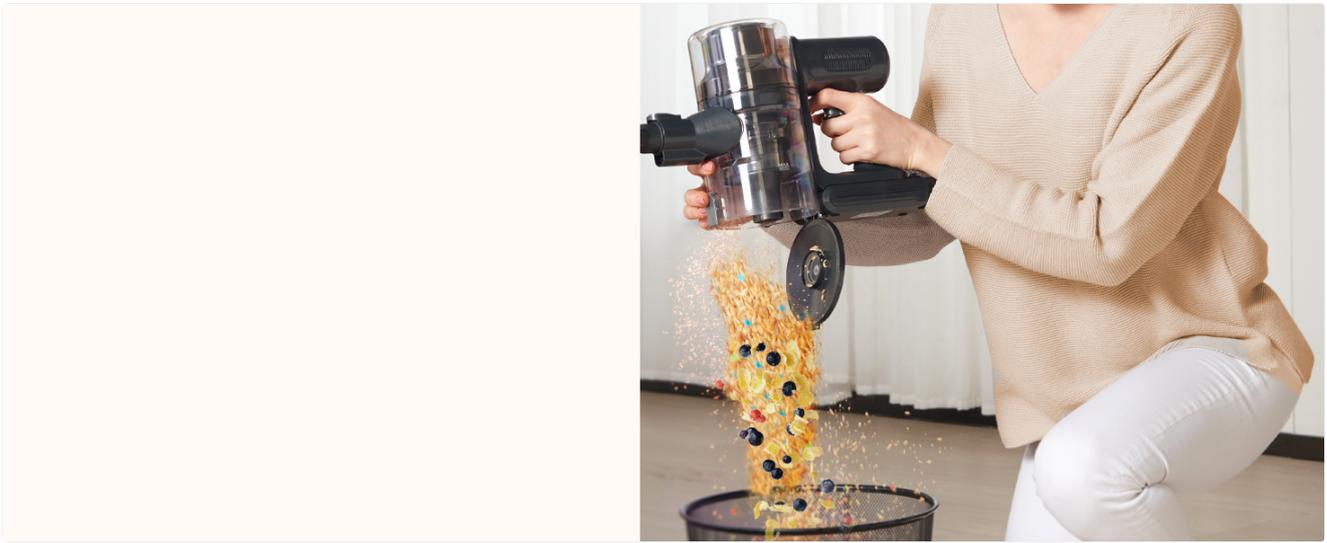

The 1.2L dustbin can be easily emptied with a single press, minimizing contact with dust.

6.2 Cleaning the Filter System

The P13 features a 5-layer filtration system. Regular cleaning is essential for optimal performance.

- **HEPA Filters:** Both the air inlet and air outlet HEPA filters are washable. Remove them from their compartments and rinse under running water. Ensure they are completely dry before reinstallation (allow 24-48 hours).
- **Stainless Steel Mesh and Cone Filter:** These components inside the dustbin should also be cleaned regularly. Remove them and tap out any accumulated dust. They can also be rinsed with water if heavily soiled, ensuring complete dryness before reassembly.



The advanced 5-layer filtration system, featuring HEPA filters, cone filtration, and stainless steel mesh, captures over 99% of dust and allergens, releasing cleaner air.



The washable HEPA filter can be easily cleaned under running water to maintain optimal performance.

6.3 Cleaning the Brush Roll

The anti-tangle brush roll minimizes hair wrapping, but occasional cleaning may be required.

- Turn off the vacuum and detach the floor brush.
- Locate the release tab on the side of the brush head and remove the brush roll.
- Remove any tangled hair or debris using scissors or a cleaning tool.
- Reinsert the brush roll and secure the release tab.



The V-shaped anti-tangle brush roll is designed to lift and detangle long hair and pet fur, preventing blockages and ensuring continuous cleaning.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Charge the battery fully. Ensure the battery is clicked into place.
Low suction power	Dustbin is full, filters are clogged, or brush roll is tangled.	Empty the dustbin. Clean all filters. Clear any obstructions from the brush roll.
Brush roll not rotating	Hair or debris tangled in the brush, or brush motor issue.	Clean the brush roll thoroughly. If the problem persists, contact customer support.
Short battery runtime	Battery not fully charged, or operating in Max mode continuously.	Ensure battery is fully charged. Use Eco or Standard mode for longer runtime.

8. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	Proscenic
Model	P13
Wattage	550 watts
Suction Power	Up to 45 kPa
Dustbin Capacity	1.2 Liters
Battery Capacity	2500 mAh
Max Runtime	45 minutes (Eco mode)
Charging Time	4-5 hours
Noise Level	65 Decibels
Filter Type	5-layer HEPA Filtration
Product Dimensions	35 x 23 x 12 cm
Item Weight	1.9 Kilograms



The vacuum operates at a low noise level of 65 dB, ensuring a quiet cleaning experience.

9. WARRANTY AND SUPPORT

Proscenic provides a 2-year warranty for the P13 Cordless Vacuum Cleaner and lifetime technical support.

- For any issues during use, please contact Proscenic customer service.
- Email: service-it@proscenic.com