

uwant VC2401

uwant 8-in-1 Cordless Vacuum Cleaner Instruction Manual

Model: VC2401

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not charge the unit outdoors.
- Use only the charger supplied by the manufacturer.

PRODUCT OVERVIEW

Package Contents

The uwant 8-in-1 Cordless Vacuum Cleaner comes with a comprehensive set of accessories to ensure versatile cleaning for various surfaces and situations. Please check the box to ensure all items are present.

- Main Motor Unit
- Floor Brush with Anti-Tangle Roller
- Telescopic Tube
- 2-in-1 Brush
- Crevice Brush
- Battery Pack
- Wall Mount Bracket
- Charger
- Dust Cup
- HEPA Filter
- Stainless Steel Filter



Image: The uwant 8-in-1 Cordless Vacuum Cleaner with its main components and included accessories.

Component Identification

Familiarize yourself with the main parts of your uwant vacuum cleaner:

1. **Main Motor Unit:** Contains the motor, dustbin, and control panel.
2. **Dustbin:** Transparent container for collecting dust and debris.
3. **Filters (HEPA & Stainless Steel):** Located inside the dustbin for advanced filtration.
4. **Battery Pack:** Detachable lithium-ion battery for cordless operation.

5. **Telescopic Tube:** Adjustable extension for floor cleaning and reaching high areas.
6. **Floor Brush:** Main cleaning head with a V-shaped anti-tangle roller brush and green LED light.
7. **2-in-1 Brush:** Combines a soft brush and a wide nozzle for various surfaces.
8. **Crevice Brush:** Narrow tool for cleaning tight spaces and corners.

SETUP

Assembly

Follow these steps to assemble your uwant cordless vacuum cleaner:

1. **Attach the Telescopic Tube:** Align the telescopic tube with the main motor unit and push until it clicks into place.
2. **Attach the Floor Brush:** Connect the floor brush to the other end of the telescopic tube, ensuring it clicks securely.
3. **Insert the Battery:** Slide the battery pack into the designated slot on the main motor unit until it locks.
4. **Attach Accessories (Optional):** For handheld use, attach the 2-in-1 brush or crevice brush directly to the main motor unit.

Charging the Battery

Before first use, fully charge the battery. The battery fully charges in approximately 4 hours.

- Connect the charger to the charging port on the main motor unit or directly to the battery pack.
- Plug the charger into a wall outlet. The indicator lights on the vacuum will show charging status.
- For convenient storage and charging, use the included wall mount bracket. Install the bracket in a suitable location near a power outlet.



Image: The uwant vacuum cleaner charging on its wall-mounted bracket, offering a space-saving solution.

OPERATING INSTRUCTIONS

Power and Suction Modes

The uwant vacuum cleaner offers powerful suction up to 35Kpa, suitable for various cleaning tasks. It features dual power modes for optimal performance.

- **To Power On/Off:** Press the power button on the main motor unit.
- **Switch Suction Modes:** Use the control panel to switch between standard mode (for general cleaning, up to 50 minutes runtime) and high mode (for deep cleaning and stubborn debris, up to 22 minutes runtime).

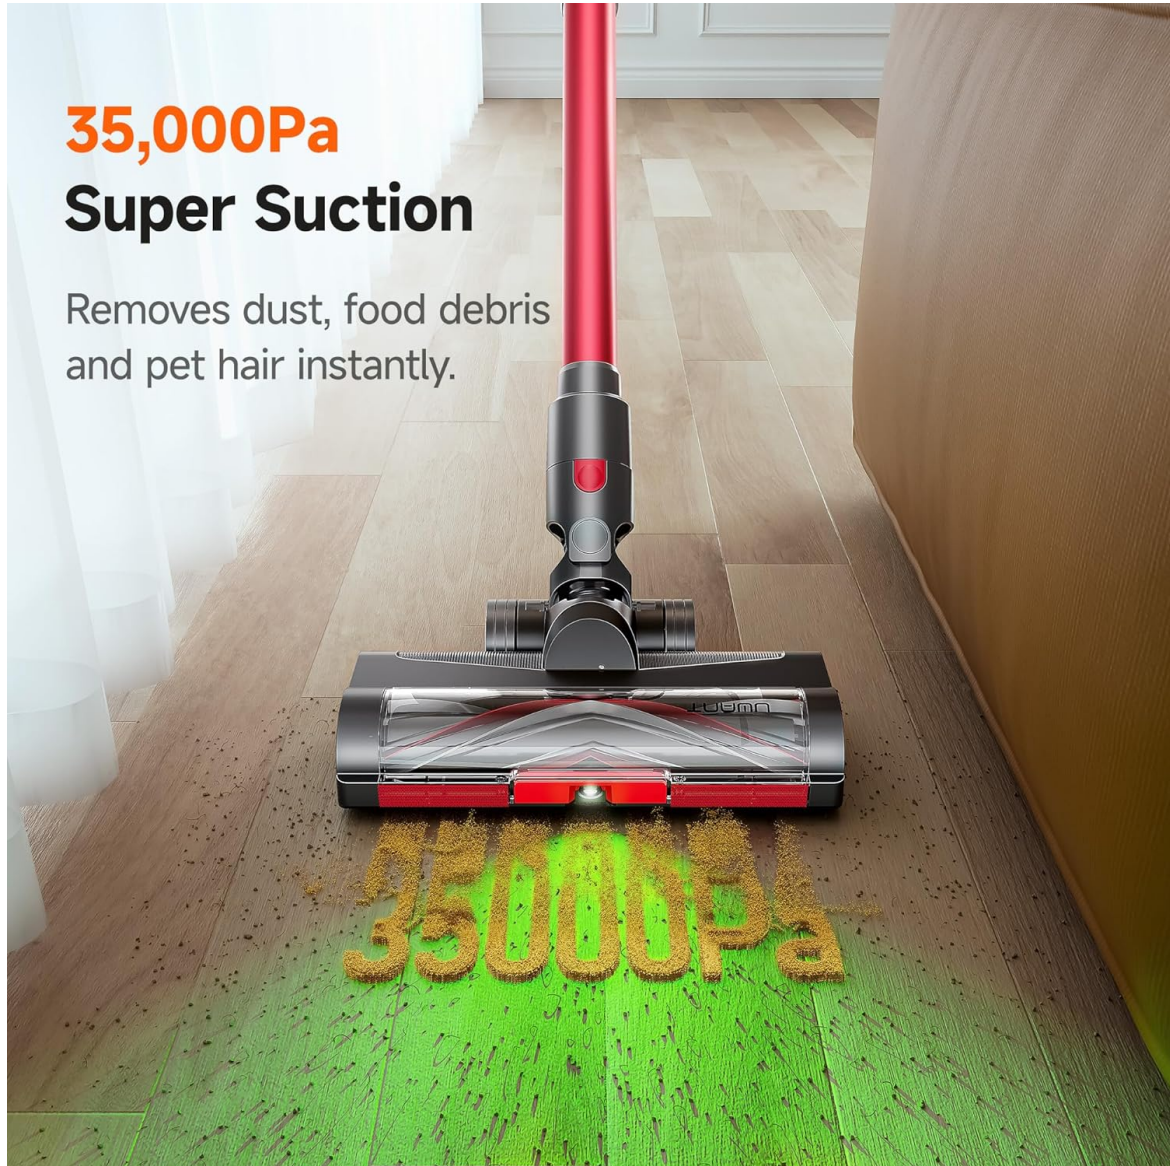


Image: The uwant vacuum cleaner effectively removing dirt and debris from a hard floor, showcasing its 35Kpa powerful suction.

Two Cleaning Modes

Change modes using the touch screen panel to tackle any household surface.



Image: Illustration of the vacuum's two cleaning modes, adapting to different levels of dirt on various surfaces.

Green LED Dust Detection

The integrated wide green LED light on the floor brush illuminates hidden dust and particles, ensuring no spot is missed during cleaning.

- The green light automatically activates when the vacuum is in operation.
- Move the floor brush slowly over the surface to reveal dust and ensure thorough cleaning.

UWANT Cordless Vacuum Cleaner



Image: The 110° wide-angle green light highlights even the finest dust particles on the floor, ensuring a complete clean.

Versatile Cleaning Attachments

The 8-in-1 design allows for seamless conversion into a handheld vacuum with various tools for different cleaning needs.

- **2-in-1 Brush:** Ideal for cleaning upholstery, curtains, and delicate surfaces.
- **Crevice Brush:** Perfect for reaching tight corners, gaps, and car interiors.
- To switch to handheld mode, detach the telescopic tube and attach the desired accessory directly to the main motor unit.



Lightweight, Easy To Handle

Makes hard-to-reach areas like ceilings and window frames easy to clean.

Image: The lightweight design allows for easy handling, making it simple to clean hard-to-reach areas like ceilings and window frames.



Handheld Vacuum

Converts into a convenient handheld vacuum by switching out the included tools.



Image: The vacuum easily converts into a convenient handheld unit, perfect for cleaning furniture, car interiors, and tight spaces using the crevice or combination tool.

Anti-Tangle Roller Brush

The V-shaped anti-tangle roller brush is designed to prevent hair and fibers from wrapping around it, ensuring continuous and efficient cleaning, especially in homes with pets.

- This feature minimizes interruptions for manual hair removal from the brush.
- The unique design guides hair directly into the dustbin.

V-Shaped Anti-Tangle Roller Brush

Prevents tangles and clumps forming on the brush from loose hair and fibres.



Image: A detailed view of the V-shaped anti-tangle roller brush, engineered to prevent hair and fibers from wrapping and causing blockages.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your uwant vacuum cleaner.

Emptying the Dustbin

The 0.6L dustbin is designed for easy, hygienic disposal of collected debris.

- Hold the main motor unit over a trash can.
- Press the dustbin release button to open the bottom flap and empty the contents.
- Close the dustbin flap securely until it clicks.

Cleaning Filters

The 7-layer filtration system, including HEPA and cyclone filters, captures 99.9% of dust and allergens. For best performance, clean the filters regularly.

- Twist and pull to remove the dustbin from the main motor unit.

- Separate the HEPA filter and stainless steel filter from the dustbin.
- Tap off loose dust from the filters.
- Rinse the filters under cold running water until the water runs clear. Do not use detergent.
- Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.

7-Layer Filtration System

Removes 99% of dust and household allergens, making your home cleaner and safer.



Image: An exploded view illustrating the 7-layer filtration system, designed to capture fine dust and allergens for cleaner air.

Cleaning the Roller Brush

While the roller brush is anti-tangle, occasional cleaning may be necessary.

- Turn off the vacuum and detach the floor brush.
- Locate the release mechanism for the roller brush (usually a latch or button on the side of the brush head).
- Remove the roller brush.
- Use scissors to cut away any tangled hair or debris.
- Wipe the brush and its housing with a dry cloth.
- Reinsert the roller brush and secure the release mechanism.

TROUBLESHOOTING

If you encounter issues with your uwant vacuum cleaner, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power	Dustbin is full; Filters are clogged; Roller brush is tangled or blocked.	Empty dustbin; Clean or replace filters; Clear any tangles from the roller brush.
Roller brush not spinning	Hair or debris tangled around the brush; Obstruction in the brush head.	Remove and clean the roller brush; Check for and remove any obstructions.
Battery runtime is short	Battery not fully charged; Using high power mode continuously.	Fully charge the battery; Use standard mode for longer cleaning sessions.
Unusual noise	Obstruction in the air path or brush head; Damaged component.	Check for and remove any blockages; If noise persists, contact customer support.

SPECIFICATIONS

Detailed technical specifications for the uwant VC2401 Cordless Vacuum Cleaner.

Feature	Specification
Brand	uwant
Model Name	VC2401
Special Feature	Cordless
Filter Type	HEPA Filter
Capacity (Dustbin)	0.6 Liters (implied from feature bullets, original is 12000 Milliliters which is too large for dustbin)
Wattage	450 watts
Runtime	Up to 50 minutes (low mode)
Maximum Suction	35 Kpa

Feature	Specification
Form Factor	Stick
Color	Black
Product Dimensions	11.62"L x 10.04"W x 47.66"H
Battery Type	Lithium-Ion (6*2000mAh)
Charging Time	4 hours
Noise Level	62dB
Item Weight	4.85 pounds


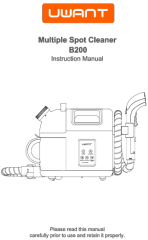 
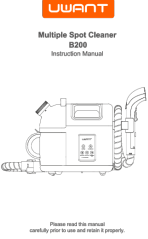 
WARRANTY AND SUPPORT

 


Your uwant 8-in-1 Cordless Vacuum Cleaner is designed for durability and performance. For any questions, concerns, or warranty claims, please contact uwant customer support.

While specific warranty details are not provided in this manual, uwant typically offers a standard manufacturer's warranty covering defects in materials and workmanship. Please refer to your purchase documentation or the official uwant website for the most up-to-date warranty information.

For additional support, visit the official uwant store on Amazon: [uwant Store](#)

Related Documents - VC2401

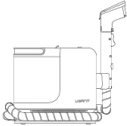	<p>Uwant B100 Portable Carpet Cleaner Troubleshooting Guide</p> <p>Comprehensive troubleshooting guide for the Uwnt B100 Portable Carpet Cleaner, covering common issues like no suction, water leakage, and brush head operation. Find step-by-step solutions and maintenance tips.</p>
	<p>UWANT B200 Multiple Spot Cleaner: Instruction Manual</p> <p>This instruction manual provides comprehensive guidance for the UWANT B200 Multiple Spot Cleaner, covering product features, installation, operation, cleaning, maintenance, and safety precautions for domestic use.</p>
	<p>UWANT B200 Multiple Spot Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for the UWANT B200 Multiple Spot Cleaner, detailing setup, operation, safety precautions, and maintenance for effective household fabric cleaning.</p>

<div><div>UWANT</div><div>B200 SE Multiple Spot Cleaner</div><div></div><div><small>Please read this manual carefully before use and keep it properly for future reference.</small></div></div>	<p>UWANT B200 SE Multiple Spot Cleaner User Manual</p> <p>Comprehensive user manual for the UWANT B200 SE Multiple Spot Cleaner, covering safety precautions, product components, installation, operation, maintenance, storage, troubleshooting, and specifications.</p>
<div><div>UWANT</div><div>D700 Cordless Wet Dry Vacuum Cleaner Instruction Manual</div><div></div><div><small>Please read this Manual carefully before use and keep it properly.</small></div></div>	<p>UWANT D700 Cordless Wet Dry Vacuum Cleaner: User Manual & Instructions</p> <p>This document provides comprehensive instructions for the UWANT D700 Cordless Wet Dry Vacuum Cleaner, covering setup, operation, maintenance, and troubleshooting.</p>
<div><div>UWANT</div><div>V100 Cordless Vacuum Cleaner Instruction Manual</div><div></div><div><small>Please read this manual carefully prior to use and retain it properly.</small></div></div>	<p>UWANT V100 Cordless Vacuum Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for the UWANT V100 Cordless Vacuum Cleaner, covering precautions, product introduction, usage instructions, maintenance, troubleshooting, specifications, and hazardous substance information.</p>