

Manuals.plus /

› Nikon /

› Nikon COOLPIX S2700 Digital Camera User Manual

Nikon S2700

Nikon COOLPIX S2700 Digital Camera User Manual

Model: S2700

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Nikon COOLPIX S2700 Digital Camera. Please read this manual thoroughly before using the camera and keep it accessible for future reference.

Key Features:

- Slim, compact design with a 6x optical zoom lens.
- 16.0 effective megapixels for high-resolution imaging.
- Scene Auto Selector for automatic optimal mode selection.
- Equipped with the EXPEED C2 image-processing engine.
- Capable of recording HD 720p movies.

2. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Nikon COOLPIX S2700 camera.



Figure 2.1: Front View. This image displays the front of the Nikon COOLPIX S2700 camera, highlighting the lens, flash, and Nikon branding. The lens is retracted, showing the NIKKOR 6x WIDE OPTICAL ZOOM inscription.



Figure 2.2: Rear View. This image shows the back of the camera, featuring the LCD screen, directional pad with 'OK' button, 'MENU' button, 'DELETE' button, 'SCENE' button, and video record button.



Figure 2.3: Top View. This image illustrates the top of the camera, showing the ON/OFF button, shutter button, and zoom lever (W/T).



Figure 2.4: Angled Front View (Lens Retracted). An angled perspective of the camera's front, with the lens in its retracted position, emphasizing its compact form factor.



Figure 2.5: Angled Front View (Lens Extended). This image shows the camera from an angled front view with the lens extended, indicating it is ready for use or actively zooming.

3. SETUP

3.1. Battery Installation

1. Open the battery chamber cover located on the bottom of the camera.
2. Insert the supplied Lithium-ion battery, ensuring the correct orientation as indicated by the polarity marks (+/-).
3. Close the battery chamber cover securely.

3.2. Memory Card Insertion

1. Open the memory card slot cover, usually adjacent to the battery chamber.
2. Insert a compatible SD/SDHC/SDXC memory card into the slot until it clicks into place. Ensure the card is facing the correct direction.
3. Close the memory card slot cover securely.

3.3. Initial Settings

Upon first power-on or after the battery has been removed for an extended period, you may be prompted to set the date, time, and time zone. Follow the on-screen instructions using the directional pad and 'OK' button to confirm your selections.

4. BASIC OPERATION

4.1. Powering On/Off

- To turn the camera **ON**, press the **ON/OFF** button located on the top of the camera.
- To turn the camera **OFF**, press the **ON/OFF** button again.

4.2. Taking Photos

1. Turn on the camera.
2. Point the camera at your subject. The camera will automatically adjust settings in Scene Auto Selector mode.
3. Press the shutter button halfway down to focus. The focus indicator will illuminate when focus is achieved.
4. Press the shutter button fully down to take the picture.

4.3. Using the Zoom

Use the zoom lever located around the shutter button:

- Push the lever towards **T** (Telephoto) to zoom in on your subject.
- Push the lever towards **W** (Wide-angle) to zoom out.

4.4. Viewing Photos (Playback Mode)

- Press the **Playback** button (often indicated by a triangle icon) on the back of the camera to enter playback mode.
- Use the directional pad to navigate through your photos.
- Press the **Playback** button again or the shutter button to return to shooting mode.

5. ADVANCED FEATURES

5.1. HD 720p Movie Recording

The COOLPIX S2700 can record high-definition video at 720p resolution.

1. In shooting mode, press the dedicated **Movie Record** button (red dot icon) on the back of the camera to start recording.
2. Press the **Movie Record** button again to stop recording.
3. Recorded videos can be viewed in Playback mode.

5.2. Scene Auto Selector

This feature automatically detects the shooting scene and selects the optimal scene mode for you, ensuring the best possible image quality without manual adjustments. Simply frame your shot, and the camera does the rest.

6. MAINTENANCE

6.1. Cleaning the Camera

- **Camera Body:** Wipe gently with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water or a mild cleaning solution, then wipe dry.
- **Lens:** Use a lens brush to remove dust, then gently wipe with a lens cleaning cloth. Avoid touching the lens surface with your fingers.
- **LCD Monitor:** Use a soft, dry cloth. For smudges, use a specialized LCD screen cleaner.

6.2. Battery Care

- Always use the charger supplied with the camera or a compatible Nikon charger.
- Avoid exposing the battery to extreme temperatures.
- If storing the camera for an extended period, remove the battery.

6.3. Storage

Store the camera in a cool, dry place away from direct sunlight, dust, and moisture. Use a camera bag for protection during transport.

7. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common solutions:

- **Camera does not turn on:** Ensure the battery is fully charged and correctly inserted.
- **Cannot take pictures:** Check if a memory card is inserted and has sufficient free space. Ensure the lens cap is removed (if applicable).
- **Images are blurry:** Ensure the lens is clean. Check if the camera is focusing correctly (press the shutter button halfway).
- **Flash does not fire:** Check flash settings to ensure it is not set to 'Off' or 'Red-eye Reduction' in bright conditions.

For more complex issues, consult the Nikon support website or contact customer service.

8. SPECIFICATIONS

Feature	Specification
Model	Nikon COOLPIX S2700
Effective Megapixels	16.0 MP
Optical Zoom	6x
Video Recording	HD 720p
Product Dimensions (W x H x D)	3.8 x 2.3 x 0.9 inches (approx.)
Item Weight	15.2 ounces
Battery Type	1 Lithium Ion battery (required)
Manufacturer	Nikon

9. WARRANTY AND SUPPORT

This Nikon COOLPIX S2700 camera is a renewed product. Please refer to the seller's specific return and warranty policies at the time of purchase.

Typically, renewed products come with a **90-day refund/replacement return policy**. For detailed information regarding your specific purchase, please consult your order details or contact the seller directly.

For general product information and support, you may visit the official Nikon website.

