



Manuals.plus /

› ALPONO /

› ALPONO Electric Spin Scrubber Instruction Manual

ALPONO A22-0

ALPONO Electric Spin Scrubber Instruction Manual

Model: A22-0

INTRODUCTION

The ALPONO Electric Spin Scrubber is an advanced cleaning tool designed to simplify household cleaning tasks. This cordless, handheld power brush offers versatile application for various surfaces, including bathroom floors, showers, tiles, tubs, and kitchen areas. Its efficient design aims to reduce physical strain and cleaning time, providing a more comfortable and effective cleaning experience.



Image: The ALPONO Electric Spin Scrubber demonstrating its extendable handle and interchangeable brush heads, highlighting its versatility for different cleaning needs.

PRODUCT COMPONENTS

The ALPONO Electric Spin Scrubber package includes the following components:

- Electric Cleaning Brush Host
- Extension Rod
- Type-C Charging Cable
- **Interchangeable Cleaning Heads:**
 - Big Brush (Flat Brush)
 - Small Brush (Small Flat Brush)
 - Gap Brush
 - Sharp Brush
 - Sponge Brush

 
- Imitation Wool Cloth Brush
- Fiber Sponge
- Big Cloth Brush

8 Changeable


Small Flat Brush



Sponge Brush

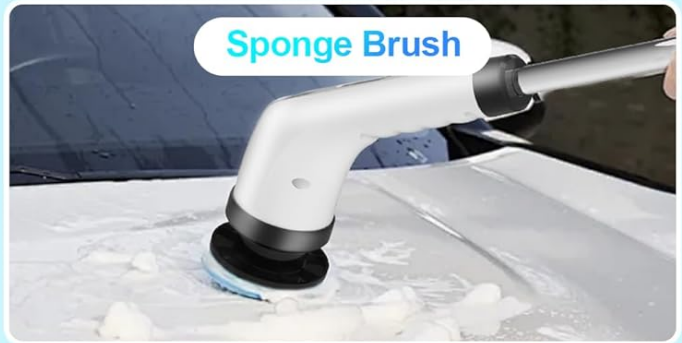

Fiber Brush

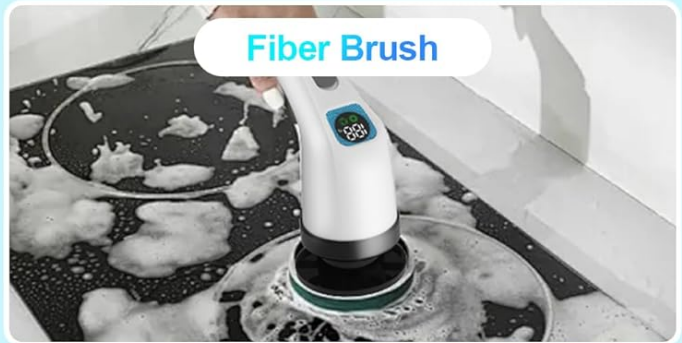 


Towed Cloth



Image: A selection of the eight interchangeable brush heads, including the small flat brush, sponge brush, fiber brush, and towed cloth, designed for diverse cleaning tasks.

 Gap brush

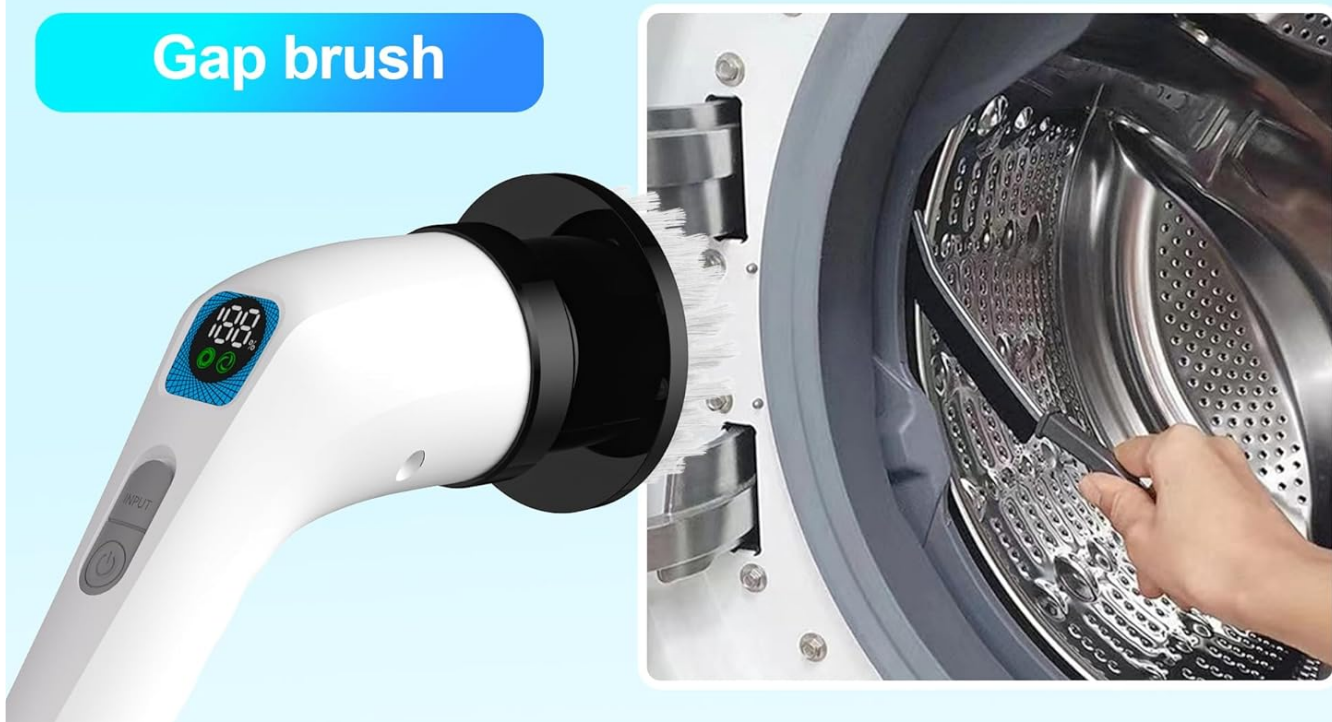

Big Flat Brush



Imitation Wool Brush



Sharp Brush

Image: Further examples of specialized brush heads, such as the gap brush for narrow spaces, big flat brush for large surfaces, imitation wool brush, and sharp brush for corners.

SETUP

- 1. Initial Charging:** Before first use, fully charge the Electric Cleaning Brush Host using the provided Type-C charging cable. The LED screen will indicate the charging status. A full charge ensures optimal performance and battery life.
- 2. Attaching Brush Heads:** Select the appropriate cleaning head for your task. Align the brush head with the rotating base of the host and press firmly until it clicks into place.
- 3. Assembling the Extension Rod:** For extended reach, attach the extension rod between the brush host and the handle. The rod can be adjusted to different lengths (e.g., 43 inches or 55 inches) by twisting and pulling/pushing the sections. For handheld use, simply attach the brush head directly to the host.

3 usage methods



Image: Illustration of the three primary usage methods: handheld mode for close-up cleaning, and two extended handle lengths (43" and 55") for reaching high or low areas without bending.

OPERATING INSTRUCTIONS

- 1. Power On/Off:** Press the power button on the handle to turn the scrubber on. Press again to turn it off.
- 2. Speed Adjustment:** The scrubber operates at a powerful 400 RPM. Some models may feature multiple speed settings; refer to the LED screen for current settings and battery level.
- 3. Cleaning Application:**
 - **Bathroom & Shower:** Use the Big Flat Brush or Sharp Brush for tiles, grout lines, and shower walls. The extension rod is ideal for reaching high areas or shower floors without bending.
 - **Floors:** For large floor areas, attach the extension rod and use the Big Flat Brush or Fiber Sponge.
 - **Kitchen & Windows:** The handheld mode with the Small Flat Brush, Sponge Brush, or Imitation Wool Cloth Brush is suitable for countertops, sinks, stovetops, and window surfaces.
 - **Tight Spaces:** Utilize the Gap Brush for narrow crevices and corners, such as around faucets or washing machine seals.

4. **Water Resistance:** The Electric Spin Scrubber is IPX7 waterproof, meaning it can withstand immersion in water up to 1 meter for 30 minutes. This makes it safe for use in wet environments like showers and sinks.



Image: Visual representation of the IPX7 waterproof rating, indicating the device's resistance to water, along with icons for short circuit and open circuit protection, and charging protection.

MAINTENANCE

- **Cleaning Brush Heads:** After each use, remove the brush head and rinse it thoroughly under running water to remove dirt and cleaning solution residue. Allow brush heads to air dry completely before storing.
- **Cleaning the Main Unit:** Wipe the Electric Cleaning Brush Host with a damp cloth. Due to its IPX7 rating, it can be rinsed, but avoid prolonged submersion of the charging port area. Ensure the charging port cover is securely closed when not charging.
- **Charging:** Recharge the device when the battery indicator on the LED screen is low. Use only the provided Type-C charging cable. Avoid overcharging by disconnecting once fully charged.
- **Storage:** Store the scrubber and its accessories in a dry, cool place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the Type-C cable. Ensure the charging cable is properly connected to both the device and a power source.
Short battery life during use.	Insufficient charge; battery degradation over time.	Ensure the device is fully charged before each use. If the issue persists after full charging, contact customer support.
Motor bogs down or stops during cleaning.	Excessive pressure applied; battery low.	Reduce the pressure applied to the cleaning surface. Ensure the battery is sufficiently charged. The scrubber is designed for efficient cleaning with moderate pressure.
Brush head does not spin correctly.	Brush head not properly attached; obstruction.	Remove and re-attach the brush head, ensuring it clicks into place. Check for any debris or hair wrapped around the rotating mechanism and clear it.

SPECIFICATIONS

Feature	Detail
Brand	ALPONO
Model Number	A22-0
Color	Black&white
Handle Material	Stainless Steel
Product Dimensions	2.16"L x 2.16"W x 9.8"H
Special Features	Cordless, Extendable, Long Handle, Portable, Reusable
Waterproof Rating	IPX7
Rotation Speed	400 RPM
Power Source	1 Lithium Ion battery (included)
Charging	Type-C Fast Charging
Item Weight	2.66 pounds
UPC	081904485650

WARRANTY AND SUPPORT

ALPONO is committed to customer satisfaction. If you encounter any issues with your Electric Spin Scrubber, please do not hesitate to contact us. Our support team is available 24/7 to provide prompt resolution and assistance.

For more information or to explore other ALPONO products, visit the official ALPONO Store:

Visit the ALPONO Store