

ECONTROLLY IRC600-URC600-SENUO

User Manual: ECONTROLLY IRC600/URC600
Replacement Remote Control

Model: IRC600-URC600-SENUO
Brand: ECONTROLLY

PRODUCT OVERVIEW

This manual provides instructions for the ECONTROLLY IRC600/URC600 RF 600 571430-001 Replacement Remote Control. This remote is designed to be compatible with specific Motorola Shaw Direct TV Box Receiver models.

Compatible Receiver Models:

- DSR630
- DSR800
- DSR830
- HDDSR600
- HDPVR630





Image: Front view of the ECONTROLLY IRC600/URC600 Replacement Remote Control, showcasing its button layout.



Replace

Original

Image: Comparison of the ECONTROLLY replacement remote (left) and an original remote (right), illustrating its compatible design.

PACKAGE CONTENTS

- 1 x ECONTROLLY IRC600/URC600 Replacement Remote Control

SETUP AND INSTALLATION

1. Battery Installation:

The remote control requires two (2) 1.5V AAA alkaline batteries (not included). To install:

- Locate the battery compartment on the back of the remote control.
- Slide the battery cover downwards to open.
- Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- Slide the battery cover back into place until it clicks securely.





Image: Rear view of the remote control, illustrating the battery compartment and correct battery orientation.

2. Initial Use:

No programming or pairing is required for this replacement remote control. Once batteries are correctly installed, it will be immediately available for use with the compatible Motorola Shaw Direct TV Box Receiver models listed in the Product Overview section.

OPERATING INSTRUCTIONS

This remote control functions identically to the original remote for your compatible Motorola Shaw Direct TV Box Receiver. Refer to your receiver's user manual for specific functions of each button if needed.

Key Functions Overview:

- **Power Button ():** Turns the receiver on or off.
- **Number Pad (0-9):** For direct channel entry.
- **AUX, TV, SAT:** Buttons for selecting the device to control (functionality depends on receiver setup).
- **MENU:** Accesses the receiver's main menu.
- **GUIDE:** Displays the program guide.
- **VOL (Volume Up/Down):** Adjusts the volume.
- **CH (Channel Up/Down):** Changes channels.
- **MUTE/SILENCE:** Mutes or unmutes audio.
- **Navigation Pad (Up, Down, Left, Right, ENTER/OK):** Navigates menus and confirms selections.
- **INFO:** Displays program information.
- **PVR:** Accesses Personal Video Recorder functions.
- **EXIT:** Exits current menu or screen.
- **SOURCE/ASPECT:** Changes video input source or aspect ratio.
- **Colored Buttons (A, B, C, D):** Context-sensitive functions, typically indicated on-screen.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls media playback.



Image: Angled view of the remote control, providing a clear perspective of its ergonomic shape and button arrangement.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries.
- **Storage:** Store the remote control in a dry place, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).

- Replace old batteries with new 1.5V AAA alkaline batteries.
- Check for any obstructions between the remote control and the receiver's infrared sensor.
- Ensure you are within the operating range and pointing the remote directly at the receiver.

• **Some buttons not working:**

- Clean the remote control, especially around the non-functioning buttons, to remove any dirt or debris.
- If the issue persists after cleaning and battery replacement, the remote may require replacement.

• **Receiver not listed as compatible:**

- This remote is specifically designed for the Motorola Shaw Direct TV Box Receiver models DSR630, DSR800, DSR830, HDDSR600, and HDPVR630. It may not function with other models or brands.

SPECIFICATIONS

Model Number	IRC600-URC600-SENUO
Brand	ECONTROLLY
Product Dimensions	5.91 x 1.57 x 0.59 inches (15 x 4 x 1.5 cm)
Item Weight	1.41 ounces (40 grams)
Color	Black
Special Feature	Ergonomic design
Power Source	2 x 1.5V AAA Alkaline Batteries (not included)
Compatible Devices	Motorola Shaw Direct TV Box Receivers (DSR630, DSR800, DSR830, HDDSR600, HDPVR630)





Image: Front view of the remote control displaying its physical dimensions for reference.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policies on the platform where the product was purchased. As a replacement part, specific warranty terms may vary.

For further assistance, you may contact the manufacturer, Dengmianwen Factory, through the retailer's customer service channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DHJTKXH7>

More documents and user manuals: <https://manuals.plus/>