



Manuals.plus /

› LEXiBOOK /

› LEXiBOOK Disney Stitch Angel Night Light Alarm Clock RL800D1 User Manual

LEXiBOOK RL800D1

LEXiBOOK Disney Stitch Angel Night Light Alarm Clock (Model RL800D1) User Manual

Brand: LEXiBOOK | Model: RL800D1

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your LEXiBOOK Disney Stitch Angel Night Light Alarm Clock, model RL800D1. This device combines an alarm clock with a nightlight feature, offering various sounds and melodies for a pleasant user experience.



Image: The LEXIBOOK Disney Stitch Angel Night Light Alarm Clock, showing the product and its retail packaging.

SAFETY INFORMATION

WARNING: This product is not a toy.

Please read all instructions carefully before use. Keep this manual for future reference. Ensure the product is used in a stable environment and away from water or excessive heat sources. Adult supervision is recommended for younger users.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x LEXiBOOK Disney Stitch Angel Night Light Alarm Clock
- 1 x Instruction Manual (this document)

SETUP

Battery Installation

The alarm clock requires 3 x AA/LR6 batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the underside of the unit.
2. Using a small screwdriver, unscrew the battery compartment cover.
3. Insert 3 new AA/LR6 batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

A low battery indicator will appear on the LCD screen when batteries need replacement.



Image: A battery icon, representing low battery status on the display.

OPERATING INSTRUCTIONS

Familiarize yourself with the controls and functions of your alarm clock.



Image: Front view of the alarm clock, highlighting the LCD screen and control buttons.

Setting the Time

Specific instructions for setting the time are typically found on the device itself or through a combination of buttons. Generally, look for a "SET" or "MODE" button. Press and hold it until the time digits flash. Use the "+" and "-" buttons to adjust hours and minutes. Press "SET" or "MODE" again to confirm.



Image: A close-up of the digital LCD screen, showing the time display.

Setting the Alarm

To set the alarm, locate the "ALARM" button. Press and hold it until the alarm time digits flash. Use the "+" and "-" buttons to set the desired alarm hour and minute. Press "ALARM" again to confirm. An alarm icon will typically appear on the display when the alarm is active.

Adjusting Volume and Melodies

The alarm clock features 6 Stitch-inspired sounds and 6 melodies. Use the dedicated volume control button (often marked with a speaker icon) to adjust the alarm volume. To cycle through the available sounds and melodies, press the melody selection button (often marked with musical notes) during alarm setup or when the alarm is sounding.



Image: Speaker icon, representing volume control.



Image: Musical notes icon, representing melody selection.

Snooze Function

When the alarm sounds, press the snooze button (often a large button on top of the unit or a specific button indicated by "Zz") to temporarily silence the alarm. The alarm will sound again after a short interval (typically 5-10 minutes).

Nightlight Function and Alarm Control

The Angel figure illuminates to function as a nightlight. To activate the nightlight, press the top of the unit or the Angel figure. The nightlight can be set to stay on or off, and the LCD screen can be dimmed or turned off for a sleep-friendly environment. Consult the device's specific controls for nightlight duration settings if available.

To turn off the alarm completely, tap the top of the unit or the Angel figure when the alarm is sounding. This will deactivate the alarm until the next scheduled alarm time.

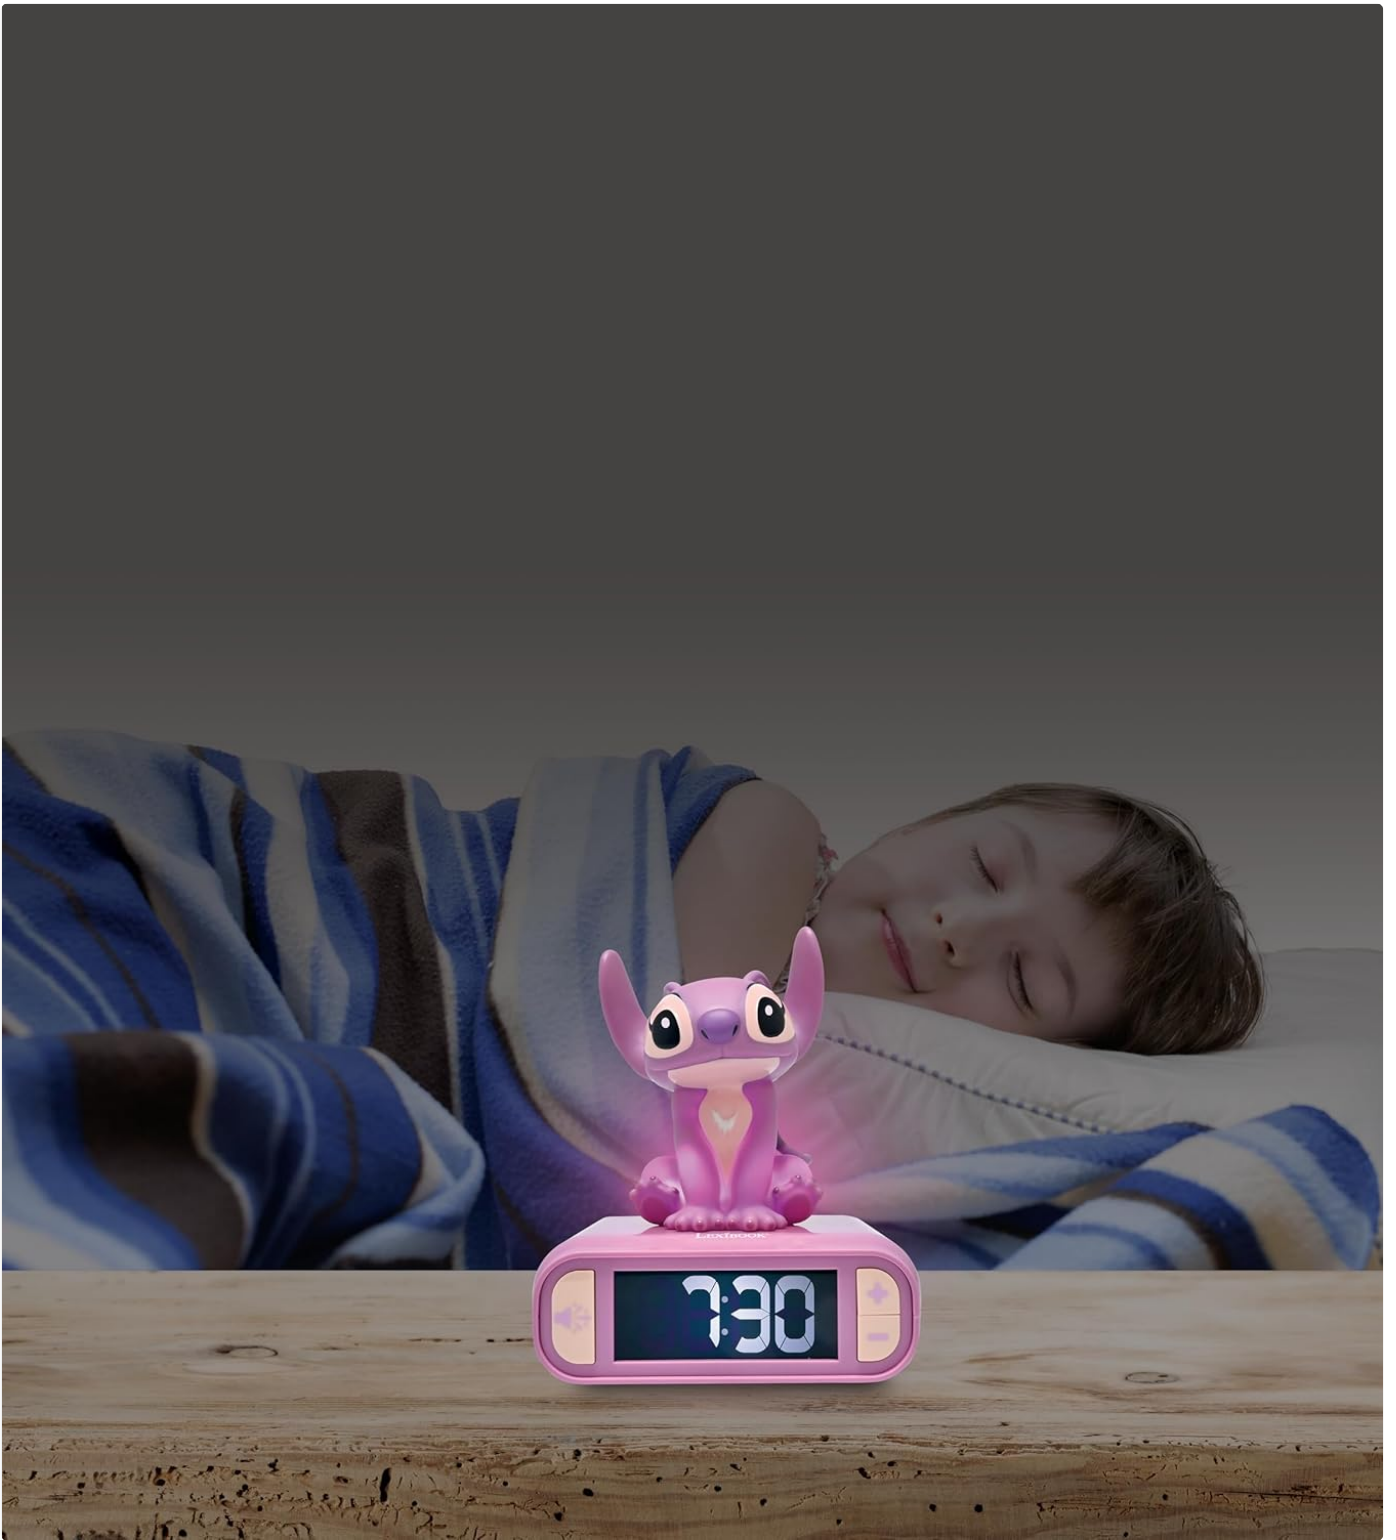


Image: A child sleeping peacefully with the Angel nightlight alarm clock providing a soft glow.



Image: The Angel nightlight alarm clock illuminating a dark room with subtle star projections.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the low battery indicator appears on the display to ensure continuous operation. Always use new AA/LR6 batteries.
- **Storage:** If storing the unit for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is dim or blank.	Low batteries or batteries incorrectly installed.	Replace batteries with new AA/LR6 batteries, ensuring correct polarity.
Alarm does not sound.	Alarm not set, volume too low, or batteries depleted.	Verify alarm settings. Increase volume. Replace batteries.
Nightlight does not illuminate.	Batteries are low or depleted.	Replace batteries.
Time is inaccurate.	Batteries are very low or unit needs to be reset.	Replace batteries. Reset the time.

SPECIFICATIONS

Feature	Detail
Brand	LEXiBOOK
Model Number	RL800D1
Color	Pink
Display Type	Digital LCD
Special Features	Alarm, Nightlight, Sounds, Melodies, Snooze, Backlit Screen
Product Dimensions	3.6"W x 7.3"H
Power Source	Battery Powered (3 x AA batteries required, not included)
Material	Plastic
Item Weight	8 ounces
Recommended Age	6 years and up

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department. You can find more information about LEXiBOOK products by visiting the official LEXiBOOK Store on Amazon.

