

[Manuals.plus](#) /

› [Porseme](#) /

› Porseme 500ml Glass Essential Oil Diffuser Instruction Manual

Porseme F6-500ml Pure White Giant

Porseme 500ml Glass Essential Oil Diffuser

Model: F6-500ml Pure White Giant

PRODUCT OVERVIEW

The Porseme 500ml Glass Essential Oil Diffuser is an aromatherapy device designed to disperse essential oils and provide cool mist humidification. Featuring a handmade glass cover and a wood grain base, it offers both aesthetic appeal and functional benefits for various spaces such as bedrooms, living rooms, offices, and yoga studios. This ultrasonic diffuser operates quietly and includes an auto-off safety feature when water levels are low.



Image: The Porseme 500ml Glass Essential Oil Diffuser in Pure White, showcasing its elegant design and control buttons at the base.

SETUP INSTRUCTIONS

1. **Unpack the Diffuser:** Carefully remove all components from the packaging, including the diffuser base, glass cover, and power adapter.
2. **Place the Diffuser:** Position the diffuser on a flat, stable surface away from direct sunlight, heat sources, and electronic devices. Ensure proper ventilation around the unit.
3. **Remove the Cover:** Gently lift the glass cover from the base.
4. **Add Water:** Using a measuring cup, fill the water tank with clean tap water up to, but not exceeding, the maximum water line indicated inside the tank. *Do not overfill.*

ELEGANT DESIGN

Eye-catching Aroma Diffuser

Hand-Made Glass



Image: An internal view of the diffuser base, illustrating the water tank and the clearly marked maximum fill line for water.

5. **Add Essential Oils:** Add 3-5 drops of your preferred essential oil directly into the water tank. Adjust the amount based on personal preference and room size. *Avoid direct skin contact with undiluted essential oils.*
6. **Replace the Cover:** Carefully place the glass cover back onto the base, ensuring it is properly aligned and seated to prevent water leakage.
7. **Connect Power:** Plug the power adapter into the DC jack on the back of the diffuser base, then plug the adapter into a standard electrical outlet.

OPERATING INSTRUCTIONS

The diffuser features intuitive controls located on the front of the base.

- **Mist Button (leftmost icon):**
 - Press once for continuous mist mode (lasts approximately 15 hours).
 - Press a second time for interval mist mode (mists for 30 seconds, then pauses for 30 seconds, lasting approximately 21 hours).

- Press a third time to turn off the mist function.
- **Power Button (center icon):**
 - Press to turn the diffuser on or off.
- **Light Button (rightmost icon):**
 - Press once to cycle through 7 soothing LED colors.
 - Press again to pause on your desired color.
 - Press and hold to turn off the light function.



Image: The diffuser illuminated with different LED light colors, demonstrating its 7-color changing mode.

The mist and light functions can be used independently or together.

MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your diffuser.

1. **Daily Maintenance:**

- After each use, unplug the diffuser and empty any remaining water from the tank.
- Wipe the inside of the water tank and the ultrasonic disc with a clean, soft cloth.

2. **Weekly Deep Cleaning:**

- Unplug the diffuser and remove the cover.
- Empty any water.
- Add 1 tablespoon of white vinegar to the water tank.
- Fill the tank with clean water up to the maximum line.
- Run the diffuser for 15-20 minutes in a well-ventilated area.
- Empty the water and wipe the tank thoroughly with a soft cloth.
- For stubborn residue on the ultrasonic disc, gently clean with a cotton swab dipped in rubbing alcohol. *Do not scratch the disc.*

3. **Storage:** When not in use for an extended period, ensure the diffuser is clean and dry. Store it in a cool, dry place.

Important Safety Note: Keep out of reach of children and pets. Ensure proper ventilation during use. Always add water below the maximum line. Ensure the lid is properly in place to prevent water leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output	• Insufficient water in tank • Water level too high • Ultrasonic disc dirty • Diffuser not level • Air outlet blocked	• Add water to the MAX line • Reduce water to below MAX line • Clean the ultrasonic disc (see Maintenance) • Place on a flat, stable surface • Ensure nothing is blocking the mist outlet
No light or flickering light	• Power connection loose • Light function off	• Check power adapter connection • Press the Light button to activate or cycle colors
Water leakage	• Overfilled water tank • Cover not properly seated • Diffuser tilted or knocked over	• Empty excess water • Ensure glass cover is securely and correctly placed • Keep diffuser on a stable, flat surface
Unusual noise	• Water level too low • Diffuser not level	• Add water • Place on a flat, stable surface

SPECIFICATIONS

Feature	Detail
Brand	Porseme

Feature	Detail
Model	F6-500ml Pure White Giant
Color	Pure White
Capacity	500 Milliliters
Product Dimensions	7.2"L x 7.2"W x 5.9"H (18.5cm L x 18.5cm W x 15cm H)
Wattage	12 watts
Item Weight	2.07 pounds
Material	Glass and Plastic
Auto Shutoff	Yes (Waterless Auto-Off)
Running Hours	15-21 hours (depending on mist mode)
LED Lights	7 soothing colors

Good Scent Distribution

Prevents overheating when water runs out



Last 15-21Hours
500ml MAX



Strong/Weak mist
500ml MAX



7 Color Lights
ON/OFF

5.9"/
15cm

7.2"/18.5cm

Image: The diffuser with its key dimensions (height and width) clearly indicated.

WARRANTY AND SUPPORT

Porseme products typically come with a manufacturer's warranty. Based on customer feedback, a one-year warranty is generally provided for this product. For specific warranty details and to initiate a support request, please refer to the warranty card or contact information included in your product packaging.

For further assistance, please contact Porseme customer support directly. Contact details are usually provided within the product box or on the official Porseme website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question