

[Manuals.plus](#) /

› [Liene](#) /

› Liene PixCut S1 Color Sticker Printer & Cutting Machine User Manual

Liene DHP700

Liene PixCut S1 Color Sticker Printer & Cutting Machine User Manual

Model: DHP700 | Brand: Liene

PRODUCT OVERVIEW

The Liene PixCut S1 is an all-in-one device designed for DIY crafts, custom labels, and gifts. It seamlessly integrates high-resolution photo printing and precise die cutting. Utilizing thermal dye-sublimation technology, it delivers stunning 300 dpi prints with 16.7 million colors. Its AI image extraction and high-precision intelligent cutting system allow for flawless cuts of complex patterns. Stickers produced are durable, waterproof, fade-resistant, and scratch-resistant, with an easy-peel backing for repositioning.



The Liene PixCut S1 printer and cutting machine, ready for creative projects.

Demonstration of the Liene PixCut S1's integrated printing and precise auto-cutting functionality.

SETUP GUIDE

1. Unboxing and Initial Setup

Carefully remove all components from the packaging. Connect the power adapter to the printer and a power outlet. Press the power button on the printer to turn it on. The indicator light will illuminate.



The Liene PixCut S1 printer, showing its compact design and readiness for use.

2. Installing the Ink Cartridge

Locate the ink cartridge slot on the side of the printer. Open the cover and gently insert the ink cartridge until it clicks into place. Ensure it is securely seated before closing the cover.

 


The Liene PixCut S1 printer, illustrating the ink cartridge and paper packs.

3. Loading Paper

Open the paper tray at the back of the printer. Adjust the paper guides to fit the paper size (4x7 inches for sticker paper or 4x6 inches for photo paper). Load the paper with the shiny side facing up into the tray. You can load up to 18 sheets at a time.

Why Choose PixCut S1?

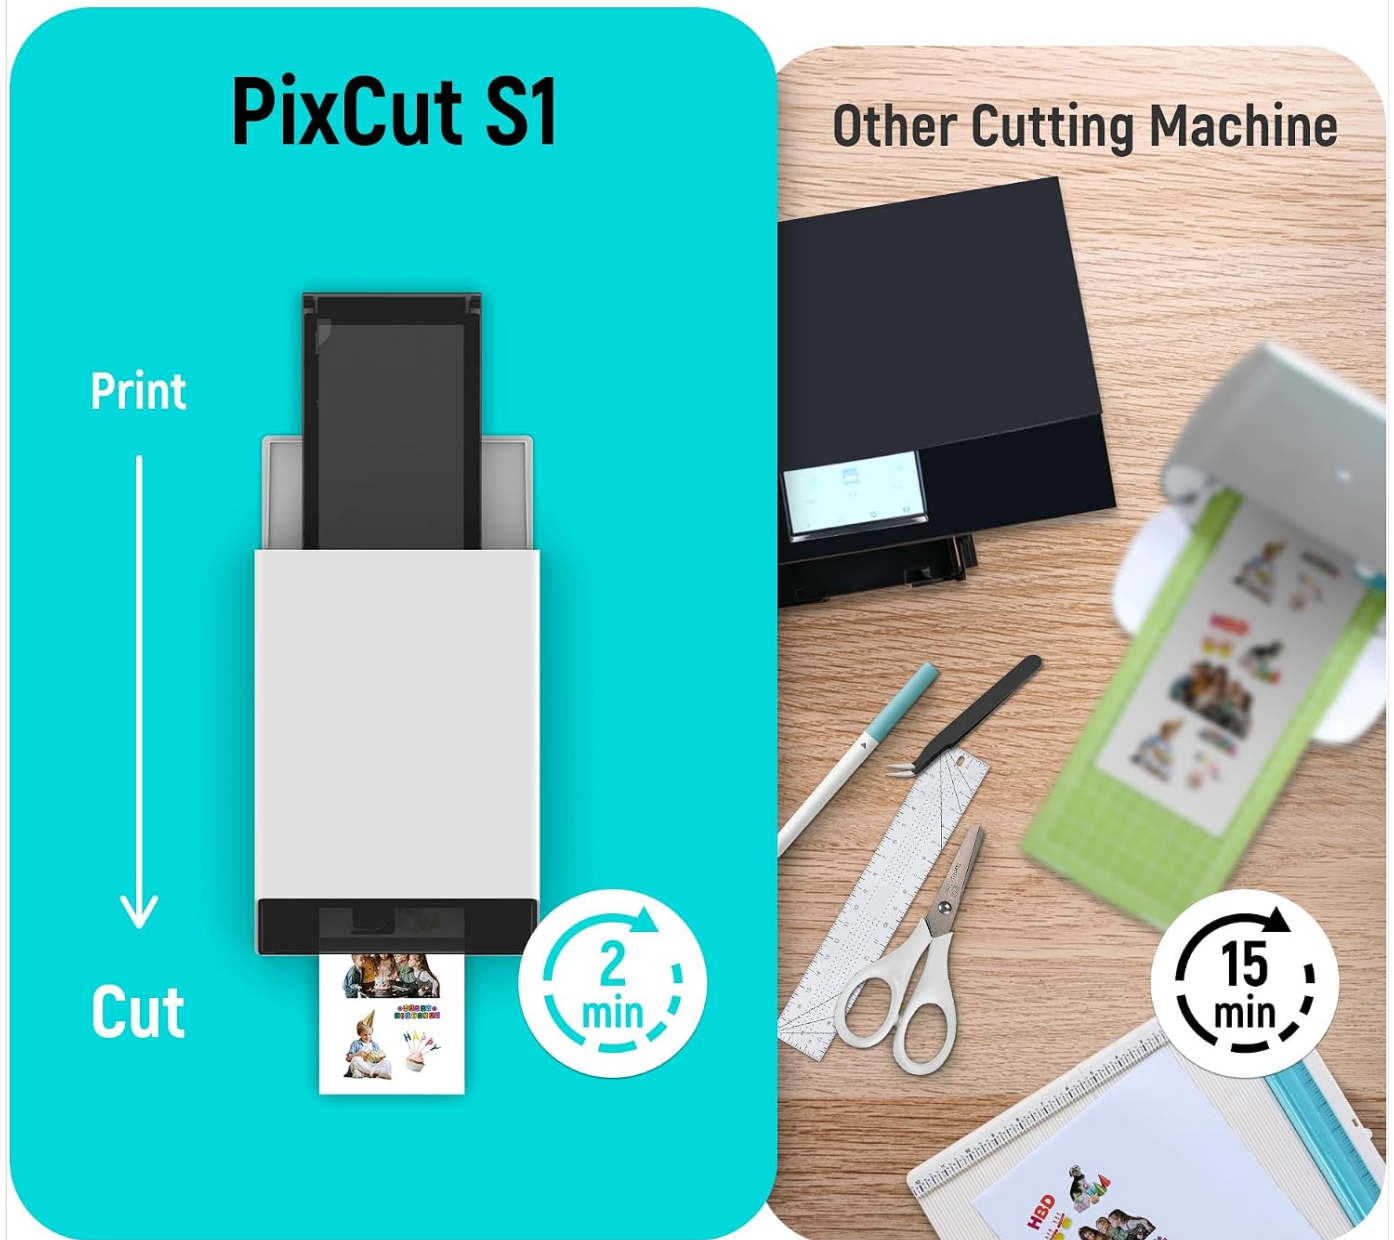

A hand inserting paper into the Liene PixCut S1 printer's paper tray.

OPERATING INSTRUCTIONS

1. Connecting via Bluetooth

Download the official Liene PixCut app from your device's app store (iOS or Android). Enable Bluetooth on your smartphone. Open the app and follow the on-screen instructions to pair your device with the Liene PixCut S1 printer. The indicator light on the printer will turn solid white once connected.

Wireless Bluetooth Connection

Up to **3** Devices to Connect at the Same Time




The Liene PixCut S1 supports wireless Bluetooth connection with up to 3 devices simultaneously.

2. Using the Mobile App

The Liene PixCut app offers a user-friendly interface for creating and customizing your designs. You can import photos, utilize AI image extraction to remove backgrounds, choose from a rich template library, add text, and apply various editing tools. Prepare your design within the app before sending it to the printer.

User-Friendly App

Unleash Your Imagination with Ease

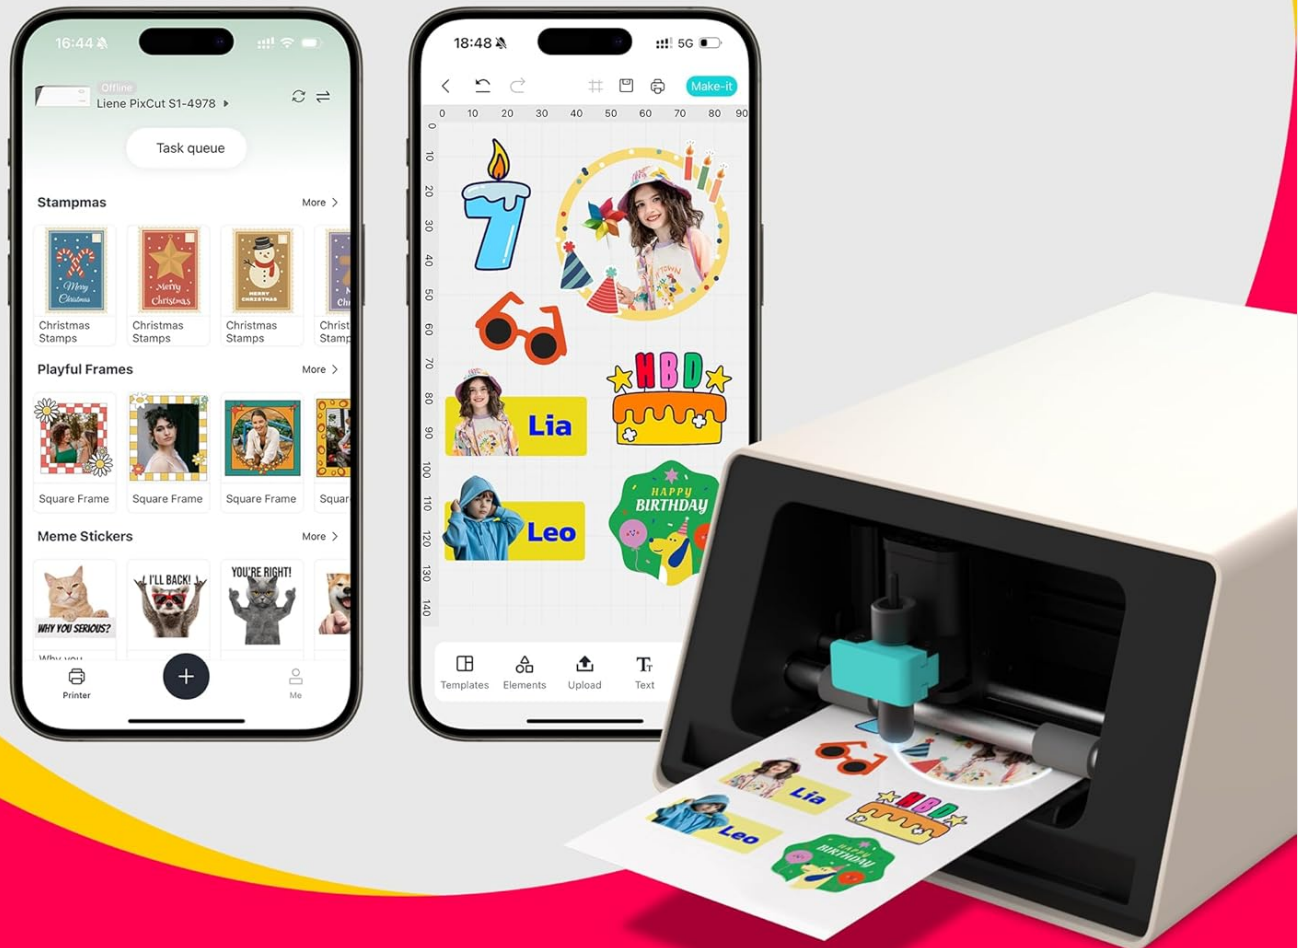

The intuitive mobile app allows for easy customization and design of stickers and photos.

3. Printing and Cutting

Once your design is ready in the app, select the print option. The PixCut S1 will automatically print your design using thermal dye-sublimation technology, followed by precise auto-cutting using its AI-powered intelligent cutting system. This all-in-one process ensures accurate and clean cuts without manual adjustments.

Demonstration of the Liene PixCut S1's integrated printing and precise auto-cutting functionality.

MAINTENANCE

1. Replacing the Blade

To replace the cutting blade, open the front cover of the printer. Gently detach the blade holder from its position. Carefully remove the old blade and insert the new one, ensuring it is properly seated. Reattach the blade holder and close the front cover.



The cutting blade can be easily replaced by opening the front cover and detaching the blade holder.

2. Cleaning the Printer

Regularly wipe the exterior of the printer with a soft, dry cloth. Ensure no dust or debris accumulates in the paper path. Avoid using harsh chemicals or abrasive materials for cleaning.

TROUBLESHOOTING

Common Issues and Solutions

- **Printer not connecting via Bluetooth:** Ensure the printer is powered on and the indicator light is solid white. Restart the app and your device's Bluetooth. If issues persist, try restarting the printer.
- **Poor print quality (faded colors, streaks):** Check the ink cartridge level and replace if necessary. Ensure the paper is loaded correctly with the shiny side facing up. Clean the print head if streaks persist (refer to app for print head cleaning option if available, or general cleaning).
- **Cutting inaccuracies:** Ensure the paper is loaded straight and securely. Calibrate the cutting function through the mobile app if available. Replace the blade if it appears dull or damaged.
- **Stickers not adhering well:** Ensure the surface is smooth, clean, and dry. Stickers are designed for easy repositioning and residue-free removal, which may result in less aggressive adhesion on certain textured or uneven surfaces.

SPECIFICATIONS


Feature	Detail
Product Dimensions	11"D x 7.7"W x 4.1"H
Controller Type	iOS, Android
Maximum Media Size	4x7 inches
Print media	Labels
Scanner Type	Portable, Photo
Max Input Sheet Capacity	18
Compatible Devices	Smartphones
Maximum Color Print Resolution	300 dpi
Sheet Size	4x7 Inches
Maximum Black and White Print Resolution	300 dpi
Warranty Type	limited warranty

Feature	Detail
Color Depth	24 bpp
Dual-sided printing	No
Ink Color	CMYK
Resolution	300 x 300
Additional Printer functions	All In One
Output sheet capacity	18.0
Number of Trays	1
Model Series	DHP700
Specific Uses For Product	School, Home
Item Weight	6.2 pounds
Item model number	DHP700
Date First Available	January 16, 2025
Manufacturer	Hannto Technology Co., Ltd.
Country of Origin	China
Connectivity Technology	Bluetooth
Printing Technology	Thermal Dye Sublimation
Special Feature	Sticker Making, Photo Printing
Color	White
Model Name	DHP700
Printer Output	Color

WHAT'S INCLUDED

- PixCut S1 Photo Sticker Printer and Cutter *1
- Photo Sticker Cutter Ink Cartridge *1 (36 sheets)
- Photo Paper 4"x6" (18 sheets)
- Sticker Paper 4"x7" (White) *18 sheets)
- Blade *1 (Pre-installed)

Included in this bundle

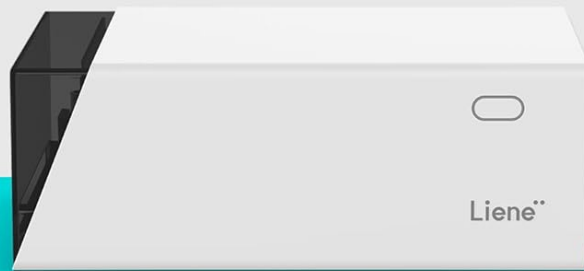

PixCut S1 Photo Sticker Printer *1



Photo Paper 4"x6"
18 Sheets



Sticker Paper 4"x7"(White)
18 Sheets



Photo Sticker Cutter Ink Cartridge *1: 36 Sheets



User Manual *1



Power Adapter *1



Blade*1(Pre-installed)

A visual representation of all components provided with the Liene PixCut S1 printer.

WARRANTY AND SUPPORT

The Liene PixCut S1 comes with a limited warranty. For detailed warranty information and customer support, please visit the official Liene website or contact their customer service.

Manufacturer: Hannto Technology Co., Ltd.

For further assistance, visit the [Liene Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question