

[manuals.plus](#) /

› [itel](#) /

› [itel Rhythm Pro True Wireless Earbuds User Manual](#)

Itel BudsNeo 3

itel Rhythm Pro True Wireless Earbuds User Manual

Model: BudsNeo 3

1. INTRODUCTION

Thank you for choosing the itel Rhythm Pro True Wireless Earbuds. This manual provides essential information for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before use.



Image 1.1: itel Rhythm Pro True Wireless Earbuds in their charging case.

2. PACKAGE CONTENTS

Ensure all items are present in your package:

- itel Rhythm Pro True Wireless Earbuds (Left and Right)
- Charging Case
- C-type Charging Cable
- User Manual (this document)
- Additional Eartips (various sizes, typically pre-installed medium)

3. PRODUCT OVERVIEW

The itel Rhythm Pro earbuds feature a compact design with advanced audio technology. Each earbud is equipped with a 10mm dynamic driver for clear sound and a microphone for calls. The charging case provides extended battery life and protects the earbuds.



Image 3.1: itel Rhythm Pro True Wireless Earbuds removed from their charging case, showing individual earbud design.

Earbud Components:

- **Touch Control Area:** For managing playback, calls, and voice assistant.
- **Microphone:** For calls and AI Environmental Noise Cancellation (ENC).
- **Charging Contacts:** Connects with the charging case.
- **Eartip:** Provides a secure and comfortable fit.

Charging Case Components:

- **Earbud Charging Slots:** Holds and charges the earbuds.
- **Charging Port (USB Type-C):** For connecting the charging cable.
- **LED Indicator:** Shows charging status and battery level.

4. SETUP

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case.

1. Place the earbuds into the charging case. Ensure they are correctly seated in their respective slots.
2. Connect the provided C-type charging cable to the charging port on the case and to a USB power source (e.g., wall adapter, computer USB port).
3. The LED indicator on the charging case will show the charging status. Refer to the LED indicator guide for details (usually solid or blinking light indicates charging, solid light indicates full charge).
4. A 10-minute charge provides approximately 180 minutes of playback. A full charge provides up to 100 hours of total playtime with the charging case.



BLUETOOTH v5.3

for Effortless Connectivity

Image 4.1: Earbuds placed in the charging case, indicating charging process.

4.2 Pairing with a Bluetooth Device

The earbuds use Bluetooth V5.3 for stable and efficient connectivity.

1. Open the charging case. The earbuds will automatically enter pairing mode (or power on if already charged). The LED indicator on the earbuds may flash to indicate pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for available Bluetooth devices. Select "itel Rhythm Pro" from the list.
4. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or LED change).
5. The earbuds will automatically reconnect to the last paired device when removed from the case, if Bluetooth is enabled on the device.



Image 4.2: Detail of an earbud highlighting Bluetooth V5.3 for connectivity.

5. OPERATING INSTRUCTIONS

The itel Rhythm Pro earbuds feature intuitive touch controls. The exact functions may vary slightly based on your device and application.

5.1 Music Playback

- **Play/Pause:** Tap once on either earbud.
- **Next Track:** Double-tap the right earbud.
- **Previous Track:** Double-tap the left earbud.
- **Volume Up:** Triple-tap the right earbud.
- **Volume Down:** Triple-tap the left earbud.

5.2 Call Management

- **Answer/End Call:** Tap once on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

5.3 Voice Assistant

- **Activate Voice Assistant (Google Assistant):** Press and hold either earbud for 2 seconds (when not on a call).

5.4 Power On/Off

- **Power On:** Open the charging case, or press and hold the touch area on both earbuds for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid, or press and hold the touch area on both earbuds for 5 seconds.

6. MAINTENANCE

6.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Ensure charging contacts on both earbuds and case are clean and free of debris to maintain proper charging.

6.2 Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

6.3 Water Resistance (IPX5)

The itel Rhythm Pro earbuds are IPX5 water-resistant, meaning they are protected against low-pressure water jets from any direction. This makes them suitable for workouts and light rain. They are not designed for submersion in water or exposure to heavy rain.

- Do not intentionally submerge the earbuds in water.
- Avoid using them in saunas or steam rooms.
- If the earbuds get wet, wipe them dry thoroughly before placing them back in the charging case to prevent damage to the charging contacts.



Image 6.1: The IPX5 water resistance rating ensures protection against splashes.

7. TROUBLESHOOTING

If you encounter issues with your earbuds, try the following solutions:

- **Earbuds not pairing:**

- Ensure both earbuds are charged.
- Turn off Bluetooth on your device and turn it back on.
- Forget "itel Rhythm Pro" from your device's Bluetooth list and try pairing again.
- Place earbuds back in the case, close the lid, wait a few seconds, then open to re-enter pairing mode.

- **Only one earbud working:**

- Ensure both earbuds are charged.
- Try placing both earbuds back in the charging case, close the lid, then take them out again.
- Perform a factory reset (refer to specific instructions if available, otherwise try forgetting the device and re-pairing).

- **No sound or low volume:**

- Check the volume level on both your device and the earbuds.
- Ensure the earbuds are properly connected to your device.
- Clean any debris from the earbud speaker mesh.

- **Charging issues:**

- Ensure the charging cable is securely connected to both the case and the power source.
- Try a different charging cable or power adapter.
- Clean the charging contacts on the earbuds and inside the case.

8. SPECIFICATIONS

Below are the technical specifications for the itel Rhythm Pro True Wireless Earbuds:

Feature	Specification
Model Name	Rhythm Pro (BudsNeo 3)
Connectivity Technology	Bluetooth V5.3
Audio Driver Size	10mm Dynamic Driver
Noise Control	AI Environmental Noise Cancellation (ENC)
Playtime (Total with Case)	Up to 100 Hours
Fast Charging	10 minutes charge = 180 minutes playback
Water Resistance Level	IPX5
Control Type	Touch, Voice (Google Assistant)
Material	Polycarbonate (PC)
Item Weight	46 Grams
Product Dimensions	6.8 x 2.7 x 4.9 cm
Battery Type	Lithium Ion / Lithium Polymer

Feature	Specification
Bluetooth Range	10 Metres
Audio Latency	45 Milliseconds
Impedance	32 Ohms

9. WARRANTY AND SUPPORT

Your itel Rhythm Pro True Wireless Earbuds are covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact itel customer service through their official website or the contact information provided with your product documentation. Keep your purchase receipt as proof of purchase for warranty services.

© 2024 Itel. All rights reserved.