

Karlsso KA5789GD

# Karlsso Duo Cuckoo Wall Clock (KA5789GD) User Manual

Your guide to setting up, operating, and maintaining your Karlsso Duo Cuckoo Wall Clock.

## 1. PRODUCT OVERVIEW

The Karlsso Duo Cuckoo Wall Clock, model KA5789GD, is a modern timepiece featuring a unique cuckoo mechanism. Its gold-plated finish and minimalist design make it a distinctive addition to any space. This clock is designed to provide accurate timekeeping while offering the charming hourly emergence of a cuckoo bird.



**Image 1:** Front and back view of the Karlsso Duo Cuckoo Wall Clock. The left side shows the clock's face with black hands and the 'KARLSSON' logo. The right side displays the rear view, highlighting the opening for the cuckoo bird mechanism.

## 2. SETUP

### 2.1 Unpacking

- Carefully remove the clock from its packaging.
- Inspect the clock for any signs of damage. If damaged, contact customer support immediately.
- Retain the packaging for future transport or storage.

## 2.2 Powering the Clock

The Karlsson Duo Cuckoo Wall Clock requires **3x AA batteries** (not included) for operation.

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert 3 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

## 3. OPERATING INSTRUCTIONS

### 3.1 Setting the Time

To set the correct time on your clock:

1. Locate the time setting knob on the back of the clock mechanism.
2. Gently turn the knob clockwise until the hands display the desired time.
3. Avoid turning the hands directly, as this may damage the movement.

### 3.2 Cuckoo Feature

The cuckoo bird will emerge and make sounds every hour on the hour. The volume and presence of the cuckoo sound are typically controlled by a light sensor, meaning the cuckoo will not sound in dark conditions to avoid disturbing sleep. There is no manual override for the cuckoo sound or volume.

## 4. MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the gold finish.
- **Battery Replacement:** Replace batteries annually or when the clock starts losing time or the cuckoo feature becomes inconsistent. Always replace all batteries at the same time.
- **Placement:** Avoid placing the clock in direct sunlight or near extreme temperature changes, which can affect its accuracy and material integrity.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or running slow.	Dead or low batteries; incorrect battery insertion.	Replace with new AA batteries, ensuring correct polarity.
Cuckoo bird not emerging or sounding.	Insufficient light; low batteries.	Ensure the clock is in a well-lit area; replace batteries.
Hands are loose or misaligned.	Impact or improper handling.	Gently re-align hands if possible, or contact customer support.

## 6. SPECIFICATIONS

Feature	Detail
Brand	Karlsson
Model Number	KA5789GD
Color	Gold
Material	Steel
Dimensions (W x H x D)	26 cm x 13 cm x 7.2 cm
Weight	1 Kilogram
Power Source	3x AA batteries (not included)
Display Type	Analog

## 7. WARRANTY AND SUPPORT

Karlsson products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Karlsson website.

For technical support, troubleshooting assistance, or inquiries about replacement parts, please contact Karlsson customer service. Contact details can typically be found on the product packaging or the brand's official website.

