

Fockety Focketycwh45trid1

Fockety Cordless Mattress Vacuum Cleaner

MODEL: FOCKETCWH45TRID1

1. Introduction

Thank you for choosing the Fockety Cordless Mattress Vacuum Cleaner. This device is designed to provide efficient and deep cleaning for various fabric surfaces, including mattresses, pillows, sofas, and carpets. Featuring strong suction, UV light, and ultrasonic technology, it helps maintain a clean and healthy living environment. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. Safety Instructions

- Read all instructions before using the appliance.
- This appliance is for indoor household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filter properly in place.
- Turn off the appliance before performing any maintenance or cleaning.
- Use only manufacturer's recommended attachments.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not handle the charger or appliance with wet hands.
- If the charging cable is damaged, it must be replaced by the manufacturer or a qualified service agent to avoid hazards.
- Store the appliance in a dry, cool place when not in use.

3. Package Contents

Please check the package for the following items:

- 1 x Fockety Cordless Mattress Vacuum Cleaner
- 1 x USB Charging Cable
- 2 x Washable Filters (1 pre-installed, 1 spare)
- 1 x User Manual (This document)



Image: All components included in the package, showing the vacuum cleaner, two filters, and a USB charging cable.

4. Product Overview


4.1 Components



Image: Front view of the Fockety Cordless Mattress Vacuum Cleaner, highlighting its ergonomic handle and dust cup.

- **Handle:** Ergonomically designed for comfortable grip.
- **Power Button:** Located on the handle for easy access to turn the unit on/off and switch speeds.
- **Dust Cup:** Transparent and detachable for easy monitoring and cleaning of collected dust.
- **Filter:** Located inside the dust cup, designed to capture fine particles.
- **Suction Head:** The base of the vacuum, equipped with tapping pads, UV light, and ultrasonic emitters for deep cleaning.
- **Type-C Charging Port:** Located on the side for convenient charging.

Push button switch
One touch of a button,
turn it on and use it.

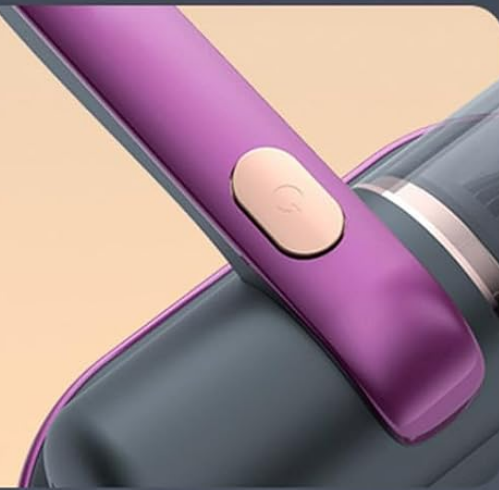

Comfortable handle
Ergonomic design,
more comfortable to hold



Visualization dust box
Dust collection effect is
visualized, easy to clean



Image: Detailed view of the power button, comfortable handle, and the transparent, visible dust cup.

4.2 Key Features

- **Powerful Suction:** 10KPa strong suction for effective dust and debris removal.
- **Deep Cleaning Technology:** Combines tapping mode, UV light, and ultrasonic technology to dislodge and eliminate microscopic particles and substances.
- **Cordless Design:** Offers freedom of movement and convenience during cleaning.
- **Two Suction Levels:** Adjustable power for daily cleaning or deep cleaning tasks.
- **Advanced Filtration:** Captures 99.99% of fine particles as small as 0.3 microns.

- **Low Noise Operation:** Designed to operate quietly, minimizing disturbance.

5. Setup

5.1 Initial Charging

1. Before first use, fully charge the vacuum cleaner.
2. Connect the provided USB charging cable to the Type-C port on the vacuum cleaner.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., mobile power bank, adapter, computer interface).
4. The charging indicator light will illuminate. Allow approximately 3-4 hours for a full charge.



Image: Close-up of the Type-C charging port, indicating compatibility with mobile power, adapters, and computer interfaces.

5.2 Filter Installation

The vacuum cleaner comes with one filter pre-installed. If you need to install or replace a filter:

1. Ensure the vacuum cleaner is turned off.
2. Detach the dust cup from the main body (refer to Section 7.1).

3. Twist and remove the old filter from the dust cup.
4. Insert a new, clean filter into the dust cup, ensuring it is securely seated.
5. Reattach the dust cup to the vacuum cleaner until it clicks into place.



Image: Detailed view of the dust cup and the multi-layer filter system, showing how dust is intercepted and locked within the machine.

6. Operating Instructions

6.1 Power On/Off and Speed Selection

1. To turn on the vacuum cleaner, press the power button once. It will start in the default speed mode (Speed 1 - Daily Cleaning).
2. To switch to Speed 2 (Quick Cleaning/Strong Suction), press the power button again.
3. To turn off the vacuum cleaner, press the power button a third time.



Image: Illustration showing the two available speed modes: 'Daily Cleaning' for simple dust removal and 'Quick Cleaning' for powerful, deep cleaning.

6.2 Cleaning Procedure

1. Ensure the vacuum cleaner is fully charged and the dust cup and filter are correctly installed.
2. Select the desired suction speed (Speed 1 for light cleaning, Speed 2 for deep cleaning).
3. Place the suction head flat against the surface you wish to clean (e.g., mattress, sofa, carpet).
4. Move the vacuum cleaner slowly and steadily across the surface. The tapping function will help dislodge embedded dust and debris, while the UV light and ultrasonic technology work to sanitize the area.
5. For optimal results on mattresses, move the vacuum in overlapping passes to ensure thorough coverage.
6. After cleaning, turn off the vacuum cleaner and proceed to empty the dust cup and clean the filter.

**High frequency vibration of the double beat head
Effectively shakes out mite dust**

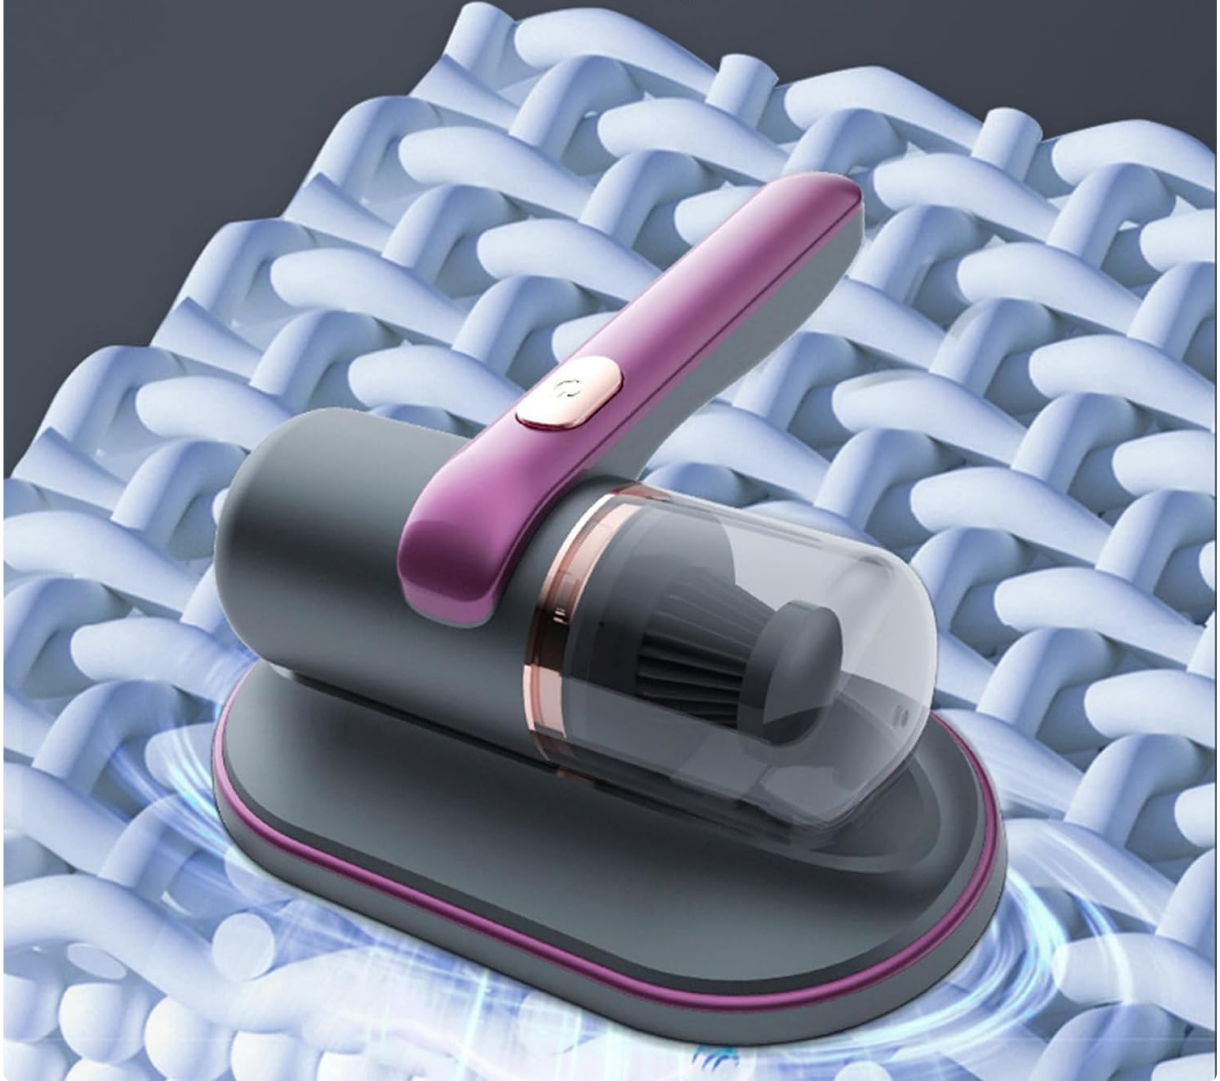


Image: The vacuum cleaner operating on a fabric surface, demonstrating how high-frequency vibration effectively shakes out mite dust.

Powerful beat destroys the mite's grip on fabric fibers and strips it from the mattress.



Image: View of the vacuum cleaner's underside, illustrating the powerful beat mechanism and UV light working to dislodge and eliminate mites from fabric fibers.

7. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner. Always turn off the device before cleaning or maintenance.

7.1 Emptying and Cleaning the Dust Cup

1. Press the release button or unlatch the dust cup from the main body of the vacuum cleaner.
2. Carefully remove the dust cup.
3. Empty the collected dust and debris into a waste bin.
4. The dust cup is washable. You can rinse it under running water. Ensure it is completely dry before reattaching.

7.2 Cleaning and Replacing Filters

It is crucial to clean the filter regularly to prevent suction loss and maintain efficiency. The filter should be cleaned after each use or when the dust cup is emptied.

1. Remove the filter from the dust cup (refer to Section 5.2).

- 2. Tap the filter gently over a waste bin to remove loose dust.
- 3. Rinse the filter under cool, running water until the water runs clear. Do not use hot water or detergents.
- 4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dust cup. Do not use a dryer or other heating devices.
- 5. Replace the filter every 3-6 months, or sooner if it appears heavily soiled or damaged, to ensure optimal performance.

7.3 General Care

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Keep the charging port free from dust and debris.
- Store the vacuum cleaner in a clean, dry place away from direct sunlight and extreme temperatures.

8. Troubleshooting

If you encounter any issues with your Fockety Cordless Mattress Vacuum Cleaner, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is depleted.	Charge the vacuum cleaner fully.
	Power button malfunction.	Contact customer support.
Weak or no suction.	Dust cup is full.	Empty the dust cup.
	Filter is clogged or wet.	Clean or replace the filter. Ensure it is completely dry before use.
	Suction inlet is blocked.	Check and clear any obstructions from the suction head.
Unusual noise during operation.	Obstruction in the suction path.	Turn off the vacuum and check for any foreign objects in the suction head or dust cup area.
	Dust cup or filter not properly installed.	Ensure all components are securely attached.

9. Specifications

Feature	Specification
Brand	Fockety
Model Name	Focketycwh45trid1

Feature	Specification
Suction Power	10,000 Pa (10KPa)
Battery Capacity	1 x 1500mAh Rechargeable Li Battery
Dust Cup Capacity	185 mL
Number of Speeds	2
Filtration	Multiple fine filtration, captures 99.99% of 0.3 micron particles
Special Features	Tapping Mode, UV Light, Ultrasonic Technology, Cordless, Washable Filter
Form Factor	Handheld
Recommended Uses	Mattresses, Sheets, Pillows, Carpets, Fabric Sofas, Pet Hair
Product Dimensions (L x W x H)	9.4 in x 5.3 in x 4.5 in (24 cm x 13.5 cm x 11.5 cm)
Item Weight	2.24 pounds
Charging Interface	Type-C USB



Image: Diagram illustrating the dimensions of the vacuum cleaner: 24cm (9.4in) length, 13.5cm (5.3in) width, and 11.5cm (4.5in) height.

10. Warranty and Support

For warranty information or technical support, please refer to the purchase platform or contact the seller directly. Keep your purchase receipt as proof of purchase.