

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Crosley](#) /

› [Crosley C65A 2-Speed Vinyl Record Player Turntable with 50W Speakers User Manual](#)

## Crosley C65A

# Crosley C65A 2-Speed Vinyl Record Player Turntable with 50W Speakers User Manual

Model: C65A

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Crosley C65A 2-Speed Vinyl Record Player Turntable. Please read this manual thoroughly before using the product to ensure proper function and longevity. Keep this manual for future reference.



Image 1.1: The Crosley C65A Turntable with its accompanying 50W speakers.

## 2. WHAT'S IN THE BOX

Carefully unpack all components and ensure you have the following items:

- Turntable Unit
- Turntable Lid (Dust Cover)

- Turntable Platter
- Rubber Slipmat
- 45 RPM Adapter
- Tonearm Counterweight
- Drive Belt
- Power Adapter
- Speakers (2 units)
- Speaker Wires (2 units)
- Cartridge Alignment Protractor

### 3. SETUP INSTRUCTIONS

Follow these steps to set up your turntable:

1. **Placement:** Place the turntable on a stable, level surface away from direct sunlight, heat sources, and excessive vibration. Ensure adequate ventilation around the unit.
2. **Platter Installation:** Carefully place the turntable platter onto the center spindle.
3. **Drive Belt Installation:** Locate the drive belt. Gently stretch the belt around the inner rim of the platter and then around the motor pulley. Ensure the belt is not twisted.



Image 3.1: Top view of the turntable, illustrating the platter and tonearm area for belt installation.

4. **Slipmat Placement:** Place the rubber slipmat on top of the platter.
5. **Cartridge and Tonearm:** The Audio-Technica moving magnet cartridge is pre-mounted. If necessary, use the included cartridge alignment protractor for fine-tuning.



Image 3.2: Close-up of the pre-mounted Audio-Technica cartridge.

6. **Counterweight Adjustment:** Attach the tonearm counterweight to the rear of the tonearm. Adjust it according to the instructions provided with the cartridge or general turntable setup guides to achieve the recommended tracking force.
7. **Dust Cover:** Attach the clear dust cover to the hinges at the back of the turntable.
8. **Speaker Connection:** Connect the two included speakers to the speaker terminals on the rear of the turntable using the provided speaker wires. Ensure correct polarity (positive to positive, negative to negative).
9. **Power Connection:** Connect the power adapter to the DC IN port on the rear of the turntable, then plug it into a wall outlet.

#### 4. OPERATING INSTRUCTIONS

This section details how to operate your Crosley C65A turntable.



Image 4.1: Front panel controls of the turntable.

1. **Power On/Off:** Turn the 'ON/OFF' knob clockwise to power on the unit. Turn it counter-clockwise to power off.

2. **Playing a Record:**

- Place a record on the platter. If playing a 45 RPM single, use the included 45 RPM adapter.
- Select the appropriate speed (33 1/3 or 45 RPM) using the speed selector switch.
- Gently lift the tonearm using the cueing lever.
- Position the tonearm over the desired track on the record.
- Lower the cueing lever to gently drop the stylus onto the record.
- Adjust the 'VOLUME' knob to your desired listening level.
- Use the 'PITCH' control knob to fine-tune the playback speed if needed.

## Powerful 50 Watt Stereo Speakers *for high fidelity stereo sound*



Image 4.2: Detail of the tonearm and pitch control.

3. **Stopping Playback:** Lift the tonearm using the cueing lever, return it to the tonearm rest, and lower the cueing lever.

## 5. BLUETOOTH CONNECTIVITY

The Crosley C65A features a built-in Bluetooth receiver, allowing you to stream music from your mobile device through the turntable's speakers.

1. **Activate Bluetooth:** Ensure the turntable is powered on. The Bluetooth indicator light will typically blink, indicating it is in pairing mode.
2. **Pairing:** On your mobile device, enable Bluetooth and search for available devices. Select "Crosley C65A" from the list.
3. **Connection Confirmation:** Once paired, the Bluetooth indicator light on the turntable will become solid. You can now stream audio from your device to the turntable's speakers.

- Standard Half-inch Mount with Replaceable Cartridge
- Pre-Mounted Moving Magnet Audio Technica Cartridge



Image 5.1: Bluetooth streaming from a mobile device to the turntable.

## 6. EXTERNAL CONNECTIONS

The turntable offers various connection options for integration with existing audio systems.



Image 6.1: Rear panel connections.

- **RCA Output (PHONO/LINE):** Use the RCA output jacks to connect the turntable to an external amplifier or

powered speakers.

- **Switchable Preamp:** The turntable features a built-in switchable preamp. Use the PHONO/LINE switch to select the appropriate output level:
  - Set to **LINE** if connecting to an amplifier's auxiliary input or powered speakers that do not have a dedicated phono input.
  - Set to **PHONO** if connecting to an amplifier with a dedicated phono input (which includes its own preamp).

## 7. MAINTENANCE

Regular maintenance helps preserve the performance and appearance of your turntable.

- **Cleaning the Unit:** Wipe the turntable and dust cover with a soft, dry, lint-free cloth. Avoid using abrasive cleaners or solvents.
- **Stylus Care:** The stylus (needle) is a delicate component. Use a soft brush designed for stylus cleaning to gently remove dust and debris. Brush from back to front.
- **Record Care:** Keep your records clean and free of dust. Store them vertically in their sleeves to prevent warping.
- **Belt Replacement:** The drive belt may need replacement after extended use. Refer to the manufacturer's guidelines for replacement parts and instructions.

## 8. TROUBLESHOOTING

If you encounter issues, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not active	Ensure power adapter is securely connected and plugged into a working outlet.
No sound from speakers	Speakers not connected; volume too low; incorrect input selected (if using external amp)	Check speaker wire connections; increase volume; ensure correct PHONO/LINE setting or input on external amplifier.
Sound distorted or skipping	Dirty record/stylus; incorrect tracking force; turntable not level; damaged stylus	Clean record and stylus; adjust counterweight for proper tracking force; ensure turntable is on a level surface; replace stylus if damaged.
Turntable speed incorrect	Incorrect speed selected; pitch control misadjusted; worn drive belt	Verify speed selector (33/45 RPM); adjust pitch control; inspect and replace drive belt if worn.
Bluetooth not pairing	Turntable not in pairing mode; device too far; interference	Ensure turntable is powered on and Bluetooth indicator is blinking; move device closer; restart both devices.

## 9. SPECIFICATIONS

Key technical specifications for the Crosley C65A Turntable:

- **Model Name:** C65A
- **Product Dimensions:** 14.5" L x 29" W x 8.25" H

- **Item Weight:** 22.2 pounds
- **Brand:** Crosley
- **Maximum Rotational Speed:** 45 RPM (also supports 33 1/3 RPM)
- **Special Feature:** Built-In Bluetooth Receiver
- **Material:** Plastic (with Walnut finish)
- **Included Components:** Turntable, Turntable Lid, Turntable Platter, Rubber Slipmat, 45 RPM Adapter, Tonearm Counterweight, Drive Belt, Power Adapter, Speakers (2), Speaker Wires (2), Cartridge Alignment Protractor
- **Cartridge:** Pre-mounted Moving Magnet Audio-Technica Cartridge
- **Speaker Output:** 50W Peak, 40W RMS, 20W RMS x 2
- **Frequency Response:** 20Hz - 20KHz
- **Max Power Consumption:** 60 watts

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Crosley website. Crosley products are designed in the USA and come with USA-based customer support.


**Return Policy:** This product typically has a 30-day return policy for refund or replacement, subject to retailer terms.

### Related Documents - C65A

 <p><b>CROSLEY</b> C72A-W A C72A Turntable Instruction Manual</p> <p>Before starting to use your Crosley® product, please read this manual. For service, contact your authorized Crosley dealer or Crosley Customer Service. 1-888-CROSLEY www.crosleyradio.com</p>	<p><a href="#"><b>Crosley C72A Turntable Instruction Manual</b></a></p> <p>This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting the Crosley C72A Turntable. It includes detailed specifications, safety warnings, and component descriptions.</p>
 <p><b>CROSLEY</b> CR8005D Cruiser Deluxe Turntable Instruction Manual</p> <p>Before starting to use your Crosley® product, please read this manual. For service, contact your authorized Crosley dealer or Crosley Customer Service. 1-888-CROSLEY www.crosleyradio.com</p>	<p><a href="#"><b>Crosley CR8005D Cruiser Deluxe Turntable: User Manual &amp; Features</b></a></p> <p>Comprehensive guide to the Crosley CR8005D Cruiser Deluxe Turntable, covering setup, operation, Bluetooth, maintenance, and troubleshooting for your vinyl listening experience.</p>
 <p><b>CROSLEY</b> C62A C62 Turntable Instruction Manual</p>	<p><a href="#"><b>Crosley C62A Turntable: Official Instruction Manual &amp; User Guide</b></a></p> <p>Download the official Crosley C62A turntable instruction manual. This guide provides detailed steps for setup, operation, needle replacement, maintenance, troubleshooting, and technical specifications for your Crosley C62A record player.</p>

 <p><b>CROSLEY®</b> CR8017A Voyager Turntable Instruction Manual</p> <p>Questions, problems, missing parts? Contact: 1-800-CROSLEY • Friday 8 a.m. - 4 p.m. EST, Monday - Friday www.crosleyradio.com</p>	<p><a href="#"><b>Crosley CR8017A Voyager Turntable: Instruction Manual &amp; Operation Guide</b></a></p> <p>Comprehensive instruction manual for the Crosley CR8017A Voyager Turntable. Learn how to set up, operate, maintain, and troubleshoot your vinyl record player. Includes safety instructions and specifications.</p>
 <p><b>CROSLEY®</b> CR7017B Coda Turntable Instruction Manual</p> <p>Questions, problems, missing parts? Contact: 1-800-CROSLEY • Friday 8 a.m. - 4 p.m. EST, Monday - Friday www.crosleyradio.com</p>	<p><a href="#"><b>Crosley CR7017B Coda Turntable: User Manual and Setup Guide</b></a></p> <p>Comprehensive instruction manual for the Crosley CR7017B Coda Turntable. Learn about safety instructions, package contents, specifications, product description, setup, operation, maintenance, troubleshooting, and compliance information.</p>
 <p><b>CROSLEY®</b> CR8005F Cruiser Deluxe Turntable Instruction Manual</p> <p>Questions, problems, missing parts? Contact: 1-800-CROSLEY • Friday 8 a.m. - 4 p.m. EST, Monday - Friday www.crosleyradio.com</p>	<p><a href="#"><b>Crosley CR8005F Cruiser Deluxe Turntable Instruction Manual</b></a></p> <p>Comprehensive instruction manual for the Crosley CR8005F Cruiser Deluxe Turntable, covering setup, operation, maintenance, troubleshooting, and safety guidelines.</p>

Documents - Crosley – C65A

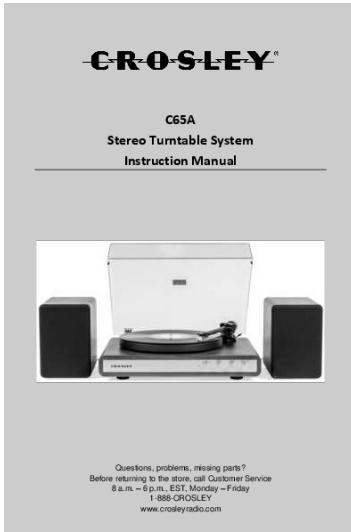


[\[pdf\]](#) User Manual Instructions Label

English Kelvin Yang C65A Stereo Turntable System Instruction Manual c65a c65recordplayerwspeakers bax shop nl products 9000 0135 3301 |||

**C65A** Stereo Turntable System Instruction Manual Questions, problems, missing parts Before returning to the store, call Customer Service 8 a.m. 6 p.m., EST, Monday Friday 1-888-CROSLEY www.crosleyradio.com English Safety Instructions Read and understand this entire manual before using this produ...

lang:en score:47 filesize: 470.47 K page\_count: 10 document date: 2024-05-29

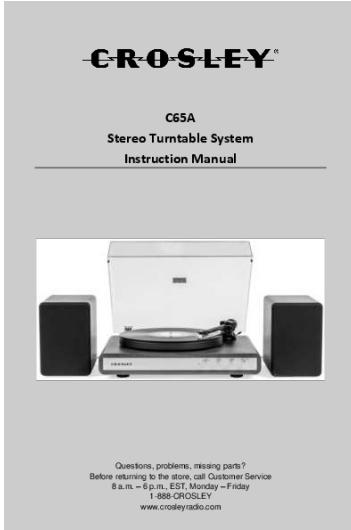

[\[pdf\]](#) User Manual Instructions Label

Kelvin Yang User manual Modern Marketing Concepts Inc C65A AUSC65A c65a

**C65A** Stereo Turntable System Instruction Manual Questions, problems, missing parts Before returning to the store, call Customer Service 8 a.m. 6 p.m., EST, Monday Friday 1-888-CROSLEY www.crosleyradio.com English Safety Instructions Read and understand this entire manual before using this produ...

lang:en score:34 filesize: 1016.88 K page\_count: 30 document date: 2024-05-29



C65A  
Stereo Turntable System  
Instruction Manual




Questions, problems or missing parts?  
Contact us on website [www.crosleyradio.eu](http://www.crosleyradio.eu),  
service@crosleyradio.eu or 31 (0)306622470.  
Crosley products are distributed in Europe by: SF Distributions BV,  
Winthontlaan 30A  
3526 KV Utrecht  
The Netherlands  
[www.sfdistributions.com](http://www.sfdistributions.com)

### [\[pdf\] User Manual Instructions Label](#)

Kelvin Yang C65 Record Player Enhance Your Music ExperienceC65A Multilingual Manual 020625cdn  
shopify s files 1 0095 7687 4080 C65A 020625 v 1759485746 |||


**C65A** Stereo Turntable System Instruction Manual Questions, problems or missing parts Contact us on our website [www.crosleyradio.eu](http://www.crosleyradio.eu), service [crosleyradio.eu](mailto:crosleyradio.eu) or 31 0 306622470. Crosley products are distributed in Europe by: SF Distributions BV. Winthontlaan 30A 3526 KV Utrecht The Netherlands [www.sf...](http://www.sf...)  
lang:en **score:31** filesize: 1.8 M page\_count: 60 document date: 2025-02-06

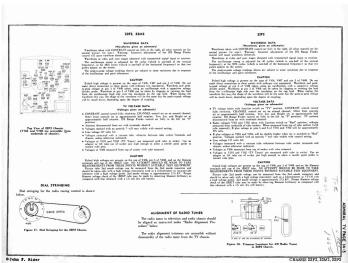

### [Admiral Television and Radio Chassis Service Manuals: 22F2, 22M2, 22P2, 23B1AZ, 20A2, 20L2 & More](#)

Comprehensive service manual and schematics for Admiral televisions and radios, covering chassis models including 22F2, 22M2, 22P2, 23B1AZ, 23C1AZ, 20A2, 20L2, and others. Find detailed technical information, alignment procedures, and troubleshooting guides.

lang:en **score:12** filesize: 118.87 M page\_count: 1158 document date: 2022-05-06

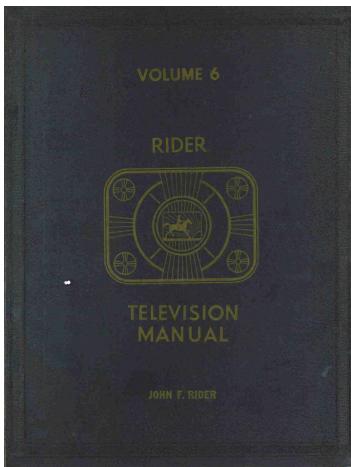

### [Rider Television Manual Volume 6: Service and Technical Guide](#)

Comprehensive service manual for Rider Television Manual Volume 6, detailing alignment procedures, parts lists, troubleshooting, and technical specifications for vintage Rider and Admiral television models.

lang:en **score:9** filesize: 109.29 M page\_count: 1157 document date: 2022-05-11