

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Besia](#) /
- › [Universal Roku Remote Control User Manual](#)

Besia Roku-T4026

Universal Roku Remote Control User Manual

Model: Roku-T4026 | Brand: Besia

INTRODUCTION

Thank you for purchasing the Besia Roku-T4026 Universal 2-in-1 Remote Control. This remote is designed to simplify your entertainment experience by controlling both your Roku streaming devices and various Roku-enabled televisions. Please read this manual carefully to ensure proper setup and operation of your new remote control.



Image: Two Besia Roku-T4026 universal remote controls, showcasing the front view with all buttons clearly visible. The remote is black with purple directional pad and various app shortcut buttons.

PRODUCT OVERVIEW

The Roku-T4026 is a versatile 2-in-1 universal remote control. It includes most Roku functions and is designed to control both Roku Set-Top Boxes (STB) and Roku TVs. Its compact design ensures comfortable handling.

Key Features:

- **2-in-1 Functionality:** Controls both Roku STB and Roku TVs.
- **Customized Buttons:** Dedicated buttons for quick access to frequently used Roku functions.
- **Brand Compatibility:** Programmable to control TVs from various brands that have built-in Roku functionality.
- **No Programming Required:** For basic Roku STB functions, the remote works out of the box.



Image: A detailed diagram of the Roku-T4026 remote control, highlighting key buttons such as TV Mute & STB switch, TV Power & switch, TV and STB function buttons (directional pad, OK), Roku TV Volume controls, and Roku special function buttons (app shortcuts).

SETUP GUIDE

1. Installing Batteries:

The remote requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: The back of the Roku-T4026 remote control with the battery cover removed, revealing the battery compartment. Two AAA batteries are shown correctly inserted, indicating polarity.

2. Setting Up Device Mode (Roku STB / TV):

This remote is a 2-in-1 universal control. You can switch between Roku STB mode and TV mode. The blue text printed on the buttons indicates the device mode functions.

- **For Roku STB Device Mode:**

- a. Press and hold the **Power** button.
- b. While holding **Power**, press the **STB** button (usually located near the top).
- c. Release both buttons. The remote is now set for Roku STB control.

- **For TV Mode:**

- a. Press and hold the **Power** button.
- b. While holding **Power**, press the **TV** button (usually located near the top).
- c. Release both buttons. The remote is now set for TV control.

If the remote does not function as expected after setting the mode, please repeat the above process.

OPERATING INSTRUCTIONS

Once set up, the remote operates similarly to your original Roku or TV remote. Refer to the button diagram in the Product Overview section for specific button functions.

Basic Functions:

- **Power Button:** Turns your Roku device or TV on/off depending on the selected mode.
- **Directional Pad (Up, Down, Left, Right) and OK Button:** Navigate menus and select items.
- **Home Button:** Returns to the main home screen of your Roku device or TV.
- **Back Button:** Goes back to the previous screen or menu.
- **Volume Up/Down:** Controls the volume of your TV (in TV mode).
- **Mute Button:** Mutes/unmutes the TV sound (in TV mode).
- **App Shortcut Buttons (e.g., Netflix, Amazon, Hulu):** Directly launch specified streaming applications.

Returning to Initial Roku STB State:

If you have configured the remote for TV control and wish to revert to its original Roku STB functionality (without TV control), follow these steps:

1. Press and hold the **Power** button.
2. While holding **Power**, press the **STB** button (blue font).
3. Release both buttons. The remote will now primarily control your Roku STB.

COMPATIBILITY

Roku STB Compatibility:

This remote is compatible with most Roku Player Boxes, including:

- Roku Ultra
- Roku 1, 2, 3, 4
- Roku Express
- Roku Premiere
- Roku LT, HD, XD, XS

Note: This remote is generally **NOT compatible with Roku Stick** devices.

For Roku Player Box

Roku Ultra
Roku 1,2,3,4
Roku Express
Roku Premiere
Roku LT, HD, XD, XS



Not For Roku Stick



Image: A visual guide illustrating the compatibility of the remote. It shows various Roku Player Box models (e.g., Roku Ultra, Express, Premiere) with a green checkmark, indicating compatibility. Below, several Roku Stick models are shown with a red 'X', indicating incompatibility.

Roku TV Compatibility:

The remote is designed to work with most built-in Roku Smart TVs from various brands, including but not limited to:

- LG
- Sanyo
- Hitachi
- Philips
- Insignia
- Hisense
- Sharp
- ONN
- Westinghouse
- TCL Roku TV
- Haier Roku TV
- RCA Roku TV
- Element Roku TV

Work for All **Built-in** ROKU Smart TVs

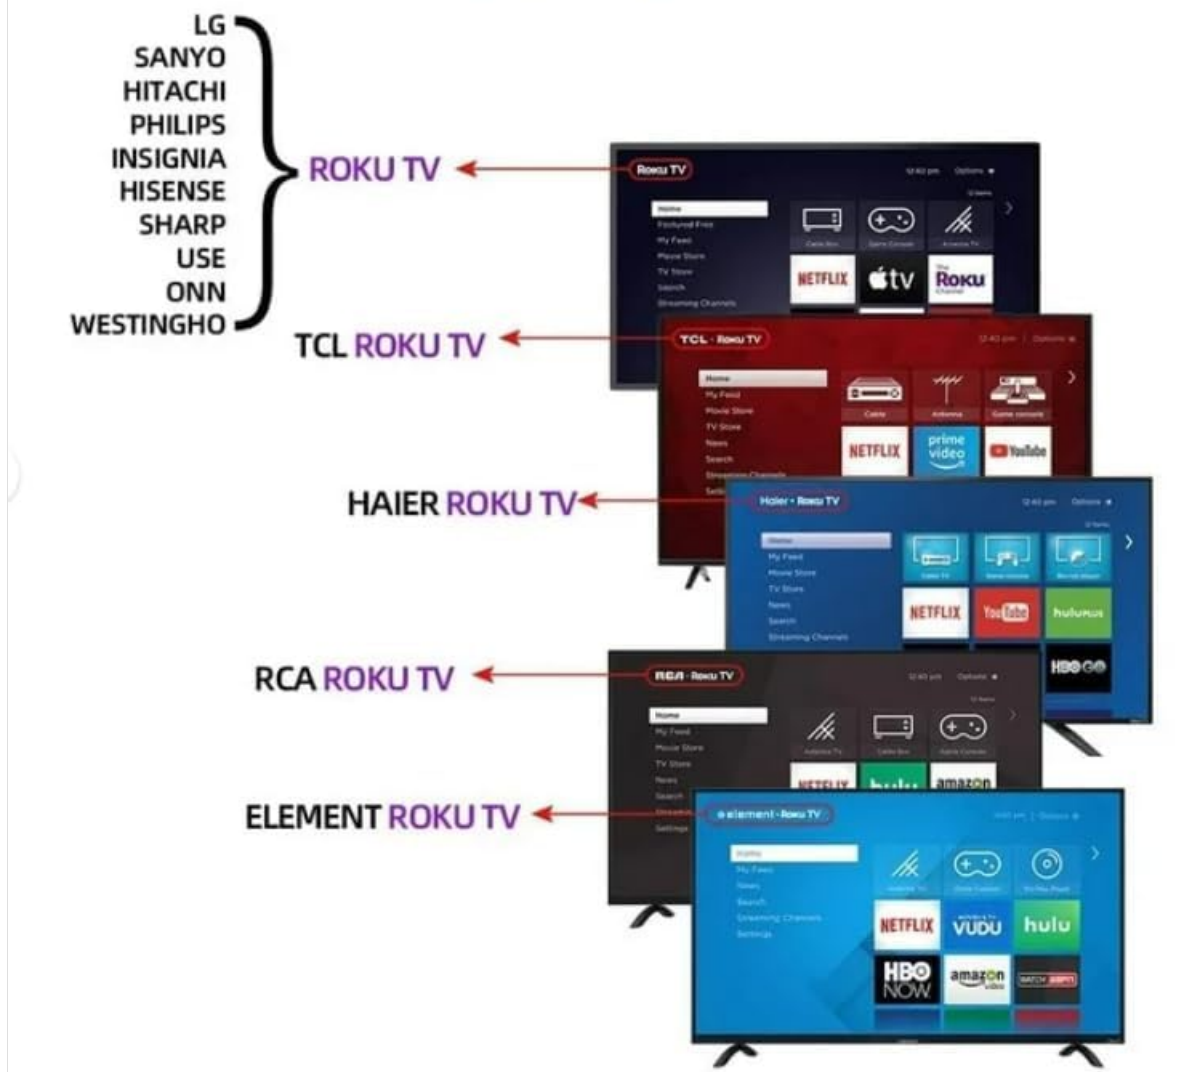


Image: A visual representation of various Roku Smart TV brands (LG, Sanyo, Hitachi, Philips, Insignia, Hisense, Sharp, ONN, Westinghouse, TCL, Haier, RCA, Element) that are compatible with the remote. Each brand is associated with a screenshot of a typical Roku TV interface.

TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are inserted correctly with proper polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote and the device's IR receiver.
- Verify the remote is pointed directly at the device.

- **Specific functions not working (e.g., TV volume):**

- Confirm the remote is in the correct device mode (e.g., TV mode for TV functions). Refer to the "Setting Up Device Mode" section.
- As this product is a Roku TV & STB combo, a few special function keys may not be available under some specific devices. This remote contains most common Roku function keys.

- **Remote not controlling Roku STB:**

- Ensure the remote is set to Roku STB device mode. Refer to the "Setting Up Device Mode" section.
- If you previously set it to TV mode, follow the "Returning to Initial Roku STB State" instructions.

SPECIFICATIONS

Model	Roku-T4026
Brand	Besia
Connectivity Technology	Infrared (IR)
Compatible Devices	Roku STB, Roku Smart Televisions
Max Number of Supported Devices	1 (2-in-1 functionality for STB/TV)
Special Feature	No Programming Required (for basic Roku STB functions)
Power Source	2 x AAA Batteries (not included)
Dimensions	Approximately 5.5 inches (14 cm) long, 1.75 inches (4.4 cm) wide

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's return policy or contact the manufacturer directly. Details regarding specific warranty periods or support channels are typically provided at the point of purchase or on the product packaging.

For general inquiries or further assistance, you may visit the [Besia Store on Amazon](#).