

warmow TYUR123

warmow Ultrasonic Anti-Barking Device TYUR123 User Manual

Model: TYUR123 | Brand: warmow

1. PRODUCT OVERVIEW

The warmow Ultrasonic Anti-Barking Device TYUR123 is designed to assist in modifying undesirable dog behaviors such as excessive barking, chewing, digging, and chasing. It utilizes advanced ultrasonic technology to emit sounds audible to dogs but generally imperceptible to humans, serving as a gentle deterrent. The device features multiple operational modes, an integrated LED flashlight, and a high-definition display for ease of use.



Image 1.1: The warmow Ultrasonic Anti-Barking Device, shown with two dogs, illustrating its intended use for behavior modification.

Key Features:

- **Efficient Behavior Modification:** Helps interrupt the Bark Reflex Loop to address barking, chewing, and chasing.
- **Customizable Training Modes:** Three distinct modes for specific behavior correction.
- **Attention-Grabbing Light Modes:** Includes always-on and fast-flashing light settings.
- **Extended Battery Life:** Up to 30 days of use on a 1-hour USB-C charge.
- **Multi-Scenario Applicability:** Suitable for various environments including city streets, parks, and home use.

2. SETUP AND CHARGING

Charging the Device:

Before initial use, fully charge the device. The warmow Ultrasonic Anti-Barking Device features a USB Type-C charging port for convenience.

1. Locate the USB Type-C charging port on the device.
2. Connect the provided USB Type-C cable to the device and plug the other end into a compatible USB power source (e.g., wall adapter, computer, power bank).
3. The HD display will indicate charging status. A full charge typically takes approximately 1 hour and provides up to 30 days of standby battery life.



USB TYPE-C PORT CAN BE USED TO CHARGE A VARIETY OF DEVICES



USB Socket
Charging Port



Power Bank



Laptop



Charger

Image 2.1: The device connected via its USB Type-C port for charging, demonstrating compatibility with various power sources.

Powering On/Off:

Locate the ON/OFF switch on the side of the device. Slide the switch to the 'ON' position to power on the device. Slide it to the 'OFF' position when not in use to conserve battery.

3. OPERATING INSTRUCTIONS

The device offers three distinct modes for training and behavior modification, along with an integrated flashlight function.

EASY TO USE



Image 3.1: Labeled diagram of the warmow device, indicating the flashlight button, normal ultrasound button, enhanced ultrasound button, HD color screen, flashlight, ultrasonic transmitter, ON/OFF switch, USB Type-C charging port, and tether hole.

Understanding the Modes:

- **Normal Ultrasound Mode:** Emits a standard ultrasonic frequency. Suitable for general behavior correction and sensitive dogs.
- **Enhanced Ultrasound Mode (MAX):** Emits a stronger ultrasonic frequency. Use for more stubborn behaviors or in situations requiring a more pronounced deterrent effect.
- **Flashlight Mode:** Activates the LED flashlight for illumination. Can also be used to grab a dog's attention.



HIGH POWER ULTRASONIC

Stimulate the dog's hearing to make it feel scared

ONE DEVICE WITH MULTIPLE FUNCTIONS



High-power LED flash lights illuminate the road

Image 3.2: Illustration of the device's high-power ultrasonic function on a barking dog and the LED flashlight illuminating a path during a walk.

Using the Device for Behavior Correction:

1. **Identify the Behavior:** Observe your dog to understand the specific unwanted behavior (e.g., barking at strangers, jumping on furniture).
2. **Choose the Mode:** Select either Normal or Enhanced Ultrasound mode based on the dog's responsiveness and the severity of the behavior. Start with Normal mode and adjust if necessary.
3. **Point and Activate:** Point the device directly at the dog from a distance of up to 6 meters (approximately 20 feet). Press and hold the corresponding ultrasound button (Normal or MAX) for 1-3 seconds. Release the button once the dog stops the unwanted behavior.
4. **Combine with Commands:** For best results, use the device in conjunction with verbal commands (e.g., "Quiet," "No"). This helps the dog associate the ultrasonic sound with the command and the cessation of the behavior.
5. **Positive Reinforcement:** When your dog stops the unwanted behavior, reward them with praise or a treat. This reinforces the desired action.
6. **Flashlight Use:** Press the flashlight button to activate the LED light. This can be used for visibility in low-light conditions or as an additional attention-grabbing tool during training.

YOUR PEACE OF MIND



Image 3.3: Visual guide for training tips, emphasizing using the device as an aid with commands and rewards, and choosing the appropriate training mode.

Important Considerations:

- **Consistency is Key:** Use the device consistently every time the unwanted behavior occurs.
- **Avoid Overuse:** Do not use the device for prolonged periods or as punishment. It is a training aid, not a punitive tool. Overuse may desensitize the dog.
- **Individual Dog Response:** Not all dogs respond identically to ultrasonic devices. Some dogs may be more sensitive than others.
- **Range:** The effective ultrasonic range is approximately 6 meters (20 feet).

4. MAINTENANCE AND CARE

Cleaning:

Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners, as these can damage the device's surface or internal components.

Storage:

Store the device in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the device is powered off when not in use for extended periods.

Battery Care:

To prolong battery life, avoid fully discharging the device frequently. Recharge the device when the battery indicator shows low power. If storing for a long time, charge the device periodically (e.g., every 3-6 months) to maintain battery health.

5. TROUBLESHOOTING

Device Not Turning On:

- Ensure the ON/OFF switch is in the 'ON' position.
- Charge the device fully. The battery may be depleted.

Dog Not Responding to Ultrasonic Sound:

- **Check Distance:** Ensure you are within the effective range of 6 meters (20 feet).
- **Try Enhanced Mode:** If your dog is not responding to Normal Ultrasound, switch to Enhanced Ultrasound (MAX) mode.
- **Consistency:** Ensure consistent use every time the unwanted behavior occurs. Inconsistent application can reduce effectiveness.
- **Individual Differences:** Some dogs may be less sensitive to ultrasonic frequencies. The device may not be effective for all dogs.
- **Combine with Training:** Always use the device as an aid to training, not a standalone solution. Pair it with verbal commands and positive reinforcement.

Flashlight Not Working:

- Ensure the device is powered on.
- Check battery level and recharge if necessary.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand Name	warmow
Model Name	TYUR123
Item Weight	4.6 ounces
Item Package Dimensions L x W x H	5.55 x 3.94 x 1.26 inches
Color	Black
Included Components	Dog Bark Deterrent Devices
Specific Uses for Product	Dog Bark Deterrent Device
Power Source	Rechargeable Battery (USB Type-C)
Effective Ultrasonic Range	Up to 6 meters (20 feet)

7. WARRANTY INFORMATION

This warmow product is covered by a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, please refer to the manufacturer's official website or contact

customer support.

8. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty inquiries regarding your warmow Ultrasonic Anti-Barking Device TYUR123, please contact our customer support team.

- **Website:** Visit the official warmow website for FAQs and support resources.
- **Email:** Refer to your product packaging or the warmow website for customer service email contact.