

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli CT-8557 RC43157 Replacement Remote Control User Manual for Toshiba Smart TVs

Effireli YK-CT-8557

Effireli CT-8557 RC43157 Replacement Remote Control User Manual

For Toshiba Smart TVs

INTRODUCTION

This manual provides instructions for the Effireli CT-8557 RC43157 Replacement Remote Control, designed for various Toshiba Smart TV models. This remote is pre-programmed and requires no setup, allowing for immediate use.

Please read this manual carefully to understand the functions and ensure proper operation of your replacement remote control.

PRODUCT OVERVIEW



Image: The Effireli CT-8557 RC43157 Replacement Remote Control. This image displays the full layout of the remote, including the power button at the top, numerical keypad, volume and channel controls, navigation pad, and dedicated app buttons for Netflix and YouTube,

along with media playback controls and colored function buttons at the bottom.

The Effireli CT-8557 RC43157 remote control is a direct replacement designed to function seamlessly with compatible Toshiba TV models. It features a standard layout with dedicated buttons for common TV functions and popular streaming services.

SETUP

The Effireli CT-8557 RC43157 replacement remote control is designed for immediate use with compatible Toshiba TV models. No programming or setup is required.

1. **Insert Batteries:** Open the battery compartment cover on the back of the remote. Insert two AAA batteries (not included), ensuring correct polarity (+/-).
2. **Point and Operate:** Point the remote control directly at your Toshiba TV. The remote is now ready for operation.

Note: If the remote does not respond, ensure the batteries are correctly inserted and have sufficient charge. Also, verify that your TV model is listed in the compatible models section of this manual.

OPERATING INSTRUCTIONS

Familiarize yourself with the key functions of your remote control:

- **Power Button (⏻):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select TV channels.
- **Volume Up/Down (+/-):** Adjusts the TV's volume level.
- **Channel Up/Down (P ^ / P v):** Changes TV channels sequentially.
- **Mute Button (⏻):** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Home Button (🏠):** Returns to the TV's home screen or smart TV interface.
- **Back/Exit Buttons:** Returns to the previous screen or exits a menu.
- **Netflix / YouTube Buttons:** Direct access to the respective streaming applications.
- **Menu Button:** Opens the TV's main menu for settings and options.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Record):** Controls playback of media content.
- **Colored Function Buttons (Red, Green, Yellow, Blue):** These buttons may have specific functions depending on the TV model or current on-screen menu.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use liquid or aerosol cleaners directly on the remote.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not responding.	◦ Check if batteries are inserted correctly with the correct polarity. ◦ Replace old batteries with new AAA batteries. ◦ Ensure there are no obstructions between the remote and the TV's infrared sensor. ◦ Confirm that your TV model is listed as compatible.
Certain buttons do not work.	◦ Some functions may be specific to your original TV remote or TV model. ◦ Ensure the TV is in the correct input mode (e.g., Smart TV mode for app buttons).

SPECIFICATIONS

- **Model Number:** YK-CT-8557 (CT-8557, RC43157)
- **Brand:** Effireli
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Television
- **Max Number of Supported Devices:** 1
- **Special Feature:** No Programming Required
- **Product Dimensions:** 6.69 x 1.42 x 0.47 inches
- **Item Weight:** 3.03 ounces

COMPATIBLE TOSHIBA TV MODELS

This replacement remote control is compatible with the following Toshiba TV models:

- 32WA2063DAI
- 32WA2063DG
- 65UA2063DG
- 43UA2063DG
- 58UA2063DG
- 43LA2063DG
- 32WA2063DA
- 55UA2063DG
- 49UA2063DG
- 55UA2063DA
- 24WA2063DG
- 55UA2063DAI
- 50UA2063DG
- 32LA2063DG
- 24WA2063DA
- 43UA2063DA
- 50UA2063DA

- 32LA2063DA

If your specific Toshiba TV model number is not listed above, or if your original remote control has a significantly different appearance, please contact the manufacturer or seller to confirm compatibility before use.

WARRANTY AND SUPPORT

This product comes with a **12-month warranty** covering manufacturing defects from the date of purchase. Additionally, a **30-day money-back guarantee** is offered. Returns and exchanges are accepted within the warranty period for eligible issues.

For technical support, warranty claims, or inquiries regarding product compatibility, please contact the seller or manufacturer directly through the platform where the product was purchased.

© 2025 Effireli. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DHPD261P>

More documents and user manuals: <https://manuals.plus/>

