

Redmi Redmi Pad SE 4G

Redmi Pad SE 4G Tablet User Manual

Model: Redmi Pad SE 4G

- [Overview](#)
- [Setup](#)
- [Operating](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Specifications](#)
- [Warranty](#)
- [Support](#)

1. PRODUCT OVERVIEW

The Redmi Pad SE 4G is a versatile tablet designed for connectivity and entertainment. It features 4G+4G calling capabilities, an 8.7-inch display with a 90Hz refresh rate, and a large 6650mAh battery. Enjoy rich audio with dual speakers and Dolby Atmos. This manual provides essential information to help you get started and make the most of your device.



Image 1.1: Redmi Pad SE 4G tablet, showcasing its sleek design.

Redmi Pad SE 4G



Image 1.2: Front view of the Redmi Pad SE 4G, highlighting the display.

2. INITIAL SETUP

2.1 Unboxing and Contents

Carefully unbox your Redmi Pad SE 4G. The package should contain the following items:

- Redmi Pad SE 4G Tablet
- Charger
- Protective Cover (may vary by region/bundle)

2.2 Powering On and Initial Configuration

1. Press and hold the power button located on the side of the tablet until the Redmi logo appears.
2. Follow the on-screen instructions to select your language, region, and connect to a Wi-Fi network.

3. Sign in with your Google account or create a new one to access Android services and the Google Play Store.

2.3 SIM Card Installation (for 4G Models)

The Redmi Pad SE 4G supports 4G+4G calling. To use cellular data and make calls:

1. Locate the SIM card tray on the side of the tablet.
2. Use the provided SIM ejector tool to open the tray.
3. Insert your 4G SIM card(s) into the designated slots. Ensure the gold contacts face downwards.
4. Carefully reinsert the tray into the tablet.

2.4 Attaching the Protective Cover

If included, attach the protective cover to safeguard your tablet. The cover often doubles as a stand for convenient viewing.

STEREO SPEAKERS WITH

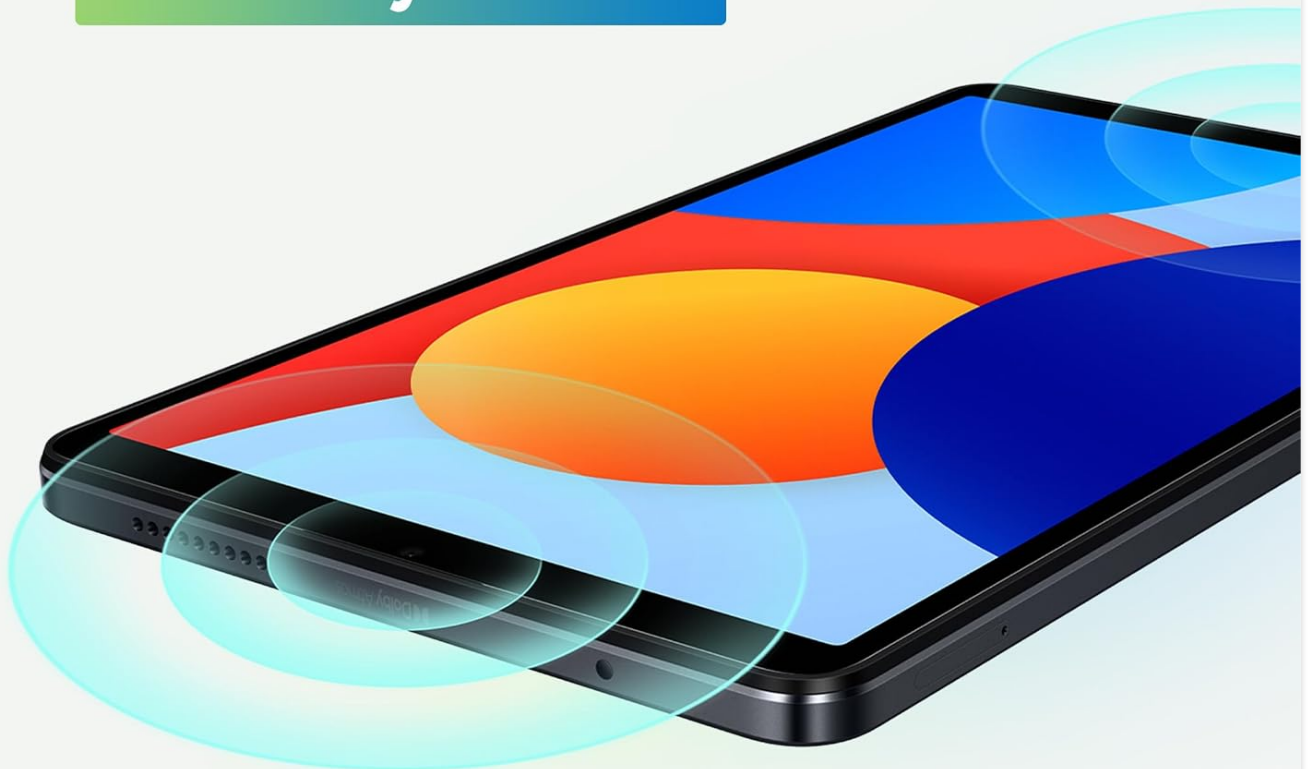


Image 2.1: Redmi Pad SE 4G with its protective cover, demonstrating its use as a stand.

3. OPERATING YOUR TABLET

3.1 Basic Navigation and Display

The Redmi Pad SE 4G features an 8.7-inch display with a 90Hz smooth refresh rate for fluid visuals. Navigate using touch gestures: tap to select, swipe to scroll, pinch to zoom.



Image 3.1: The Redmi Pad SE 4G held in hand, illustrating its large display within a compact form factor.

LONG LASTING

6650mAh (typ) BATTERY



Image 3.2: A visual demonstrating the smooth 90Hz refresh rate of the display.

3.2 4G Connectivity and Calling

With 4G+4G calling support, your tablet can function as a communication device. Insert your SIM card as described in Section 2.3 to make and receive calls, and access mobile data.

SEGMENT LEADING 90Hz SMOOTH REFRESH RATE

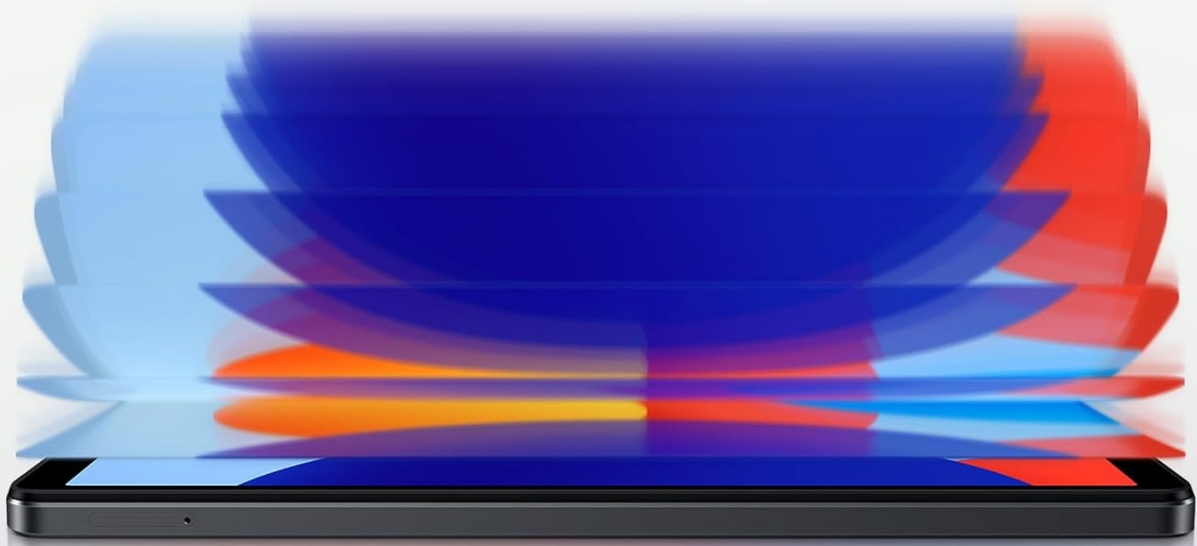


Image 3.3: The Redmi Pad SE 4G used for navigation, demonstrating its 4G capabilities on the go.

3.3 Audio Experience

The tablet is equipped with dual speakers and Dolby Atmos technology, providing an immersive audio experience for media consumption.

LARGE DISPLAY, COMPACT FORM FACTOR

22.09 CM

8.7 INCH

Image 3.4: Close-up of the Redmi Pad SE 4G speakers, highlighting Dolby Atmos audio.

3.4 Battery Management

The 6650mAh battery provides extended usage. To optimize battery life, adjust screen brightness, close unused applications, and enable power-saving modes when needed.

IP 53
DUST AND
SPLASH
RESISTANT



Image 3.5: An illustration of the large 6650mAh battery integrated into the Redmi Pad SE 4G.

3.5 Xiaomi HyperOS

Your Redmi Pad SE 4G runs on Xiaomi HyperOS, offering a streamlined and intuitive user experience. Regular software updates will provide new features and security enhancements.



Image 3.6: The Redmi Pad SE 4G displaying the Xiaomi HyperOS branding.

4. CARE AND MAINTENANCE

4.1 Cleaning Your Tablet

To clean the tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid harsh chemicals or abrasive materials.

4.2 Dust and Splash Resistance

The Redmi Pad SE 4G is IP53 dust and splash resistant. This means it is protected against limited dust ingress and water spray from any angle. However, it is not waterproof. Avoid submerging the device in water or exposing it to heavy rain.

REDMI PAD SE 4G

COVER



Image 4.1: The Redmi Pad SE 4G demonstrating its IP53 dust and splash resistance.

4.3 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to the latest features. You can usually find this option in the tablet's settings menu under 'About tablet' or 'System updates'.

5. TROUBLESHOOTING

If you encounter issues with your Redmi Pad SE 4G, refer to the following common solutions:

Problem	Possible Solution
Device not powering on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.

Problem	Possible Solution
Slow performance or app crashes	Close unused applications. Restart the tablet. Clear cache for problematic apps. Ensure sufficient storage space.
No 4G signal or calls	Check if the SIM card is correctly inserted. Ensure mobile data is enabled in settings. Verify your plan with your service provider. Try restarting the tablet.
Wi-Fi connection issues	Restart your Wi-Fi router and the tablet. Forget the network and reconnect. Ensure you are within range.
Charging slowly	Use the original charger and cable. Ensure the charging port is clean and free of debris. Avoid using the tablet heavily while charging.

6. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Redmi
Model Name	Redmi Pad SE 4G
Memory Storage Capacity	128 GB
RAM Memory Installed	4 GB
Screen Size	8.7 Inches (22.09 cm)
Display Resolution	1340 x 800 Pixels (1 Billion Colours)
Display Refresh Rate	90 Hz
Processor	Mediatek Helio G55 (2 GHz)
Operating System	Android (Xiaomi HyperOS)
Cellular Technology	4G (4G+4G Calling)
Wireless Technology	Wi-Fi, Bluetooth
Battery Capacity	6650 mAh
Rear Camera	8 MP
Audio Features	Dual Speakers, Dolby Atmos
Special Features	IP53 Dust and Splash Resistant
Item Weight	0.6 Kilograms
Dimensions (L x W x T)	21L x 2W x 12Th Centimeters

7. WARRANTY INFORMATION

The Redmi Pad SE 4G comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included in your product packaging or visit the official Redmi website.

8. CUSTOMER SUPPORT

For technical assistance, service inquiries, or further information regarding your Redmi Pad SE 4G, please contact Redmi customer support:

- **Email:** service.in@xiaomi.com
- Visit the official Redmi website for FAQs and support resources.

© 2026 Redmi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question