

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli AKB73715606 Replacement Remote Control User Manual

Effireli YK-AKB73715606

Effireli AKB73715606 Replacement Remote Control User Manual

Model: YK-AKB73715606

1. PRODUCT OVERVIEW

The Effireli AKB73715606 is a replacement remote control designed for various LG TV models. This remote is engineered for immediate use, requiring no complex programming or setup. Simply insert batteries, point, and operate your compatible LG television with ease.



Image 1.1: Front view of the Effireli AKB73715606 Replacement Remote Control. The remote is black with clearly labeled buttons for power, input, channel, volume, menu navigation, and playback controls. The model number AKB73715606 is

2. SETUP AND INSTALLATION

This remote control is designed for plug-and-play functionality. No manual programming or code entry is required.

1. **Insert Batteries:** Open the battery compartment cover on the back of the remote control. Insert two AAA batteries (not included), ensuring correct polarity (+ and -) as indicated inside the compartment.
2. **Close Compartment:** Securely close the battery compartment cover.
3. **Ready to Use:** The remote control is now ready to operate your compatible LG TV. Point the remote directly at your television's infrared receiver.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the primary functions of the remote control:

- **Power Button** (⏻): Turns the TV on or off.
- **TV INPUT:** Selects the video input source (e.g., HDMI 1, AV, Component).
- **Q.MENU:** Accesses the Quick Menu for common settings.
- **PICTURE:** Adjusts picture settings.
- **SOUND:** Adjusts sound settings.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **LIST:** Displays the channel list.
- **Q.VIEW:** Switches between the current and previously viewed channel.
- **FAV:** Accesses favorite channels.
- **I/II:** Selects dual audio or input options.
- **P PAGE** (⏮): Changes channels up or down.
- **MUTE** (🔇): Mutes or unmutes the TV sound.
- **TIME:** Accesses time-related functions.
- **REVEAL:** Reveals hidden text on teletext.
- **UPDATE:** Updates teletext pages.
- **SETTINGS:** Accesses the main TV settings menu.
- **HOLD:** Holds the current teletext page.
- **Navigation Buttons** (⬆️⬇️⬅️➡️⬆️): Up, Down, Left, Right arrows for menu navigation, and **OK** for selection.
- **BACK** (⬅️): Returns to the previous menu or screen.
- **EXIT:** Exits the current menu or application.
- **TEXT:** Activates or deactivates Teletext.
- **INDEX:** Displays the Teletext index page.
- **Playback Controls** (⏮⏸⏭⏹): Rewind, Play, Pause, Fast Forward, Stop for media playback.
- **Colored Buttons** (🔴🟢🟡🔵): Red, Green, Yellow, Blue buttons for specific functions within menus or applications.

4. COMPATIBLE MODELS

This replacement remote control is compatible with a wide range of LG TV models. Please verify your TV model number against the list below. If your model is not listed or your original remote appears different,

please contact the manufacturer for compatibility confirmation.

Compatible LG TV Models include: 42LH301C, 42LH4010, 42LH5700, 42LK430, 42LM620S, 42LN5200, 42LN549C, 42LN575S, 42LY99-ZC, 42PN450D, 42PQ2000-ZA, 42PQ6000, 42PX2RVA, 42LA6136AEU, 40UF675V, 40UB800V.AEU, 42LB5700, 42LB650V, 42LE4500, 42LE7300, 42LE8500ZA, 425010, 427000-ZA, 42LB550V.AEU, 42LB580V, 42LB582V, 42LC2DEC, 42LC2RR42LC2RRZLAENLLBP, 42LC2RR42LC2RRZLAEULLEG, 42LC2RR42LC2RRZLAMALLH, 42LC2RRZL, 42LD420ZABEUWLJG, 29MT45D-PR, 32LB580V, 32LE4500, 32LF2510, 325000-ZA, 32LH2020, 32LH3800, 32LH5000, 32LH7020, 32LK450, 32LN549C, 32LN570R, 32LN575S, 27MA53D-PZ.AEU, 28LB457U, 28LX320C, 28LX320C.AEU, 28LY330C, 29LN460R, 32LV4500, 32LB1DEC, 32LB550B, 32LB5610, 32LF561V, 32LF561V.AEU, 32LF5800, 32LG2000, 32LG3000, 32LG5010, 32LG5030AEU, 32LG6000AEU, 32LH2000AEUJ, 32LH20D-AA, 32LB580U, 32LC2DFCAFRLLJP, 32LD320-ZA.CEUDLH, 32LD350, 32LD350N-ZA, 32LD420.AEU, 32LD460, 32LD565AEU, 32LE3300-ZA, 26LH201C, 26LN457B, 26LV2500, 26LD325, 26LG3100ZA, 26LH250C.AEUB, 26LT640H, 26LX1R-ZE, 19LS4D-ZB, 19LU5010-ZB, 19LV250UAEKQ, 19MN43D, 19MN43D-PZ, 22LE3320-ZA, 22LU4010, 19LU5010, 19LD320ZA, 19LG3050AEK, 19LH2000ADRB, 19LH2000ARU, 24MT35S, 24MT57D, 22LD320-ZA, 22LD350.AEUQ, 22LE5500-ZA, 22LG3100-ZA, 22LH2000AEK, 22LH200HAEU, 22LH250C22LH250CZAAEU DLBP, 22LK336CAEU, 22LV2500-ZA, 22LV5500AEU, 22LY330C, 22LY340C, 22MA33D-PRP.AEUNLUP, 22MT44D, 22MT44D-PZ, 22MT47D, 23LEDMONITORTVM2380D, 24MN33D-PZ.AEU, 32LE5500AEU, 32LF2510-ZB, 32LF510B, 32LF510U, 32LF5610, 42LD450N-ZA, 37LP1D, 37LT640H, 37LT640HZAAEUWLJG, 37LV355CAEU, 37LV4500AEU, 37LY95, 39LN575S, 39LB570V-ZB, 39LN5404, 39LN5406.AEU, 32LN5400, 32LN540B, 37LN540B, 39LN5400, 4255LB561, 60LB561, 60PB561, 50LN5400, 50PN450B, 50PN6500, LN5400, 42PN450B, 47LN5400, 39LB561, 49LB550, 47LB561, 50LB561, 50PB560, 60PN6500, 32LS550, 32LB561.

5. MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Make sure you are within the effective operating range of the TV.
- **Some buttons not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
 - Ensure the remote is compatible with your specific TV model.

7. SPECIFICATIONS

Brand	Effireli
Model Number	YK-AKB73715606
Product Dimensions	5.91 x 1.97 x 0.59 inches

Item Weight	2.12 ounces
Connectivity Technology	Infrared
Compatible Devices	Television
Special Feature	No Programming Required
Max Number of Supported Devices	1

8. WARRANTY AND SUPPORT

Your Effireli AKB73715606 Replacement Remote Control comes with the following:

- **30-Day Money-Back Guarantee:** If you are not satisfied with your purchase, you may return it within 30 days for a full refund.
- **12-Month Warranty:** A 12-month warranty covers manufacturing defects. Returns and exchanges are accepted within this warranty period.

For further assistance or warranty claims, please contact the seller directly through the platform where the purchase was made.