

Ninja MC1000

Ninja Foodi Possible Cooker PRO 8.5Qt Multicooker

MODEL: MC1000

Instruction Manual

Introduction

The Ninja Foodi Possible Cooker PRO 8.5Qt Multicooker MC1000 is a versatile 8-in-1 appliance designed to simplify your cooking experience. It combines the functions of a slow cooker, Dutch oven, steam baker, roaster, seamer, sauté pan, bread maker, and warmer. Featuring Triple Fusion Heat Technology, this multicooker aims to cook up to 30% faster than conventional ovens by utilizing bottom, side, and steam heating elements. Its removable, nonstick pot is oven-safe up to 500°F and dishwasher-safe for easy cleanup.

Key Features

- **Triple Fusion Heat Technology:** Combines bottom, side, and steam heat for faster cooking.
- **8-in-1 Versatility:** Functions as a slow cooker, Dutch oven, steam baker, roaster, seamer, sauté pan, bread maker, and warmer.
- **8.5-Quart Capacity:** Ideal for family meals and entertaining.
- **Oven-Safe Pot:** Removable cooking pot is oven safe up to 500°F, allowing for finishing meals in the oven.
- **Easy Cleanup:** Nonstick pot and lid are dishwasher safe.
- **Integrated Utensil:** Includes a multi-functional utensil that rests conveniently on the lid.

Components Overview

The Ninja Foodi Possible Cooker PRO consists of several key components designed for optimal performance and convenience:

Triple Fusion Heat[®]

—TECHNOLOGY—



**BOTTOM
HEAT**

**SIDE
HEAT**

**STEAM
HEAT**

Triple Fusion Heat[®]

Combines bottom, side, and steam heat to cook food up to 30% faster than a conventional oven.*

*tested on 6-lb chickens

Overall Product View: The Ninja Foodi Possible Cooker PRO 8.5Qt Multicooker, showcasing its cherry red exterior, control panel, glass lid, and integrated spoon. This image provides a complete view of the appliance.



Perfect for entertaining

Feed a crowd with 8.5-qt capacity.

Detailed Components: An exploded view illustrating the multi-functional utensil, clear oven-safe glass lid, removable oven-safe pot with cast stainless steel handles, and the main heating base with Triple Fusion Heat technology. This diagram highlights each part and its key features.



REPLACES

10 tools & appliances

Slow Cooker

Food Warmer

Nonstick Pot

Sauté Pan

Steamer

Sauce Pan

Stock Pot

Dutch Oven

Roasting Pan

Integrated Spoon

10-in-1 Replacement: An infographic demonstrating how the Ninja Foodi Possible Cooker PRO can replace 10 kitchen tools and appliances, including a slow cooker, food warmer, nonstick pot, sauté pan, steamer, sauce pan, stock pot, Dutch oven, roasting pan, and integrated spoon.

Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the removable cooking pot, glass lid, and multi-functional utensil with warm, soapy water. Rinse thoroughly and dry. The pot and lid are also dishwasher safe.
3. **Placement:** Place the main unit on a clean, dry, level surface. Ensure adequate ventilation around the unit.
4. **Insert Pot:** Place the removable cooking pot securely into the main heating base. The unit has a sensor that detects if the pot is correctly inserted.
5. **Power:** Plug the power cord into a grounded electrical outlet. The display will illuminate.

Operating Instructions

The Ninja Foodi Possible Cooker PRO offers multiple cooking functions. Use the control panel to select your desired mode, temperature, and time.

Ninja Foodi Possible Cooker Pro Features Overview: This video demonstrates the various cooking functions of the Ninja Foodi Possible Cooker Pro, including Slow Cook, Sear/Sauté, Bake, Braise, Keep Warm, and Steam. It shows how to adjust temperature and time settings on the control panel, highlighting the versatility of the appliance for different cooking needs. The video also showcases the removable, oven-safe pot and the convenient integrated spoon.

Meet the Possible Cooker: A brief video introducing the Ninja Foodi Possible Cooker, demonstrating its compact design and highlighting the ease of use of its control panel. It quickly cycles through the different cooking modes available, providing a quick overview of the appliance's capabilities.

Cooking Functions:

- **Slow Cook:** Ideal for tenderizing meats and simmering stews over extended periods. Select 'Slow Cook', then adjust temperature (High/Low) and time using the TEMP and TIME buttons.
- **Sear/Sauté:** Use this function to brown ingredients directly in the pot before slow cooking, or to reduce liquids after cooking. Select 'Sear/Sauté' and adjust temperature as needed.
- **Bake:** Transform your multicooker into an oven for baking. Select 'Bake' and set the desired temperature (up to 425°F) and time.
- **Braise:** Perfect for slow-cooking meats in liquid to make them tender. Select 'Braise' and set the desired time.
- **Keep Warm:** Automatically activates after most cooking cycles or can be selected manually to keep food at a serving temperature. Select 'Keep Warm'.
- **Steam:** For steaming vegetables, seafood, or other items. Select 'Steam' and set the desired time.

To start or stop any cooking function, press the 'START/STOP' button.

Maintenance and Cleaning

Proper maintenance ensures the longevity and performance of your Ninja Foodi Possible Cooker PRO.

1. **Unplug:** Always unplug the unit from the power outlet and allow it to cool completely before cleaning.
2. **Removable Pot & Lid:** The nonstick cooking pot and glass lid are dishwasher safe for convenient cleaning. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge.
3. **Main Base:** Wipe the exterior of the main heating base with a damp cloth. Do NOT immerse the main base in water or any other liquid. Ensure no water enters the heating element area.
4. **Integrated Utensil:** The multi-functional utensil is dishwasher safe.
5. **Storage:** Store the appliance in a cool, dry place with the pot and lid in place. The integrated spoon can be stored on the lid handle.

Troubleshooting

If you encounter any issues with your Ninja Foodi Possible Cooker PRO, refer to the following common solutions:

- **Unit Not Turning On:** Ensure the power cord is securely plugged into a functional electrical outlet.
- **'Pot' Error Message:** This indicates that the removable cooking pot is not correctly seated in the main heating base. Remove the pot and reinsert it firmly until the error message clears.
- **Food Not Cooking Evenly:** Ensure the lid is properly sealed during cooking. Stir ingredients periodically, especially during sautéing or braising, to promote even cooking.
- **Excessive Liquid After Slow Cooking:** Use the 'Sear/Sauté' function after slow cooking to boil down and reduce

excess liquid to your desired consistency.

- **Scratches on Nonstick Coating:** Always use non-metal utensils (like the included multi-functional spoon) to prevent scratching the nonstick surface.

For issues not covered here, please contact Ninja customer support.

Specifications

Feature	Detail
Brand	Ninja
Model Number	MC1000
Capacity	8.5 Quarts
Color	Cherry
Material	Aluminum
Product Dimensions	18"D x 10.6"W x 12.65"H
Item Weight	12 pounds
Wattage	1200 watts
Voltage	120
Dishwasher Safe	Yes (Pot and Lid)
Oven Safe	Yes (Pot up to 500°F)
Control Method	Touch
Number of Settings	8

Warranty and Support

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Ninja website. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question