

[Manuals.plus](#) /

› [Kinglucky](#) /

› Kinglucky White Noise Machine Sound S7 User Manual

Kinglucky S7

Kinglucky White Noise Machine Sound S7 User Manual

Model: S7

INTRODUCTION

Thank you for choosing the Kinglucky White Noise Machine Sound S7. This device is designed to create a calming auditory environment, aiding in relaxation, sleep, and focus. Please read this manual carefully to ensure proper use and maintenance of your device.

PACKAGE CONTENTS

- Kinglucky White Noise Machine Sound S7
- USB Charging Cable
- User Manual (this document)

DEVICE OVERVIEW

Familiarize yourself with the components of your Kinglucky Sound S7.



Image: Side view of the Kinglucky Sound S7, highlighting the power button, USB charging port, and sound selection/volume control buttons.



Image: Top view of the Kinglucky Sound S7, displaying the speaker grille and the Kinglucky brand logo.

SETUP

1. Charging the Device

Before first use, fully charge your Kinglucky Sound S7.


1. Connect the provided USB charging cable to the charging port on the device.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.

2. Placement

Place the device on a stable, flat surface away from direct sunlight, heat sources, and moisture. For optimal sound distribution, ensure the speaker grille is unobstructed.


OPERATING INSTRUCTIONS

1. Power On/Off



- To power on: Press and hold the **Power button** () for approximately 2 seconds until the device activates.
- To power off: Press and hold the **Power button** for approximately 2 seconds until the device shuts down.

2. Sound Selection

The Kinglucky Sound S7 offers 18 distinct sound options, including various fan noises, rain sounds, ocean waves, river sounds, and different types of white, pink, and brown noise.

- To cycle through sounds: Press the **Sound Selection button** (). Each press will advance to the next sound.
- The device will remember the last selected sound when powered off and on again.

3. Volume Adjustment

- To increase volume: Press the **Volume Up button** ().
- To decrease volume: Press the **Volume Down button** ().

MAINTENANCE

Cleaning

- Ensure the device is powered off and unplugged before cleaning.
- Wipe the exterior with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Avoid getting moisture into any openings.

Storage

When not in use for extended periods, store the device in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery or no power.	Charge the device using the provided USB cable. Ensure the power button is pressed and held for 2 seconds.
No sound or low volume.	Volume set too low or speaker obstructed.	Increase the volume using the Volume Up button. Ensure the speaker grille is clear of obstructions.
Sound quality is poor.	Interference or device malfunction.	Move the device away from other electronic devices. If the issue persists, contact customer support.
Device not charging.	Faulty cable, adapter, or port.	Try a different USB cable or power adapter. Ensure the charging port is clean and free of debris.

SPECIFICATIONS

Feature	Detail
Model	S7
Brand	Kinglucky
Dimensions (L x W x H)	10.2 x 10.2 x 1.7 cm
Weight	0.22 Kilograms
Color	White
Sound Options	18 (various fans, rain, ocean, river, white, pink, brown noise)
Power Source	Rechargeable Battery / USB

WARRANTY AND SUPPORT

Kinglucky stands behind its products with a **10-year service guarantee**. For any questions, technical assistance, or warranty claims, please contact Kinglucky customer service. They offer **24/7 support** to assist you. Please refer to your purchase documentation or the official Kinglucky website for specific contact details.