

[Manuals.plus](#) /

› [SNOW DEER](#) /

› SNOW DEER Heated Socks User Manual - Model LYSS05C

SNOW DEER LYSS05C

SNOW DEER Heated Socks User Manual

Model: LYSS05C

INTRODUCTION

Thank you for choosing SNOW DEER Heated Socks. These socks are designed to provide warmth and comfort in cold conditions, ideal for various outdoor activities. This manual provides essential information for the proper setup, operation, and maintenance of your heated socks.



Image: SNOW DEER Heated Socks, showcasing the product design.

WHAT'S INCLUDED

Your SNOW DEER Heated Socks package includes the following items:

- One Pair of Heated Socks
- One Pair of 7.4V 2200mAh Rechargeable Lithium Batteries
- One 8.4V Dual Battery Charger
- One User Manual

SNOW DEER HEATED SOCKS

Stay Cozy, Stay Warm



Image: All components included in the SNOW DEER Heated Socks package.

SETUP INSTRUCTIONS

1. Charging the Batteries

Before first use, fully charge both batteries. Connect the batteries to the provided dual charger and plug the charger into a power outlet. The charging time is approximately 3.5 hours. Ensure the indicator lights on the charger show a full charge before proceeding.

2. Inserting Batteries into Socks

Locate the battery pocket on the upper cuff of each sock. Connect the battery wire from the sock to the fully charged battery. Carefully place the battery into the pocket and secure it.



Image: Close-up of the battery pocket on the sock cuff.

3. App Download and Pairing (Optional)

For smart control, download the SNOW DEER app from your smartphone's app store. Activate Bluetooth on your phone. The

socks will seamlessly pair with your mobile device. The app allows for temperature adjustment, quick heating, and setting a personalized auto power-off time.

[Download on Google Play](#)

[Download on the App Store](#)

APP CONTROL-CONVENIENT YOUR LIFE

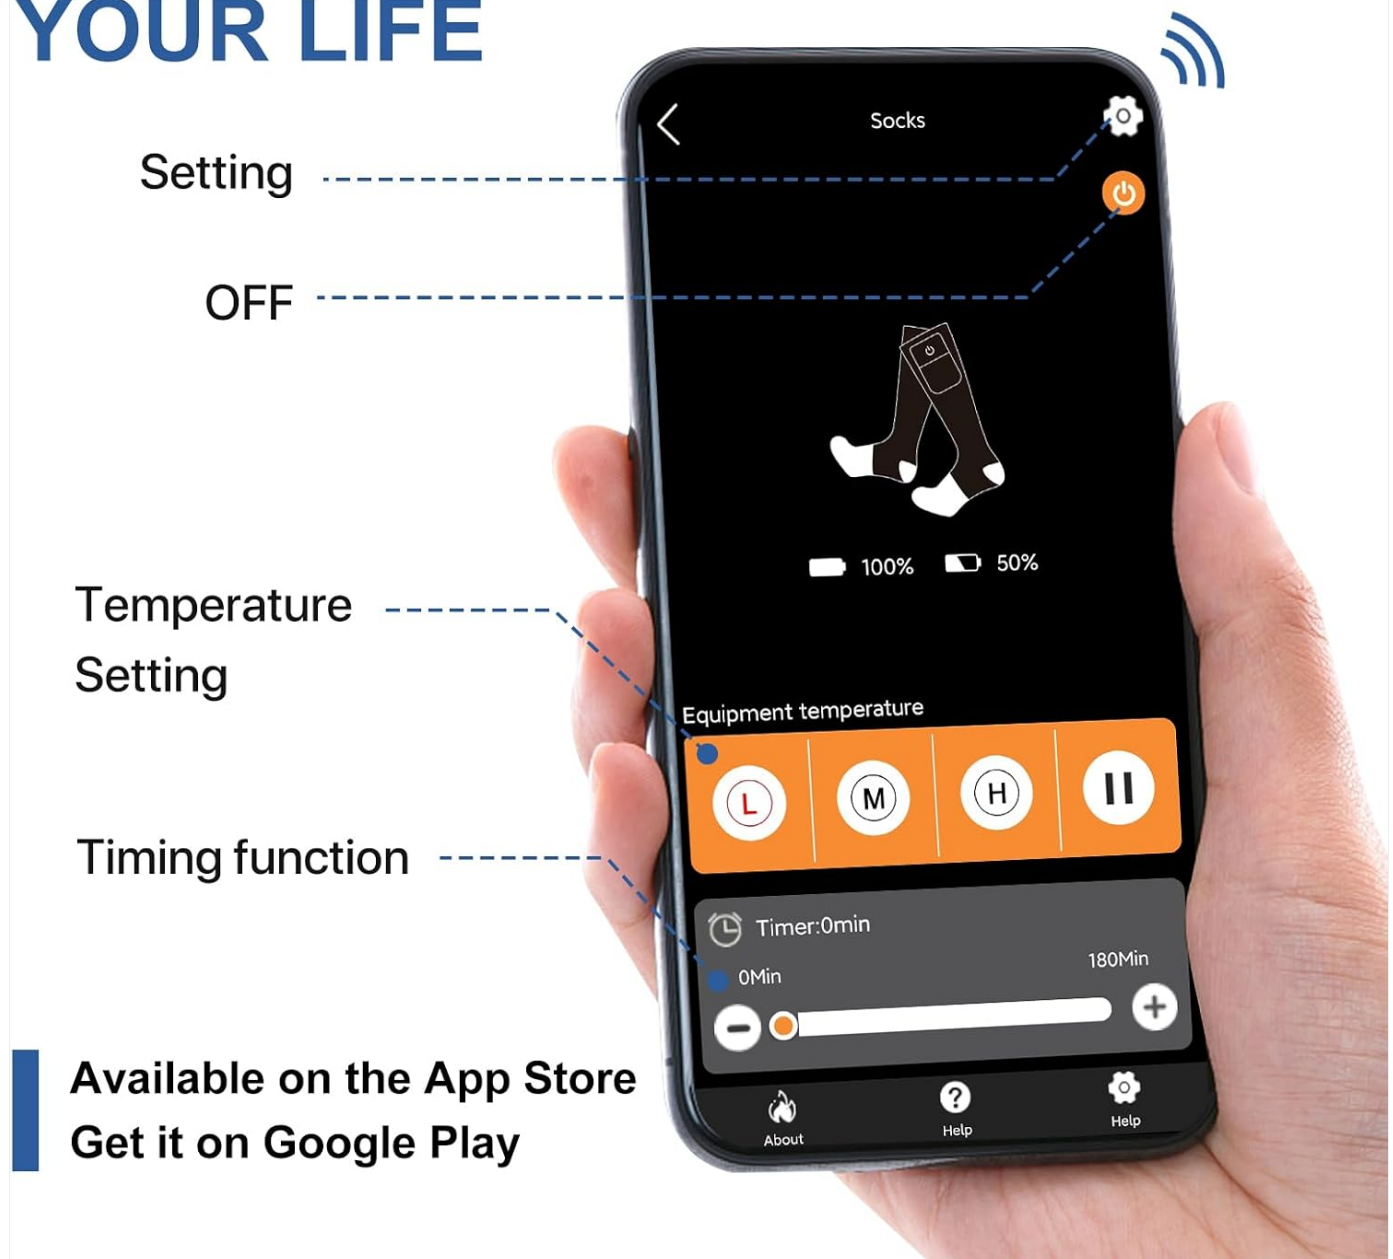


Image: Screenshot of the SNOW DEER app interface for controlling the heated socks.

Video: Demonstrates the setup and operation of SNOW DEER Heated Socks, including battery connection and temperature control.

OPERATING INSTRUCTIONS

1. Powering On/Off

To turn the socks on, long-press the power button located on the cuff of each sock. The indicator lights will illuminate. To turn them off, long-press the power button again.

2. Adjusting Temperature Settings

The socks offer three temperature settings: High, Medium, and Low. Short-press the power button to cycle through the settings. The indicator lights will change to reflect the current heat level:

- **High:** 122-131°F (approx. 3.5-4 hours battery life)
- **Medium:** 113-122°F (approx. 5-6 hours battery life)
- **Low:** 100-113°F (approx. 8-10 hours battery life)

The heating elements provide surround heating in the toe area, delivering warmth where it's most needed.

UPGRADED ONE-TOUCH SMART CONTROLLER



Long press the switch to turn on/off
Press the switch to change the settings



HIGH

🔥 122 - 131 °F ⌚ 3.5 - 4 Hours



MEDIUM

🔥 113 - 122 °F ⌚ 5 - 6 Hours



LOW

🔥 100 - 113 °F ⌚ 8 - 10 Hours

POWER DISPLAY



25%



50%



75%



100%



Image: Diagram illustrating the smart controller with three temperature settings and battery life indicators.



Image: Illustration of the 360-degree toe warming feature.

3. App Control

Once paired, use the app to adjust temperature levels, set timers, and monitor battery status. The app allows for individual control of each sock or simultaneous control of both.

MAINTENANCE

1. Washing Instructions

The heated socks are washable. **Before washing, always remove the batteries.** Hand wash is recommended to preserve the heating elements and fabric integrity. If machine washing, use a laundry bag, gentle cycle, and cold water. Do not bleach, iron, or dry clean. Air dry only.

2. Battery Care

Store batteries in a cool, dry place when not in use. Avoid exposing batteries to extreme temperatures or direct sunlight. Fully charge batteries every 3-6 months during off-season storage to maintain battery health.

TROUBLESHOOTING

- **Socks not heating:** Ensure batteries are fully charged and correctly connected to the socks. Check if the power button has been long-pressed to turn on the socks.
- **Short battery life:** Battery life varies with temperature setting. Higher settings consume more power. Ensure batteries are fully charged before each use.
- **App connectivity issues:** Ensure Bluetooth is enabled on your device and the socks are within range. Try restarting the app and your device.
- **Discomfort from wires:** The socks are designed with flexible heating elements. If you experience discomfort, adjust the sock position. The internal fleece lining should prevent direct contact with wires.

SPECIFICATIONS

Model Name	LYSS05C
Brand	SNOW DEER
Material	CoolMax, Spandex
Battery Type	Lithium-Polymer

Battery Capacity	2200 mAh
Charging Time	3.5 Hours
Temperature Range	100°F - 131°F (37.8°C - 55°C)
Recommended Uses	Fishing, Hiking, Hunting, Motorcycling, Skiing, Snowboarding



SIZE CHART

NOTE:If your size is within both ranges, please select the smaller one

SIZE	SUGGEST SIZE			SOCKS LENGTH			
	US	EU	UK	Socks Length (IN)	Socks Length (CM)	Length of stockings (IN)	Length of stockings (CM)
S	5-6	35-38	3-3.5	7.87-9	20-23	11.8	30
M	6-6.8	38-42	6-8	9-9.84	23-25	13	33
L	9-12	42-46	8.5-11.5	10-10.5	25-26	14	36
XL	12-14	46-48	12-13	10.6-11	26-28	15	38



 Our socks ARE NOT suitable for professional skiing because of its thickness

Image: Detailed size chart for SNOW DEER Heated Socks.

SOFT AND COMFORTABLE



Image: Features highlighting the soft and comfortable design of the socks, including reinforced tips and thickened terry.

SAFETY INFORMATION

- Do not use if socks or batteries are damaged.
- Keep batteries away from water and fire.
- Do not puncture or disassemble batteries.
- Consult a physician before use if you have a medical condition, especially related to circulation or nerve sensitivity.
- Discontinue use if you experience discomfort, burning, or excessive heat.

WARRANTY AND SUPPORT

Your SNOW DEER Heated Socks come with a **1-Year Manufacturer Warranty**. For any quality or size problems, or if you are not satisfied with your product, please refer to the manual for contact information or reach out to the seller, SNOW DEER HUB, directly through the Amazon platform for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question