

[Manuals.plus](#) /

> [deime](#) /

> deime Air Fryer 6.2 QT Instruction Manual

deime RC RA640 WF-B-01

deime 6.2 QT Digital Air Fryer Instruction Manual

Model: RC RA640 WF-B-01 | Brand: deime

INTRODUCTION

Thank you for choosing the deime 6.2 QT Digital Air Fryer. This appliance is designed to provide a healthy and convenient way to cook your favorite meals with little to no oil. Featuring a large capacity, digital LCD touch screen, and multiple preset functions, it simplifies your cooking experience. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

- **WARNING: NEVER immerse the cord, plug, or Air Fryer body in water or any liquid.**
- Always place the air fryer on a dry, level, heat-resistant surface.
- Maintain at least 6 inches of clearance behind, above, and around the sides of the air fryer. Ensure it is not placed near a gas or electric stove, or any flammable material.
- Do not operate the appliance with a damaged cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not block any ventilation openings.
- Always unplug the air fryer when not in use and before cleaning.

PRODUCT OVERVIEW AND COMPONENTS

The deime 6.2 QT Digital Air Fryer features a sleek design with a user-friendly interface. Key components include:

- **Digital LCD Touch Screen:** For easy control of temperature, time, and presets.
- **6.2 QT Non-Stick Basket:** Large capacity for family-sized meals, designed for easy cleaning.
- **Crisper Tray:** Removable tray that allows air circulation for crispy results.

- **Visual Cooking Window:** Allows you to monitor food progress without opening the basket.
- **Built-in Cooking Light:** Illuminates the interior for clear visibility.



Figure 1: deime 6.2 QT Digital Air Fryer with a basket of crispy fries.



Figure 2: Product dimensions (11.8"D x 11.8"W x 12.6"H) and temperature/time control range.

FIRST TIME SETUP

1. Remove all stickers, labels, and packaging materials from the air fryer.
2. Wash the air fryer basket and crisper tray thoroughly with warm, soapy water, then rinse and dry completely.
3. Place the air fryer on a dry, level, heat-resistant surface, ensuring adequate clearance (at least 6 inches) from walls and other appliances.
4. Insert the crisper tray into the bottom of the air fryer basket. Ensure it is fully seated.
5. Slide the assembled basket firmly into the air fryer until it clicks into place.
6. Plug the air fryer power cord into a standard 120V US power outlet.
7. Press the power button to turn your air fryer on.

OPERATING INSTRUCTIONS

The deime Air Fryer offers 8 preset cooking programs for common dishes, accessible via the digital touch screen. You can also manually adjust temperature and time.

Using Preset Functions:

1. Ensure the air fryer is plugged in and the basket is properly inserted.
2. Press the power button to turn on the display.
3. Select your desired preset icon (e.g., French Fries, Roast Chicken, Pizza) from the touch screen. The air fryer will automatically set the recommended temperature and time.
4. If desired, you can adjust the temperature using the 'TEMP' up/down arrows and time using the 'TIME' up/down arrows.
5. Press the Start/Pause button to begin cooking.

Manual Operation:

1. Press the power button to turn on the display.
2. Use the 'TEMP' up/down arrows to set your desired cooking temperature (e.g., 180°F to 400°F).
3. Use the 'TIME' up/down arrows to set your desired cooking time (e.g., up to 60 minutes).
4. Press the Start/Pause button to begin cooking.



Figure 3: The 8 preset cooking functions available on the digital touch screen.

COOKING TIPS & TRICKS

- To reduce cooking time, use the Preheat function prior to placing food in the air fryer basket. Exercise caution when placing food in the preheated air fryer basket as it will be hot.
- For a more crispy texture, lightly coat or spritz food with oil prior to placing it in the air fryer basket. Do not use cooking spray in the air fryer basket as it may cause the non-stick coating to fail prematurely. Use oil in a spray bottle.
- Use the Shake Function: This feature helps cook food more evenly on both sides. The cooking light will blink along with a notification bell to remind you to shake the basket halfway through cooking time.
- Wet marinated foods or wet batter-fried foods will not work well in an air fryer. Wet batter is better suited for deep frying. Pat dry wet marinated foods to prevent excess splatter and smoke.
- Avoid overfilling your air fryer basket. An overfilled air fryer basket will prevent air from properly circulating, causing uneven cooking.
- Adjust cooking time for smaller batches. Smaller batches of food may cook quicker than suggested cooking time/temperature. Check often and adjust time/temperature as required.
- Use a food thermometer to check the doneness of meats, poultry, and seafood.



Figure 4: Achieve crispy, juicy, and healthy results with 360° hot air circulation.

MAINTENANCE AND CLEANING

WARNING: NEVER immerse the cord, plug, or Air Fryer body in water or any liquid.

Cleaning your Air Fryer:

1. Clean your air fryer after every use.
2. Unplug the air fryer from the electrical outlet after every use and before cleaning.
3. Ensure the air fryer has cooled down for an adequate amount of time before cleaning.
4. Remove the Air Fryer Basket and crisper tray from the air fryer. The Air Fryer Basket and crisper tray are dishwasher safe. You can also hand wash them with warm water, dish detergent, and a non-abrasive sponge.
5. **NEVER** use abrasive sponges on the air fryer basket or crisper tray nonstick surface as it may cause them to flake off.
6. **NEVER** use oven cleaner to clean air fryer components as they will damage the nonstick coating and air fryer metal components.
7. If the air fryer basket and crisper tray have remnant residue stuck on, fill the air fryer basket with hot water and dish detergent and leave it for 1 hour before attempting to clean again with a non-abrasive sponge.
8. Wipe down the interior of the air fryer with a damp cloth. Do not wipe down the heating element.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer is not working.	Air fryer not connected to power source.	Verify air fryer plug is plugged into electrical outlet.
	Start button not pressed.	Verify cooking preset is selected then press the start button.
	Basket not fully seated in air fryer.	Verify air fryer basket is not overfilled. If it is, remove some of the food and reseal. Verify basket is properly seated; you should hear a slight click when it is fully seated.
Food not cooked evenly.	Time or Temperature is not enough.	Increase time or temperature to achieve more evenly cooked foods.
	Food needs to be shaken/flipped halfway through cooking.	Use shake function or remove basket halfway through cooking time to gently shake the food in the basket or flip the food items during the cook process to achieve an even finish.

Problem	Possible Cause	Solution
	Food not coated with light coating of oil.	For more crispy foods, we recommend you lightly coat your food with a light coating of oil.
	Basket too full.	Basket may be too full. Smaller batches produce more crispy results.
	Time or Temperature is not enough.	You may need to increase cook time or temperature as required.

SPECIFICATIONS

- **Model Name:** RCNJ640
- **Item Model Number:** RC RA640 WF-B-01
- **Color:** Black-M
- **Capacity:** 6.2 Quarts
- **Output Wattage:** 1500 Watts
- **Voltage:** 110 Volts
- **Control Method:** Touch Screen
- **Product Dimensions:** 11.8"D x 11.8"W x 12.6"H
- **Item Weight:** 12 Pounds
- **Material:** Plastic
- **Has Nonstick Coating:** Yes
- **Is Dishwasher Safe (Basket/Tray):** Yes
- **Special Feature:** Temperature Control
- **Air Frying Technology:** True
- **Country of Origin:** China

WARRANTY AND SUPPORT

This Limited Warranty is for 90 Days and can be extended to a full year from the date of purchase if the purchaser registers their warranty on the DEIME Appliance website. Limited Warranty is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at DEIME Appliance's discretion.

Product defects not covered under the Limited Warranty provisions include normal wear and damage incurred due to accidental negligence, misuse of instruction specifications, or repair by unauthorized parties. DEIME Appliance is not liable for incidental or consequential damages incurred by such circumstances.

This warranty is only valid within the United States.

For further support or to register your product, please visit the official deime website or contact

customer service.