

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EPOMAKER](#) /

› [EPOMAKER X Aula F99 PRO Wireless Gaming Keyboard User Manual](#)

EPOMAKER F99 PRO

EPOMAKER X Aula F99 PRO Wireless Gaming Keyboard User Manual

Model: F99 PRO

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your EPOMAKER X Aula F99 PRO Wireless Gaming Keyboard. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Figure 1: EPOMAKER X Aula F99 PRO Wireless Gaming Keyboard.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- EPOMAKER X Aula F99 PRO Wireless Gaming Keyboard
- Keycap Puller
- USB Cable (Type-C to USB-A)
- User Manual
- Extra Mechanical Switches



Figure 2: Included accessories with the F99 PRO keyboard.

Your browser does not support the video tag.

Video 1: An unboxing video demonstrating the contents of the F99 PRO gaming keyboard package.

3. SETUP

3.1 Connectivity Modes

The F99 PRO keyboard supports three connectivity modes: Bluetooth 5.0, 2.4GHz wireless, and wired (Type-C USB). You can switch between modes using the selector switch located on the keyboard.

- **Bluetooth Mode:** Ideal for connecting to multiple devices (up to five) such as smartphones, tablets, and laptops.
- **2.4GHz Wireless Mode:** Provides a stable and low-latency connection for gaming, using the included USB dongle.
- **Wired Mode:** Connect directly via the USB-C cable for the most reliable connection and simultaneous charging.

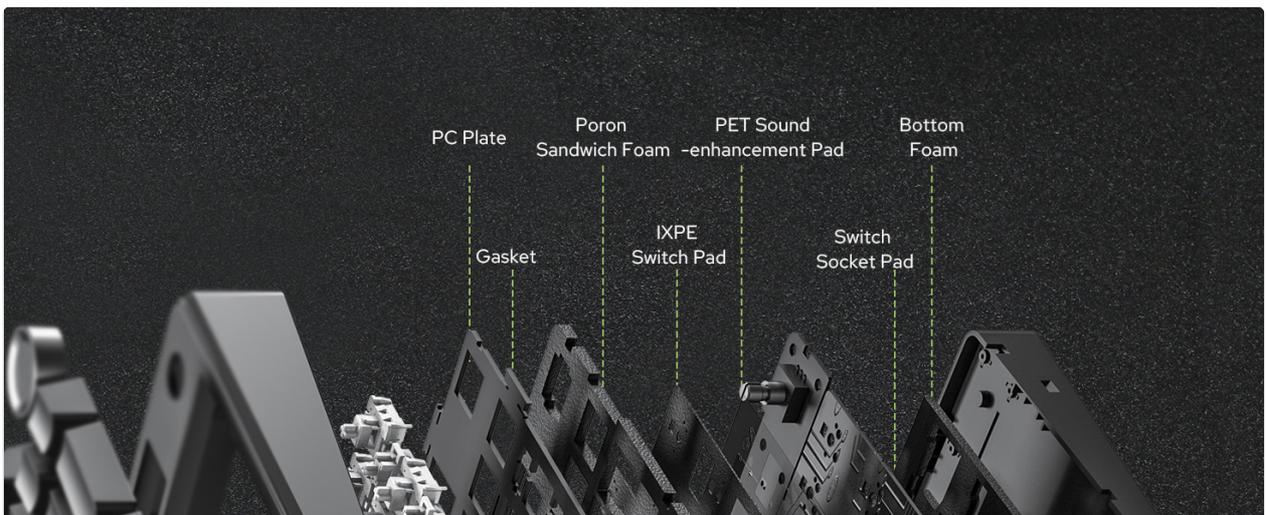


Figure 3: Connectivity ports and mode switch on the keyboard.



Figure 4: Multi-device compatibility of the F99 PRO keyboard.

3.2 Charging the Keyboard

The keyboard is equipped with an 8000mAh battery for extended use. To charge, connect the provided USB-C cable to the keyboard's Type-C port and the other end to a USB power source. The keyboard can be used while charging in wired mode.



Figure 5: 8000mAh battery for extended usage.

3.3 Adjusting Keyboard Feet

The keyboard features adjustable feet on the underside to customize the typing angle for ergonomic comfort. Gently flip out the feet to your preferred height.

4. OPERATING INSTRUCTIONS

4.1 Key Functions and Layout

The F99 PRO features a 96% compact layout with 99 keys, including a dedicated volume control knob. The layout is designed to maximize space while retaining essential keys.



Figure 6: 96% compact layout with volume knob.

4.2 RGB Backlighting Control

The keyboard features customizable RGB backlighting. Use the following key combinations to adjust lighting effects:

- **FN + \|**: Change backlight effect.
- **FN + TAB**: Change light bar effect.
- **FN + ↑/↓**: Adjust brightness.
- **FN + ←/→**: Adjust lighting speed/direction.
- **FN + R_SHIFT**: Change backlight color.
- **FN + R_ALT**: Change light bar color.

RGB & SINGLE COLOR BACKLIT



CHANGE BACKLIGHT EFFECT



CHANGE LIGHT BAR EFFECT

Figure 7: RGB and single-color backlighting options.

Your browser does not support the video tag.

Video 2: A demonstration of the various RGB backlight effects available on the F99 PRO keyboard.

4.3 Hot-Swappable Switches


The F99 PRO keyboard features a hot-swappable PCB, allowing you to easily replace 3-pin or 5-pin mechanical switches without soldering. This enables customization of your typing experience with preferred switch types.



Figure 8: Hot-swappable switches for easy customization.

4.4 AULA Driver Customization

For advanced customization of key settings, macros, and lighting effects, download and install the AULA Driver software. This software allows you to tailor the keyboard to your specific gaming style and preferences.

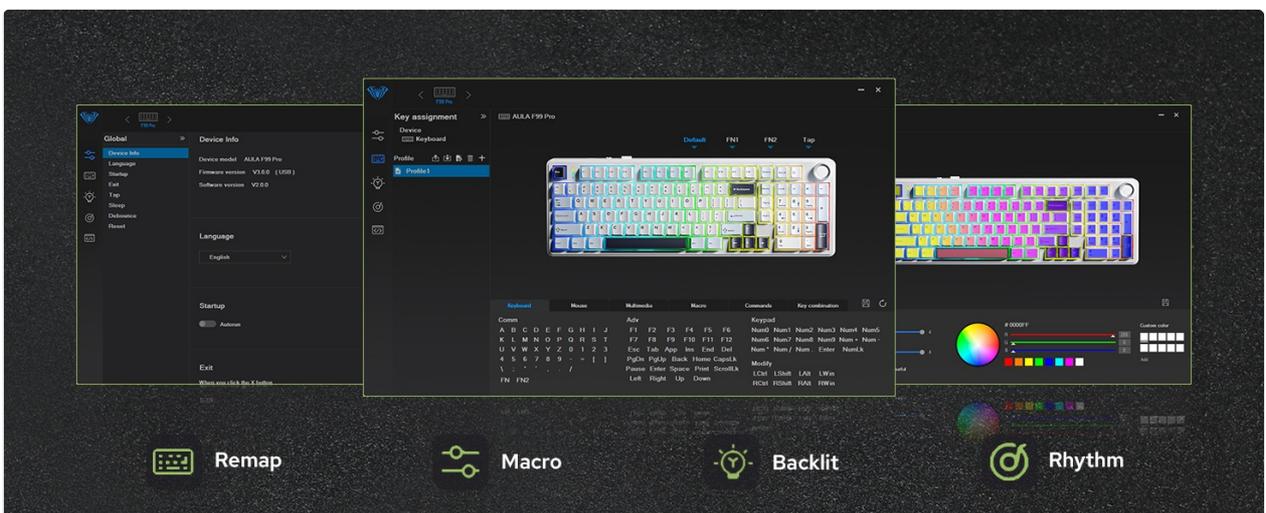

5. MAINTENANCE

5.1 Cleaning

To clean your keyboard, disconnect it from all power sources. Use a soft, dry cloth to wipe down the keycaps and chassis. For deeper cleaning, remove keycaps using the provided keycap puller and use compressed air to clear debris from beneath the switches.

5.2 Switch and Keycap Replacement

Thanks to the hot-swappable design, switches and keycaps can be replaced easily. Use the keycap puller to remove keycaps and the switch puller (often integrated with the keycap puller) to remove switches. Align new switches carefully with the PCB pins before pressing them into place. Ensure keycaps are pressed firmly onto the switch stems.

6. TROUBLESHOOTING

- **Keyboard not responding:** Ensure the keyboard is charged and the correct connectivity mode (Bluetooth, 2.4GHz, or Wired) is selected. For wireless modes, check dongle connection or Bluetooth pairing.
- **Backlighting not working:** Check brightness settings (FN + ↑) and ensure the keyboard is not in a mode that disables lighting.
- **Keys not registering:** If specific keys are not working, try replacing the switch for that key using the hot-swappable feature. Ensure switches are fully seated.
- **Connectivity issues:** For 2.4GHz, ensure the dongle is plugged directly into a USB port on your computer. For Bluetooth, ensure the keyboard is in pairing mode and visible to your device. Try re-pairing if issues persist.

7. SPECIFICATIONS

Feature	Detail
Brand	EPOMAKER
Model Number	F99 PRO
Connectivity Technology	Bluetooth, USB-C (Wired), 2.4GHz Wireless
Compatible Devices	Gaming Console, Laptop, PC, Smartphone, Tablet
Keyboard Layout	96% Compact (99 Keys)
Switch Type	Linear (Hot-Swappable 3/5-pin)
Battery Capacity	8000mAh

Backlighting	RGB
Special Features	Gasket Structure, 5 Layers of Sound-Improving Materials, Flex-Cut PCB and PC Plate, Programmable Keys, Volume Control Knob

8. WARRANTY AND SUPPORT

The EPOMAKER X Aula F99 PRO Wireless Gaming Keyboard comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. For warranty claims, technical support, or any inquiries, please contact EPOMAKER customer service through their official website or the retailer where the product was purchased.

Please retain your proof of purchase for warranty validation.