

LONPOO ZXG-608B

LONPOO Portable CD Player Boombox ZXG-608B User Manual

Model: ZXG-608B

Brand: LONPOO

1. INTRODUCTION

Thank you for purchasing the LONPOO Portable CD Player Boombox, model ZXG-608B. This device offers versatile audio playback options including CD, Bluetooth 5.3, FM radio, USB, and AUX input, along with a microphone port for added functionality. Its compact design and rechargeable battery make it suitable for various environments.

This manual provides essential information for safe operation, setup, and maintenance of your boombox. Please read it thoroughly before use and retain it for future reference.

ALL-IN-ONE Portable CD Boombox

- ▶ Bluetooth
- ▶ CD
- ▶ FM Radio
- ▶ USB
- ▶ MIC Port
- ▶ AUX-IN



Image 1.1: The LONPOO ZXG-608B Portable CD Boombox highlighting its multiple playback options: Bluetooth, CD, FM Radio, USB, MIC Port, and AUX-IN.

2. SAFETY INFORMATION

- **Power Source:** Use only the provided AC power cable or the internal rechargeable battery. Ensure the voltage matches the requirements of the device.
- **Water and Moisture:** Do not expose the device to rain, moisture, or immerse it in water. Avoid placing objects filled with liquids, such as vases, on the device.
- **Heat:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Ventilation:** Ensure proper ventilation. Do not block any ventilation openings.
- **Cleaning:** Unplug the device from the power outlet before cleaning. Use a dry, soft cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **CD Handling:** Handle CDs by their edges. Avoid touching the data side. Keep CDs clean and free from scratches.
- **Battery Safety:** Do not disassemble, crush, or expose the built-in battery to extreme temperatures. Dispose of batteries according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x LONPOO Portable CD Player Boombox (Model ZXG-608B)
- 1x AC Power Cable
- 1x Remote Control (*Batteries not included*)
- 1x User Manual (This document)



Image 3.1: Contents of the package, including the boombox, remote control, AC power cable, and user manual. The image also shows the product dimensions: 20 cm (7.8 inches) height, 23 cm (9 inches) width, and 15 cm (5.9 inches) depth, with a weight of 4.4 lbs.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your boombox.

4.1 Front Panel Controls and Display



Image 4.1: Front view of the boombox and its remote control. The front panel features a large LCD display, STANDBY button, MODE button, previous/next track buttons, a large volume knob, EQ button, and USB port.

- **LCD Display:** Shows track number, time, mode, and other status indicators.
- **STANDBY Button:** Powers the unit on or off.
- **MODE Button:** Switches between CD, Bluetooth, FM Radio, USB, and AUX modes.
- **Previous/Next Buttons (|<>|):** Navigates tracks/stations.
- **Play/Pause/Scan Button (▶/SCAN):** Plays/pauses media or scans FM radio stations.
- **STOP Button (■):** Stops playback.
- **Volume Knob:** Adjusts the audio output level.
- **EQ Button:** Cycles through equalizer presets (Flat, Rock, Pop, Classic, Jazz).
- **USB Port:** For playing digital audio files from a USB flash drive.
- **Headphone Jack:** For private listening.

4.2 Rear Panel Connections

3.5 mm AUX-Input

3.5 mm MIC-Output

(The microphone is not include the package)



Image 4.2: Rear panel of the boombox, detailing the 3.5 mm AUX-Input, 3.5 mm MIC-Output, the main ON/OFF button, and the AC Power Port. A portable handle is also visible at the top.

- **AUX Input (3.5mm):** Connect external audio devices.
- **MIC Output (3.5mm):** Connect a microphone for karaoke or voice input.
- **ON/OFF Button:** Main power switch for the unit.
- **AC Power Port:** Connect the AC power cable for power and charging.
- **FM Antenna:** Extend for better FM radio reception.

4.3 Top-Loading CD Compartment

CD Disc/USB Playback



Image 4.3: The top-loading CD compartment shown open with a CD inside. Icons illustrate playback options: Play in order, Single cycle, Repeat all, and Random play.

The CD compartment is located on the top of the unit. Gently lift the lid to access it.

4.4 Remote Control

The included remote control allows for convenient operation from a distance. *(Batteries not included. Requires 2x AAA batteries, typically.)*

5. SETUP

5.1 Power Connection

- **AC Power:** Connect the supplied AC power cable to the AC Power Port on the rear of the boombox and then to a standard wall outlet.
- **Rechargeable Battery:** The boombox has a built-in 2000 mAh rechargeable battery, providing over 5 hours of continuous use at medium volume. The battery charges automatically when connected to AC power.



Image 5.1: The boombox powered by its internal rechargeable battery, capable of providing approximately 5 hours of playback.

5.2 Initial Power On

1. Ensure the main ON/OFF switch on the rear panel is in the "ON" position.
2. Press the **STANDBY** button on the front panel or the remote control to turn on the unit.
3. The LCD display will illuminate.

6. OPERATING INSTRUCTIONS

6.1 CD Playback

1. Press the **MODE** button until "CD" mode is selected on the display.
2. Open the CD compartment lid on top of the unit.
3. Place a CD with the label side facing up. Gently close the lid.
4. The boombox will read the CD, and playback should start automatically. If not, press the **▶/SCAN** button.
5. Use the **|<>|** buttons to skip tracks.
6. Press the **▶/SCAN** button to pause/resume playback.
7. Press the **■ STOP** button to stop playback.

8. Press the **REPEAT** button on the remote control to cycle through repeat modes (Single, All, Random).

6.2 Bluetooth Mode

NOTE: This device supports Bluetooth connection for audio input from external devices but **does not support Bluetooth earphones**.

1. Press the **MODE** button until "BT" or "Bluetooth" is displayed. The unit will enter pairing mode, indicated by a flashing Bluetooth icon or "PAIR".
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "LONPOO ZXG-608B" (or similar name) from the list.
4. Once paired, the boombox will emit a confirmation sound, and the Bluetooth indicator will stop flashing.
5. You can now play audio from your connected device through the boombox.

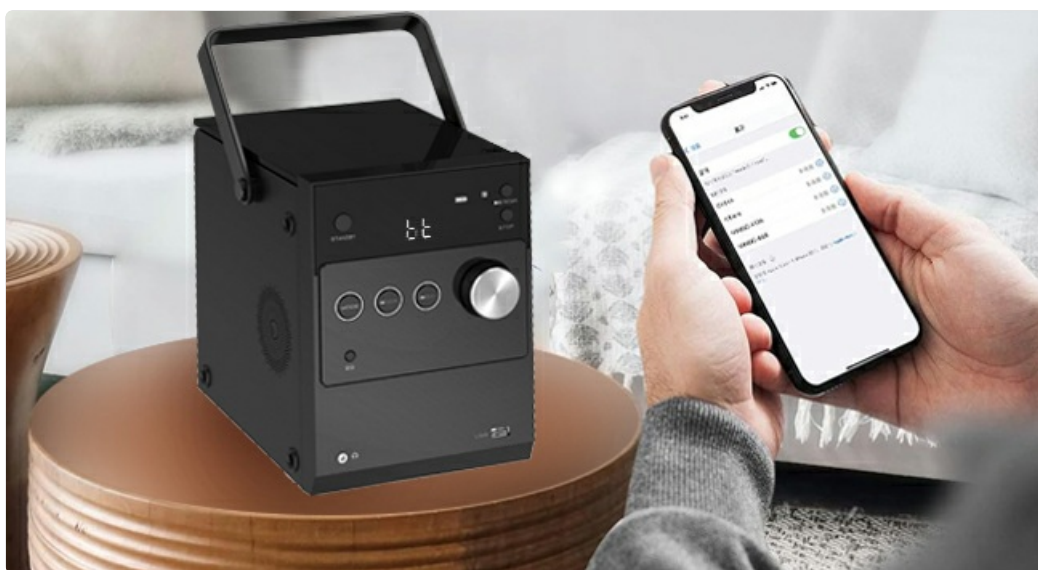


Image 6.1: Illustrates the process of pairing a smartphone with the boombox via Bluetooth for wireless audio streaming.

6.3 FM Radio

1. Extend the FM antenna on the rear panel for optimal reception.
2. Press the **MODE** button until "FM" mode is selected.
3. Press and hold the **▶/SCAN** button to automatically scan and save available FM stations.
4. Use the **|<>|** buttons to navigate between saved stations.

6.4 USB Playback

1. Insert a USB flash drive into the USB port on the front panel.
2. Press the **MODE** button until "USB" mode is selected.
3. The unit will automatically detect and begin playing compatible audio files (e.g., MP3).
4. Use the **|<>|** buttons to skip tracks.
5. Press the **▶/SCAN** button to pause/resume playback.
6. Press the **■ STOP** button to stop playback.

6.5 AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the AUX Input port on the rear panel using a 3.5mm audio cable (not included).
2. Press the **MODE** button until "AUX" mode is selected.

3. Control playback and volume from your connected external device.



Image 6.2: Demonstrates connecting external devices like a smartphone via AUX input and using the USB port for playback.

6.6 Microphone Input

1. Connect a microphone (not included) to the MIC Output port on the rear panel.
2. Adjust the volume using the main volume knob. The microphone input will mix with the currently playing audio source.



Image 6.3: Shows the boombox being used with a microphone, illustrating its karaoke function.

6.7 Equalizer (EQ) Settings

Press the **EQ** button on the front panel or remote control to cycle through preset equalizer modes:

- Flat
- Rock
- Pop
- Classic
- Jazz



Image 6.4: Highlights the 20W stereo sound output and lists the available 3 repeat modes (Single, All, Random) and 5 EQ modes (Flat, Rock, Pop, Classic, Jazz).

7. MAINTENANCE

- **Cleaning:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** If CD playback issues occur, use a commercially available CD lens cleaner disc.
- **Battery Longevity:** To prolong battery life, avoid fully discharging the battery frequently. Charge the unit regularly, even if not in use for extended periods.
- **Storage:** When storing the unit for a long time, ensure it is powered off and disconnected from the AC supply. Store in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC cable not connected; Main power switch off; Battery depleted.	Check AC connection; Ensure rear ON/OFF switch is ON; Charge the battery.

Problem	Possible Cause	Solution
CD not playing / "NO DISC" error	CD inserted incorrectly; CD is dirty or scratched; CD lens is dirty; Incompatible CD format.	Reinsert CD label side up; Clean CD; Use a CD lens cleaner; Ensure CD is audio CD format.
Bluetooth not pairing	Boombox not in BT mode; Device too far; Bluetooth already connected to another device.	Select BT mode; Move device closer; Disconnect from other devices and try again.
Poor FM radio reception	Antenna not extended; Weak signal.	Fully extend the FM antenna; Reposition the unit for better signal.
USB playback issues	USB drive not inserted correctly; Incompatible file format; USB drive corrupted.	Reinsert USB drive; Ensure files are MP3 or compatible; Try a different USB drive.
No sound from AUX	AUX cable not connected; Incorrect mode selected; Volume too low on external device.	Check AUX cable connection; Select AUX mode; Increase volume on external device.

9. SPECIFICATIONS







- **Model:** ZXG-608B
- **Brand:** LONPOO
- **Product Dimensions (L x W x H):** 4.72 x 7.09 x 5.91 inches (12 x 18 x 15 cm)
- **Item Weight:** 5.63 pounds (2.55 kg)
- **Speaker Output:** 20W RMS (10W x 2)
- **Connectivity:** Bluetooth 5.3, USB, AUX Input (3.5mm), MIC Port (3.5mm)
- **Power Source:** AC Power (Corded Electric) / Built-in Rechargeable Battery
- **Battery Capacity:** 2000 mAh
- **Playback Time (Battery):** >5 hours (at medium volume)
- **Supported Media:** Audio CD, CD-R/RW, USB (MP3)
- **Radio Tuner:** FM
- **EQ Modes:** Flat, Rock, Pop, Classic, Jazz
- **Included Accessories:** AC Power Cable, Remote Control, User Manual

10. WARRANTY AND SUPPORT

LONPOO products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or contact LONPOO customer support.

If you encounter any issues or have questions regarding your LONPOO Portable CD Player Boombox, please contact our customer support team for assistance. Contact details can typically be found on the official LONPOO website or on the product packaging.

Related Documents - ZXG-608B

	<p>LONPOO Portable CD Player Boombox Quick Start Guide</p> <p>This quick start guide provides instructions for setting up and operating the LONPOO Portable CD Player Boombox, covering power, battery installation, source modes, disc playback, volume adjustment, radio, USB, Bluetooth, and AUX input.</p>
	<p>LONPOO LP-D01 CD Player Quick Start Guide</p> <p>This guide provides instructions for setting up and operating the LONPOO LP-D01 CD player, including power, battery installation, source modes, volume adjustment, Bluetooth connection, radio, USB, and AUX IN.</p>
	<p>LONPOO LP-D01 CD Boombox User Manual</p> <p>Comprehensive user manual for the LONPOO LP-D01 CD Boombox, detailing features, safety precautions, operation, and troubleshooting for this portable audio player.</p>
	<p>LONPOO LP-100 Blu-ray Disc Player User Manual</p> <p>Comprehensive user manual for the LONPOO LP-100 Blu-ray Disc Player, covering setup, operation, remote control functions, troubleshooting, and specifications.</p>
	<p>LONPOO LP-609 CD Micro System User Manual</p> <p>User manual for the LONPOO LP-609 CD Micro System, detailing features, setup, operation, troubleshooting, and warranty information.</p>
	<p>LONPOO LP-816 CD Micro System User Manual</p> <p>User manual for the LONPOO LP-816 CD Micro System, detailing features, setup, operation, troubleshooting, and maintenance.</p>

