

[Manuals.plus](#) /

› [EWO'S](#) /

› EWO'S Rechargeable Voice Remote Control (Model EWO'S -1432A) for Samsung Smart TVs - User Manual

EWO'S EWO'S -1432A

EWO'S Rechargeable Voice Remote Control (Model EWO'S -1432A) for Samsung Smart TVs - User Manual

Your comprehensive guide to setup, operation, and maintenance.

1. INTRODUCTION

This manual provides detailed instructions for the EWO'S Rechargeable Voice Remote Control, Model EWO'S -1432A. This remote is designed to offer a seamless and enhanced control experience for your compatible Samsung Smart TV, featuring voice command capabilities and a convenient rechargeable battery.



Figure 1: EWO'S Rechargeable Voice Remote Control

2. KEY FEATURES

- **Voice-Controlled Functionality:** Easily find content and control your TV using voice commands.
- **Rechargeable Battery:** Equipped with a built-in rechargeable battery and supports USB Type-C charging,

eliminating the need for disposable batteries.

- **Quick Access Buttons:** Features dedicated shortcut buttons for popular applications, allowing one-click access.
- **Wide Compatibility:** Designed to work with a broad range of Samsung Smart TV models.
- **Responsive Performance:** Offers multi-angle signal transmission and fast response times for smooth operation.

Rechargeable Voice Remote

Over 1 year endurance for one time charging with fast USB Type-C, Saves you much spense and time.



Figure 2: USB Type-C Charging Port

Newly Upgraded Chip

360° Multi-angle Signal Transmission, Precisely control within 50ft.
Fastest response not over **0.1s** to your device, it supports
over **200,000** clicks approved test!



Figure 3: Voice Search in Action

3. COMPATIBILITY

The EWO'S Rechargeable Voice Remote Control is compatible with a wide range of Samsung Voice Smart TV models. Please verify your TV model's compatibility before use.

3.1 Compatible Samsung TV Series:

- 8 Series, 9 Series
- CU8000, CU7000, CU8000D, DU7200, DU8000, DU6900
- TU8000, AU8000, TU8200, TU8300, TU850D, TU9000, RU8000
- G65B, G7, G70B, G85SB
- LS03, LS03B, LS03C, LS03D, LSP3B, LS24A, LS27A, LS05, LST7, LST9C

- M50C, M70B, M70C, M5, M7, M8, M80C
- Q60C, Q60D, Q70C, Q70CD, Q70D, Q80C, Q80CD, Q80D, QE1C
- QN800C, QN800D, QN850C, QN85C, QN85CD, QN85D, QN900C, QN900D, QN90C, QN90CD, QN90D, QN990C
- S9, S90C, S90D, S95C, S95D
- Q6F, Q7F, Q7C, Q8F, Q9F Series

3.2 Compatible Samsung Voice Remote Models:

This remote is compatible with models such as TM2360E BN59-01432A, BN59-01455A, TM2361E BN59-01456A, BN59-01439A, BP59-00149A, BN59-01312A, BN59-01266A, BN59-01385A, TM2281E, TM2280E, BN59-01391A, BN59-01330H, BN59-01330A, BN59-01363A, BN59-01357A. **Note:** This remote is not compatible with BN59-01315A and BN59-01199F.



Compatible with All Samsung Voice TVs

- Neo QLED 8K / 4K Smart TVs
- Crystal 4K UHD Smart TVs
- The Frame Smart TVs
- QLED Smart TVs
- OLED Smart TVs

Figure 4: Wide Compatibility with Samsung Smart TVs



Figure 5: EWO'S Remote alongside other Samsung Remote Models

4. SETUP

4.1 Initial Charging

Before first use, ensure the remote is fully charged. Connect a USB Type-C charging cable (not included) to the remote's charging port. The remote has a 250mAh battery, and a full charge can last up to 1 year of continuous use with approximately 2 hours of charging.

4.2 Pairing with Your Samsung TV

The EWO'S remote is designed for easy pairing. Follow these steps:

1. Ensure your Samsung TV is powered on.

2. Press and hold the **"Return"** button (↶) and the **"Play/Pause"** button (⏸) simultaneously.
3. Continue holding both buttons until you see the message **"Pairing Complete"** appear on your TV screen.
4. The remote is now paired and ready for use.

If you experience issues with voice commands after initial pairing, re-pairing the remote might resolve the issue. For some Samsung 800-series models, navigate to *Connection Guide* → *Accessories* → *Remote Control* to pair correctly.



Figure 6: Remote Pairing Process

Video: Must Watch Before Buying Samsung Rechargeable Voice Remote

This video provides a general overview and demonstration of the Samsung rechargeable voice remote, highlighting its features and benefits.

Video: A Great Rechargeable Remote Replacement? Watch First!

A user review demonstrating the remote's functionality and ease of use as a replacement for Samsung Smart TVs.

5. OPERATING INSTRUCTIONS

The EWO'S remote features an intuitive layout for easy navigation and control of your Samsung Smart TV.

5.1 Button Functions



Figure 7: Remote Control Button Layout

- **Power Button:** Turns the TV on or off.
- **MIC / LED:** Indicates microphone activity and remote status.
- **Voice Assistant:** Press and hold to activate voice commands. Speak your command and release the button.
- **Settings/Number/Color Button:** Accesses settings menu, virtual numeric pad, or color buttons.
- **Directional Buttons (Up, Down, Left, Right):** Navigates menus and selections.

- **Select Button:** Confirms selections.
- **Smart Hub / Return:** Returns to the previous screen or accesses the Smart Hub.
- **Play / Pause:** Controls media playback.
- **Volume (+/-):** Adjusts volume. Press and hold to display Accessibility Shortcuts menu.
- **Channel (+/-):** Changes channels.
- **Launch App Buttons (Netflix, Samsung TV Plus, Prime Video, Disney+):** Direct access to specified streaming services.

5.2 Using Voice Control

To use the voice control feature, press and hold the Voice Assistant button (microphone icon), speak your command clearly, and then release the button. Examples include: "Turn on the sports channel," "Play some music," "Open Netflix," "Volume set to 10," or "Go home."

Video: Responsive and Rugged Samsung TV Voice Remote

This video demonstrates the responsiveness and durability of the remote, including its voice control features.

6. MAINTENANCE

6.1 Charging the Remote

To charge the remote, connect a USB Type-C cable to the charging port located on the bottom edge of the remote. A full charge typically takes about 2 hours and can provide power for up to 1 year of continuous use. The remote includes a Lithium Ion battery.

Video: Over 1 Year Endurance, Saves You Much Spense and Time!

This video highlights the long battery life and rechargeable nature of the remote, emphasizing its convenience and cost-saving aspects.

7. TROUBLESHOOTING

7.1 Remote Not Responding

- **Check Battery:** Ensure the remote is sufficiently charged. Connect it to a USB Type-C charger.
- **Re-pair Remote:** If the remote stops responding or voice commands are not working, try re-pairing it with your TV. Press and hold the "Return" and "Play/Pause" buttons simultaneously until "Pairing Complete" appears on screen.
- **Line of Sight:** Ensure there are no obstructions between the remote and the TV's infrared receiver.

7.2 Voice Function Not Working

- **Check TV Settings:** Confirm that your Samsung TV allows voice functionality. Refer to your TV's user manual for specific settings.
- **Re-pair Remote:** As mentioned above, re-pairing can often resolve voice command issues.
- **Speak Clearly:** Ensure you are speaking clearly and directly into the remote's microphone.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	5.5 x 1.3 x 0.3 inches
Item Weight	1.76 ounces
Item Model Number	EWO'S -1432A
Batteries	1 Lithium Ion battery (included)
Special Features	2 Year Warranty, Extremely Long Life, Lightweight, Rechargeable, Voice Search
Max Number of Supported Devices	1
Compatible Devices	Television
Connectivity Technology	Infrared

For All Samsung TV Voice Remote



Figure 8: Remote Control Dimensions

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The EWO'S Rechargeable Voice Remote Control comes with a **2-Year Warranty**. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

If you have any questions, encounter issues, or require further assistance with your remote control, please feel free to contact EWO'S customer support directly. We aim to respond to all inquiries within 12 hours.

For the latest support information and contact details, please visit the official EWO'S store on Amazon: [EWO'S Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question