

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [G-Anica](#) /
- › [G-Anica 5K 48MP Digital Camera Instruction Manual](#)

G-Anica G-Anica-S110-WM-5K-UK-2410

G-Anica 5K 48MP Digital Camera Instruction Manual

Model: G-Anica-S110-WM-5K-UK-2410

INTRODUCTION

Thank you for purchasing the G-Anica 5K 48MP Digital Camera. This camera is designed to capture high-quality photos and videos, offering advanced features for both photography and vlogging. This manual provides essential information on how to set up, operate, and maintain your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using the camera.

PRODUCT OVERVIEW

The G-Anica 5K 48MP Digital Camera features 5K/30fps video recording and 48-megapixel still image capture. It includes a 3-inch 180-degree flip screen, 16x digital zoom, and built-in Wi-Fi for easy connectivity. The camera comes with a wide-angle lens and a macro lens, a 32GB SD card, and two 1500mAh rechargeable lithium-ion batteries.

LATEST **5K** VIDEO & **48MP** PHOTO HIGH RESOLUTION



Image: The G-Anica 5K 48MP Digital Camera showcasing its 180-degree flip screen and highlighting its 5K video and 48MP photo capabilities. A comparison of 4K and 5K video resolution is also shown.

SETUP

1. Battery Installation

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert one of the provided 1500mAh lithium-ion batteries, ensuring the correct polarity.
3. Close the battery compartment cover securely.
4. Charge the battery fully before first use using the provided USB cable and a compatible power adapter. The camera can also be charged while recording.

2. SD Card Installation

The camera comes with a 32GB SD card. Ensure it is properly inserted before use.

1. Locate the SD card slot, usually next to the battery compartment or on the side of the camera.

2. Insert the 32GB SD card with the metal contacts facing the correct direction (refer to the diagram near the slot if available) until it clicks into place.
3. To remove, gently push the card in until it springs out.

3. Attaching Lenses (Wide Angle and Macro)

The camera includes a wide-angle lens and a macro lens for versatile shooting options.



Image: The G-Anica camera with its detachable wide-angle and macro lenses, illustrating their appearance and how they can be used for different photographic effects.

1. To attach a lens, align the threads of the auxiliary lens with the threads on the camera's main lens.
2. Gently rotate the auxiliary lens clockwise until it is securely fastened.
3. To remove, rotate counter-clockwise.
4. The wide-angle lens is suitable for capturing broader scenes, while the macro lens is for close-up photography of small subjects.

4. Initial Power On

Press and hold the power button until the screen illuminates. Follow any on-screen prompts for initial setup, such as setting the date and time.

OPERATING INSTRUCTIONS

1. Switching Modes

The camera features a mode dial for easy selection of various shooting and playback modes.

SWITCH MODES SIMPLY BY MODE DIAL

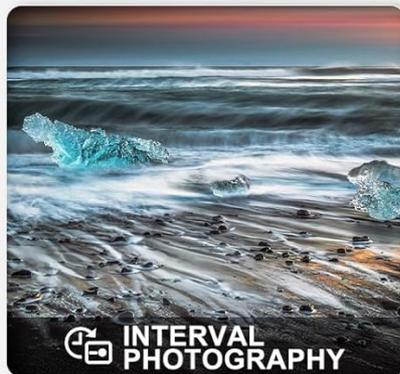


Image: A close-up of the camera's mode dial, illustrating the different settings available for various photography and video recording functions, including Photo, Playback, Interval Photography, Time-Lapse Shooting, Recording, and Slow-Motion Recordings.

- **Photo Mode:** For capturing still images.
- **Recording Mode:** For capturing video footage.
- **Playback Mode:** To review captured photos and videos.
- **Interval Photography:** For capturing a series of images at set intervals.
- **Time-Lapse Shooting:** For creating time-lapse videos.

- **Slow-Motion Recordings:** For capturing slow-motion video.
- Rotate the mode dial to select your desired function.

2. Basic Photography and Video Recording

- **Taking Photos:** In Photo Mode, press the shutter button halfway to focus, then press fully to capture the image.
- **Recording Videos:** In Recording Mode, press the record button to start and stop video recording.

3. 16x Digital Zoom

Utilize the 16x digital zoom to magnify distant subjects. The zoom controls are typically located near the shutter button.



Image: A visual representation of the camera's 16x digital zoom capability, showing different levels of magnification (4x, 8x, 16x). It also highlights the 48MP resolution compared to 24MP.

4. Flash Control

The camera features a built-in flash that can be activated or deactivated as needed for different lighting conditions.



SUPER BRIGHT REAL FLASHING LIGHT

Image: A split image demonstrating the effect of the camera's flash, with one side showing a dimly lit scene without flash and the other side showing the same scene illuminated by the flash.

- Access flash settings through the camera's menu or a dedicated flash button.
- Options typically include Auto Flash, Fill Flash, Red-eye Reduction, and Flash Off.

5. ISO Settings

Adjust the ISO sensitivity to optimize image brightness in various lighting conditions, especially low light. Higher ISO values increase sensitivity but may introduce noise.

6. WiFi Wireless Connection and App Control

Connect your camera to a smartphone or tablet via Wi-Fi for remote control and file transfer using a dedicated application.



Image: The camera screen displaying Wi-Fi connection information, including the Wi-Fi ID and password, alongside a smartphone screen showing the camera's companion app interface for remote control and live preview. A QR code for app download is also visible.

1. Turn on the camera's Wi-Fi function through the menu.
2. Download the companion app to your smartphone or tablet. Scan the QR code displayed on the camera screen or use the provided link: <https://qr19.cn/BlamDW>.
3. Connect your device to the camera's Wi-Fi network (SSID and password will be displayed on the camera screen).
4. Open the app to control the camera remotely, view live footage, and transfer files.

7. Other Functions

- **Self-Timer:** Set a delay before the shutter fires, useful for self-portraits or group photos.
- **Continuous Shooting:** Capture multiple photos in quick succession.
- **White Balance:** Adjust color temperature to match the light source for accurate colors.
- **Timestamp:** Add date and time information to your photos and videos.

- **180° Flip Screen:** The rotatable screen allows for easy self-recording and vlogging.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camera body and screen. For lenses, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. If not using the camera for an extended period, remove the batteries.
- **Storage:** Store the camera in a dry, dust-free environment, preferably in a camera bag, to protect it from impacts and environmental elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is dead or incorrectly inserted.	Charge the battery or reinsert it correctly. Ensure the battery compartment is closed.
Cannot take photos/videos.	SD card is full, locked, or not inserted. Incorrect mode selected.	Check SD card status, ensure it's unlocked and has space. Switch to Photo or Recording mode.
Poor image quality.	Lens is dirty. Low light conditions. Incorrect settings.	Clean the lens. Adjust ISO settings or use flash. Check resolution settings.
Wi-Fi connection issues.	Incorrect password. App not installed. Camera Wi-Fi not enabled.	Verify Wi-Fi password. Ensure the app is installed and camera Wi-Fi is active. Restart both devices.
Short battery life.	Frequent use of flash or Wi-Fi. Old battery.	Reduce flash/Wi-Fi usage. Carry a spare charged battery. Consider replacing old batteries.

SPECIFICATIONS

- **Brand:** G-Anica
- **Model Number:** G-Anica-S110-WM-5K-UK-2410
- **Effective Still Resolution:** 48 Megapixels
- **Video Resolution:** 5K/30fps (as per product description)
- **Digital Zoom:** 16x
- **Screen Size:** 3 Inches (180-degree flip screen)
- **Wireless Technology:** 802.11a/b/g/n/ac (Wi-Fi)
- **Color:** Black
- **Batteries:** 2 x 1500mAh Lithium-Ion (included)
- **SD Card:** 32GB (included)
- **Image Stabilization:** No (as per specifications)
- **Package Dimensions:** 20.3 x 16.3 x 10.8 cm
- **Item Weight:** 1 Kilogram

WARRANTY AND SUPPORT

G-Anica provides a comprehensive after-sales guarantee for this product. If you encounter any issues or have questions regarding your G-Anica 5K 48MP Digital Camera, please contact our customer support for assistance. Refer to your purchase documentation for specific warranty terms and contact information.