

[Manuals.plus](#) /

› [CEROBEAR](#) /

› CEROBEAR 50W Coffee Cup Warmer Model J101 Instruction Manual

CEROBEAR J101

CEROBEAR 50W Coffee Cup Warmer Model J101 Instruction Manual

Your guide to safe and efficient use of your CEROBEAR Mug Warmer.

INTRODUCTION

Thank you for choosing the CEROBEAR 50W Coffee Cup Warmer Model J101. This device is designed to maintain the temperature of your beverages and can also be used as a smart candle warmer. Please read this manual thoroughly before use to ensure proper operation and safety.

IMPORTANT SAFETY INSTRUCTIONS

- Do not immerse the device in water or other liquids.
- Keep out of reach of children.
- Always unplug the device when not in use or before cleaning.
- Do not touch the heating surface when hot. Use caution.
- Ensure the cup used is heat-resistant and has a flat bottom for optimal contact with the heating surface.
- When using as a candle warmer, select a low temperature setting to prevent potential hazards. High temperatures may cause certain candles to overheat or crack.
- Do not place flammable materials near the warmer.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

PACKAGE CONTENTS

- CEROBEAR 50W Coffee Cup Warmer (Model J101)
- Power Cord
- Instruction Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your CEROBEAR Mug Warmer.



Figure 1: CEROBEAR Mug Warmer with key features highlighted.

- **Heating Surface:** Central area for placing cups or candles. Features a 'CAUTION: HOT SURFACE' warning.
- **LED Digital Display:** Shows current temperature setting and timer.
- **Power/Temp Control Knob:** Rotates to select temperature settings (100°F to 175°F / 40°C to 80°C). Short press to power on/off. Long press for two seconds to switch between Fahrenheit (°F) and Celsius (°C).
- **Timer/Light Control Knob:** Rotates to select auto-off time (1 to 9 hours). Short press to turn LED night light on/off.
- **LED Night Light:** Indicates temperature range (Blue for low, Purple for middle, Red for high).

SETUP

1. Unpack all components from the box.
2. Place the CEROBEAR Mug Warmer on a flat, stable, and heat-resistant surface.
3. Plug the power cord into a standard electrical outlet. The LED digital display will briefly illuminate.

OPERATING INSTRUCTIONS

Power On/Off and Temperature Control

1. **To Power On:** Short press the Power/Temp Control Knob. The device will turn on and display the last used temperature setting.
2. **To Adjust Temperature:** Rotate the Power/Temp Control Knob to select your desired temperature from 100°F (40°C) to 175°F (80°C). There are 9 distinct temperature settings.
3. **To Switch Temperature Units:** Long press the Power/Temp Control Knob for two seconds to toggle between Fahrenheit (°F) and Celsius (°C).

4. **To Power Off:** Short press the Power/Temp Control Knob again.



Figure 2: Power/Temp Control Knob and Timer/Light Control Knob.

Timer Function and Auto Shut-Off

- **Setting the Timer:** Rotate the Timer/Light Control Knob to select an auto-off time ranging from 1 to 9 hours. The selected time will be displayed on the LED screen.
- **Default Auto Shut-Off:** If no specific timer is set, the device will automatically shut off after 4 hours for safety.

LED Night Light

- **Light Control:** Short press the Timer/Light Control Knob to turn the LED night light on or off.
- **Temperature Indication:** The LED night light changes color to indicate the current temperature range:
 - Blue Light: Low temperature area (100°F-120°F / 40°C-50°C)
 - Purple Light: Middle temperature area (130°F-150°F / 55°C-65°C)
 - Red Light: High temperature area (160°F-175°F / 70°C-80°C)

Smart Candle Warmer with LED Night Light



No Flames



Safety



LED Lights



Low temp area (Blue light)



Middle temp area (Purple light)



High temp area (Red light)



Tips: Long press the button to turn the light on or off

Figure 3: LED Night Light indicating temperature ranges.

Memory Function

The coffee warmer retains all your settings (temperature and timer) if they are maintained for more than 10 seconds. This means you do not need to reset them for subsequent uses.

Using as a Candle Warmer

The CEROBEAR Mug Warmer can also be used to heat flameless scented candles. When using this function, always select a low temperature setting to avoid potential hazards such as overheating or cracking of the candle container.



Figure 4: The mug warmer is suitable for various beverages and candles.

Product Demonstration Video

Your browser does not support the video tag.

Video 1: Official product demonstration of the CEROBEAR Mug Warmer, showcasing its features and operation.

MAINTENANCE

- Always unplug the device and allow it to cool completely before cleaning.
- Wipe the heating surface and exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not submerge the device in water or spray water directly onto it.
- Store the device in a dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Not plugged in or power outlet issue.	Ensure the power cord is securely plugged into a working outlet.
Beverage is not warming.	Incorrect cup type or insufficient contact with heating surface.	Use a flat-bottomed, heat-resistant cup (ceramic, glass, stainless steel). Ensure the cup is centered on the heating surface.
LED night light not working.	Light function is turned off.	Short press the Timer/Light Control Knob to turn the light on.
Device automatically shut off.	Timer expired or default auto shut-off activated.	This is a safety feature. Reset the timer or turn the device back on if needed.

SPECIFICATIONS

Feature	Detail
Brand	CEROBEAR
Model Number	J101
Wattage	50 watts
Maximum Temperature	175°F (80°C)
Temperature Settings	9 settings (100°F to 175°F / 40°C to 80°C)
Timer Settings	1-9 hours
Auto Shut-Off	4 hours (default)
Heating Surface Diameter	4.8 inches
Product Dimensions	5.91 x 6.46 x 1.26 inches
Item Weight	1.12 pounds
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Corded Electric

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official CEROBEAR website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DHRS7Y89>

More documents and user manuals: <https://manuals.plus/>