

HEVIRGO 14082125

HEVIRGO Cordless Pressure Washer User Manual

Model: 14082125

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation, maintenance, and troubleshooting of your HEVIRGO Cordless Pressure Washer, Model 14082125. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, such as safety glasses, when operating the pressure washer.
- Do not point the spray nozzle at people, animals, or electrical equipment.
- Ensure all connections are secure before operating the device.
- Keep children and bystanders away from the operating area.
- Do not operate the pressure washer if any parts are damaged.
- When adjusting the 6-in-1 nozzle mode, do not press the jet switch to prevent accidental spray.
- Use only the charger provided with the device for battery charging.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Pressure Washer Unit
- 2 x Rechargeable Batteries
- 1 x 6-in-1 Nozzle

- 1 x Charger
- 1 x User Manual (this document)
- 1 x Water Pipe (Hose)
- 1 x Filter
- 1 x Foam Kettle



Image: Contents of the HEVIRGO Cordless Pressure Washer package, including the main unit, batteries, charger, nozzles, hose, filter, and foam kettle, neatly arranged in a carrying case.

4. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your pressure washer:

- **Main Unit:** The handheld body containing the motor and battery slot.
- **Battery:** Rechargeable 21V battery for cordless operation.

- **Nozzle Attachment:** Connects to the main unit for water output.
- **6-in-1 Nozzle:** Adjustable nozzle offering various spray patterns.
- **Water Inlet:** Connection point for the water pipe.
- **Trigger Switch:** Activates the water spray.
- **Water Pipe (Hose):** Draws water from a source.
- **Filter:** Stainless steel filter for water intake.
- **Foam Kettle:** For applying soap or cleaning solutions.



Image: Overview of the pressure washer unit with key dimensions: 45cm (17.7 inches) in length and 22cm (8.6 inches) in height.

5. ASSEMBLY AND SETUP

1. **Charge Batteries:** Fully charge both rechargeable batteries using the provided charger before first use.
2. **Attach Battery:** Slide a charged battery into the battery slot on the main unit until it clicks securely into place.
3. **Connect Nozzle:** Attach the 6-in-1 nozzle to the end of the nozzle attachment. Ensure it is firmly seated.
4. **Connect Water Pipe:** Securely connect one end of the water pipe to the water inlet on the pressure washer unit.
5. **Attach Filter:** Submerge the other end of the water pipe, with the stainless steel filter attached, into your water source (e.g., bucket, pool, river). The filter helps prevent impurities from entering the pump.

6. **Optional Foam Kettle:** If using soap, fill the foam kettle with your desired cleaning solution and attach it to the nozzle attachment instead of the 6-in-1 nozzle.



Image: The stainless steel filter, designed for efficient filtration of impurities, shown submerged in water.

6. OPERATING INSTRUCTIONS

1. **Select Nozzle Mode:** Rotate the 6-in-1 nozzle to select the desired spray pattern (0°, 15°, 25°, 40°, fan-shaped, or shower mode). Ensure the jet switch is not pressed while adjusting the nozzle.
2. **Prime the Pump:** Before spraying, hold the pressure washer with the nozzle pointed away from yourself and others. Press and hold the trigger switch until a steady stream of water emerges, indicating the pump is primed. This may take a few seconds.
3. **Begin Cleaning:** Direct the spray towards the surface to be cleaned and press the trigger switch. Adjust your distance from the surface and the nozzle setting for optimal cleaning results.
4. **Water Intake:** The pressure washer can draw water from various sources like buckets, pools, or rivers using the provided hose and filter. An additional adapter may be required if connecting directly to a garden hose or faucet.
5. **Battery Life:** Each 1500mAh battery provides approximately 30 minutes of continuous use. The package includes two batteries for extended operation.



Six -in -one Sprayer head

Image: Detail of the 6-in-1 sprayer head, illustrating its adjustable settings for various spray patterns, including a 40-degree fan spray.



**900PSI MAX
Water Pressure**

**Rated
power
180W**

**Motor
life
800-
1000H**

**Water
outlet
per
minute
4.5L**

**Motor
speed
20000rpm**

**A battery
is used
30min**

Image: A person using the HEVIRGO Cordless Pressure Washer to clean a car tire, demonstrating its application for vehicle washing.



Water outlet per minute: 4.5L

Image: A woman using the pressure washer in shower mode to water plants in a garden, highlighting its versatility beyond cleaning, with a water outlet rate of 4.5L per minute.



Image: A collage showcasing diverse applications of the pressure washer, such as washing a car, bathing a dog, cleaning a swimming pool, and watering plants.

7. MAINTENANCE AND STORAGE

- **Cleaning:** After each use, flush the pressure washer with clean water to remove any detergent residue or debris.
- **Filter Care:** Regularly inspect and clean the stainless steel filter to ensure efficient water intake and protect the pump.
- **Battery Care:** Store batteries in a cool, dry place. Do not store fully discharged batteries for extended periods.
- **Storage:** Store the pressure washer and its accessories in a dry, protected area, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No water spray or weak pressure	Battery not charged or improperly inserted. Water pipe not tightly connected. Filter is clogged. Nozzle or hole not installed correctly. Air in the pump (not primed).	Ensure battery is fully charged and securely inserted. Check and tighten all water pipe connections. Clean the stainless steel filter. Reinstall the nozzle or attachment correctly. Prime the pump by holding the trigger until water flows steadily.
Water leaks from nozzle or connections	Loose connections. Nozzle not installed in normal position.	Tighten all connections. Ensure the nozzle is correctly and fully seated.
Cannot connect to garden hose/faucet directly	Requires an adapter.	Obtain an additional adapter for direct connection.

9. SPECIFICATIONS

- **Model Number:** 14082125
- **Rated Pressure:** 25 BAR / 360 PSI
- **Max Pressure:** 40 BAR / 580 PSI
- **Rated Power:** 180W
- **Work Current/Voltage:** 21V 6A
- **Air Load Current:** 1A
- **Motor Speed:** 20000 RPM
- **Water Outlet Per Minute:** 4.5 L
- **Motor Life:** 800-1000 H
- **Battery Capacity:** 1500mAh (per battery)
- **Duration of Use (One Battery):** Approximately 30 minutes
- **Product Dimensions:** 45cm L x 22cm W x 6cm H (17.7"L x 8.6"W x 2.36"H)
- **Item Weight:** 3.52 ounces (main unit without battery/accessories)
- **Material:** Nylon, PP

10. WARRANTY INFORMATION

Specific warranty details are typically provided at the point of purchase or on the product packaging. Please refer to your purchase documentation for information regarding warranty coverage and terms. Keep your proof of purchase for any warranty claims.

11. CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or inquiries about replacement parts, please contact the retailer or manufacturer directly. Refer to your product packaging or the seller's information for

specific contact details.