

[manuals.plus](#) /

- › [Dragon Touch](#) /
- › [Dragon Touch 10.1" WiFi Digital Picture Frame Instruction Manual](#)

Dragon Touch 10.1" WiFi Digital Picture Frame

Dragon Touch 10.1" WiFi Digital Picture Frame Instruction Manual

Model: 10.1" WiFi Digital Picture Frame

1. PRODUCT OVERVIEW

The Dragon Touch 10.1" WiFi Digital Picture Frame is designed to display your cherished photos and videos with ease. Featuring an HD IPS touch screen, it allows for instant wireless sharing of memories with family and friends via a dedicated mobile application. Its auto-rotate function ensures optimal viewing in both portrait and landscape orientations.

Share Photos With Loved Anywhere in the World



Image 1: The Dragon Touch 10.1" WiFi Digital Picture Frame showcasing a family photo.

2. SETUP INSTRUCTIONS

- Power Connection:** Connect the provided power cable to the frame and plug it into an electrical outlet. The frame will automatically power on.
- Stand Installation:** Attach the included stand to the back of the frame. The stand can be adjusted to support the frame in either portrait or landscape mode.
- Wi-Fi Connection:** Follow the on-screen prompts to connect the frame to your 2.4 GHz Wi-Fi network. *Note: This device only supports 2.4 GHz Wi-Fi.*
- App Download & Account Creation:** Download the 'VPhoto' app from your mobile device's app store (iOS or Android). Create an account and register your frame.
- Frame Activation:** Locate the unique Frame ID in the device settings. Enter this ID into the VPhoto app to link your mobile device with the digital picture frame.

The Perfect Gift

Quick and easy set up, instant photo sharing.

- 1 Plug in and connect WiFi to start activation.
- 2 Download the VPhoto app and create an account.
- 3 Upload photos and they appear instantly.



Image 2: Visual guide for the initial setup process, including app download and Wi-Fi connection.

3. OPERATING INSTRUCTIONS

3.1 Photo and Video Management

- **Uploading Content:** Photos and videos can be uploaded to the frame using four methods:
 - **VPhoto App:** Share directly from your smartphone.
 - **Email:** Send photos/videos to the frame's unique email address.
 - **TF Card:** Insert a TF card (up to 64GB) into the designated slot.
 - **USB Drive:** Connect a USB drive to the frame's USB port.
- **Internal Storage:** The frame has 16GB of built-in memory, capable of storing approximately 80,000 photos.
- **Multi-User Sharing:** Invite family members to share photos and videos to your frame via the VPhoto app, fostering connection regardless of distance.
- **Auto-Rotate:** The frame automatically adjusts the orientation of photos and videos to match its physical position (portrait or landscape).



Image 3: Illustration of the four available methods for uploading media to the digital picture frame.

3.2 Display Settings

- **Touch Screen:** Navigate through menus and settings using the intuitive touch screen interface.
- **Slideshow Mode:** Customize slideshow intervals and transition effects.
- **Sleep Mode:** Set a customized sleep mode schedule to conserve energy.
- **Brightness & Volume:** Adjust screen brightness and speaker volume through the settings

menu.

- **Language:** Select your preferred language for the frame's interface.



Image 4: The frame's key features, including Wi-Fi connectivity, storage, and display options.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and frame. Avoid abrasive cleaners.
- **Storage Management:** Regularly review and manage stored photos and videos. When performing a factory reset, ensure all external devices (TF card, USB drive) are removed.

5. TROUBLESHOOTING

- **Wi-Fi Connection Issues:** Ensure your router is broadcasting a 2.4 GHz signal. The frame does not support 5 GHz networks. Verify the Wi-Fi password is correct.
- **Frame Not Responding:** If the frame becomes unresponsive, try restarting it by unplugging and re-plugging the power cable.

- **Factory Data Reset:** If persistent issues occur, a factory data reset can be performed via the settings menu. *Caution: This will erase all data from the internal memory. Ensure external storage devices are removed before proceeding.*

6. SPECIFICATIONS

- **Product Dimensions:** 10.3 x 7.1 x 0.99 inches
- **Item Weight:** 3.96 pounds
- **Screen Size:** 10.1 inches
- **Resolution:** 1280*800 (HD IPS)
- **Aspect Ratio:** 16:9
- **Internal Memory:** 16GB (approx. 80,000 photos)
- **External Storage Support:** TF Card (Max 64GB), USB Drive
- **Connectivity:** Wi-Fi (2.4 GHz only)
- **Compatible Devices:** Smartphone (via VPhoto app)
- **Manufacturer:** Dragon Touch

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included in your product packaging. For further assistance or technical support, please visit the official Dragon Touch website or contact their customer service.