

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RM-AMU002 Replacement Remote Control User Manual for Sony DVD Micro Systems

ECONTROLLY RM-AMU002

ECONTROLLY RM-AMU002 Replacement Remote Control User Manual

For Sony DVD Micro System Models: CMT-SV2D, HCD-DV2D, CMT-DV2D, HCD-SV2D

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your ECONTROLLY RM-AMU002 replacement remote control. This remote is designed to be compatible with specific Sony DVD Micro System models, offering a direct replacement without the need for complex programming.

Compatible Sony DVD Micro System Models:

- CMT-SV2D
- HCD-DV2D
- CMT-DV2D
- HCD-SV2D
- CMTSV2D
- HCDDV2D
- CMTDV2D
- HCDSV2D

2. SETUP

2.1 Battery Installation

The ECONTROLLY RM-AMU002 remote control requires AAA ALKALINE batteries for operation. Rechargeable batteries are not recommended.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Batteries are not included with the remote control.

2.2 Initial Use

This remote control is pre-programmed and does not require any additional setup or programming steps. Once batteries are installed, it is ready for use with your compatible Sony DVD Micro System.





Front view of the ECONTROLLY RM-AMU002 replacement remote control, showcasing all buttons and their labels. The remote is black with clearly marked white and red buttons.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your Sony DVD Micro System. Ensure there are no obstructions between the remote and the system's infrared receiver.

3.1 Basic Functions

- **I/O (Power) Button:** Turns the system on or off.
- **Number Buttons (0-9):** Used for direct track selection, channel input, or menu navigation.
- **Volume +/-:** Adjusts the audio output level.
- **Muting:** Mutes or unmutes the audio.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate through menus and confirm selections.


3.2 DVD/CD Playback Controls

- **PLAY MODE:** Selects playback modes (e.g., repeat, shuffle).
- **PLAY (▶):** Starts playback.
- **PAUSE (⏸):** Pauses playback.
- **STOP (■):** Stops playback.
- **REWIND (◀◀):** Rewinds or skips backward.
- **FAST FORWARD (▶▶):** Fast forwards or skips forward.
- **DVD TOP MENU / DVD MNU:** Accesses the main DVD menu.
- **SUBTITLE:** Toggles subtitle display.
- **AUDIO:** Changes audio tracks or languages.
- **ANGLE:** Changes camera angles on compatible DVDs.

3.3 Other Functions

- **SLEEP:** Sets a sleep timer for the system.
- **DISPLAY:** Shows on-screen information.
- **TIME SEARCH:** Allows searching for a specific time point in media.
- **RETURN:** Goes back to the previous menu or screen.
- **KARAOKE PON:** Activates or deactivates Karaoke features (if supported by the system).

- **TUNER (BAND, PRESET+, PRESET-):** Controls radio functions.
- **DIMMER:** Adjusts display brightness.
- **MEMORY:** Stores or recalls settings.

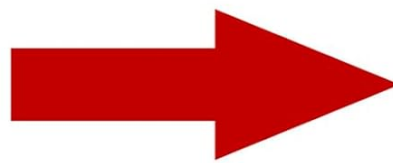

Our Replace Remote

Original Remote

An image comparing the ECONTROLLY RM-AMU002 replacement remote control (left, black) with the original Sony remote control (right, silver). A red arrow indicates the replacement is on the left, and the original is on the right, highlighting their similar button layouts.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA ALKALINE batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface and markings.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA ALKALINE batteries if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the infrared sensor on your Sony DVD Micro System. The remote requires a clear line of sight to operate.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically up to 20 feet or 6 meters).
- **System Power:** Confirm that your Sony DVD Micro System is powered on.

5.2 Specific Buttons Not Working

- **Clean Buttons:** Dust or debris might be interfering with button contacts. Gently clean around the buttons with a soft, dry cloth.
- **Test Other Buttons:** If only a few buttons are unresponsive, it might indicate a specific issue with those buttons. If all buttons are unresponsive, refer to "Remote Not Responding" above.

6. SPECIFICATIONS

Model	RM-AMU002
Brand	ECONTROLLY
Product Dimensions	3.94 x 1.57 x 0.59 inches
Item Weight	1.76 ounces
Power Source	2 x AAA ALKALINE Batteries (not included)
Connectivity Technology	Infrared (IR)
Special Feature	Pre-Programmed
Color	Black
Compatible Devices	Sony DVD Micro System (CMT-SV2D, HCD-DV2D, CMT-DV2D, HCD-SV2D)





8.27 inch



A front view of the ECONTROLLY RM-AMU002 remote control with green measurement lines indicating its approximate dimensions: 8.27 inches in length and 2.0 inches in width.

7. WARRANTY AND SUPPORT

Specific warranty information and direct customer support contact details are not provided in the product description. For any issues or inquiries, please refer to the retailer or platform where the product was purchased.



A person's hand holding the ECONTROLLY RM-AMU002 remote control, pointing it towards a television and a sound system setup. This illustrates the remote's typical use in a home entertainment environment.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DHS2LZHQ>

More documents and user manuals: <https://manuals.plus/>