

- Manuals.plus /
- › ECONTROLLY /
 - › ECONTROLLY MR22GA Voice Remote Control User Manual for LG Smart TVs

ECONTROLLY MR22GA

ECONTROLLY MR22GA Voice Remote Control User Manual

For LG Smart TVs

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and troubleshooting of your ECONTROLLY MR22GA Voice Remote Control. This remote is designed as a replacement for various LG Smart TV models, offering voice control functionality and seamless integration with your television.

2. PRODUCT OVERVIEW

The ECONTROLLY MR22GA is a dedicated voice-enabled replacement remote control for a wide range of LG Smart TVs. It features a comprehensive button layout for standard TV functions, along with a dedicated microphone button for voice commands. Its ergonomic design ensures comfortable handling.





Figure 2.1: Front view of the ECONTROLLY MR22GA Voice Remote Control.

Key Features:

- Voice Control: Activate voice commands for easy navigation and search.
- Direct Access Buttons: Quick access to popular streaming services like Netflix.
- Full Functionality: Controls power, volume, channels, navigation, and smart TV features.
- Wide Compatibility: Compatible with numerous LG Smart TV models.

Compatible LG Smart TV Models include:

55UQ7570PUJ
OLED77B2PUA
OLED65B2PUA
55UQ8000AUB
55UQ9000PUD
50QNED80AQA
65UQ7070ZUE
OLED55B2PUA
OLED65C2AUA
65QNED85AQA
50UQ7570PUJ

*(and many more listed in product
description)*

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two (2) AA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

Important: Use only AA ALKALINE batteries. Do not use rechargeable batteries, as they may not provide sufficient power or could damage the remote control.



Figure 3.1: Angled view of the remote, showing its form factor.

3.2. Pairing the Remote Control

The ECONTROLLY MR22GA remote control requires pairing with your LG Smart TV to enable full functionality, especially voice control. Follow these steps:

1. Ensure your LG Smart TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **Home** button (usually depicted as a house icon) and the **Back** button (usually depicted as a curved arrow) simultaneously for approximately 5-10 seconds.
4. Release the buttons when a pairing message appears on your TV screen, or when the remote's indicator light flashes.
5. Once paired, a confirmation message should appear on your TV. You can then test the remote's functions, including voice control.

If pairing fails, remove the batteries, wait 30 seconds, reinsert them, and repeat the pairing process. Ensure there are no obstructions between the remote and the TV.

4. OPERATING INSTRUCTIONS

4.1. Basic Button Functions

Button/Icon	Function
Power ()	Turns the TV on or off.
Number Pad (0-9)	Direct channel input or numerical selection.
Volume Up/Down	Adjusts the TV volume.
Channel Up/Down	Changes TV channels.
Mute ()	Mutes or unmutes the TV audio.
Home (△)	Accesses the Smart TV Home screen or menu.
Back (↶)	Returns to the previous screen or menu.
Navigation Wheel/Buttons	Used to navigate through menus and select items.
Mute ()	Mutes or unmutes the TV audio.
Settings (⚙)	Opens the TV's settings menu.
Quick Access	Customizable shortcut button.
Netflix, Prime Video, Disney+, Rakuten TV, Alea	Direct launch buttons for specified streaming services.

4.2. Using Voice Control

The MR22GA remote features a built-in microphone for voice commands. This allows for hands-free navigation, searching, and control of your LG Smart TV.





Figure 4.1: The remote control highlighting the voice command feature.

1. Press and hold the **Microphone** button (usually depicted as a microphone icon) on the remote control.
2. Speak clearly into the microphone located on the remote.
3. Release the Microphone button once you have finished speaking your command.
4. Your TV will process the command and respond accordingly.

Examples of Voice Commands:

- "Open Netflix"
- "Search for action movies"
- "Switch to HDMI 1"
- "Volume up" or "Volume down"
- "What's the weather like?"

5. TROUBLESHOOTING

Problem	Possible Solution
Remote not responding.	◦ Check if batteries are inserted correctly and have sufficient charge. Replace with new AA ALKALINE batteries if necessary. ◦ Ensure there are no obstructions between the remote and the TV's sensor. ◦ Re-pair the remote control with the TV (refer to Section 3.2).
Voice control not working.	◦ Ensure the remote is properly paired with the TV. ◦ Speak clearly and hold the Microphone button while speaking. ◦ Check TV settings to ensure voice recognition is enabled. ◦ Ensure the TV has an active internet connection for voice commands that require online processing.
Buttons are sticky or unresponsive.	◦ Clean the remote control surface with a soft, dry cloth. Avoid liquids. ◦ If the issue persists, the remote may require replacement.

6. SPECIFICATIONS

Feature	Detail
Model	MR22GA
Brand	ECONTROLLY
Power Source	2 x AA ALKALINE Batteries (not included)
Dimensions (L x W x H)	3.94 x 1.57 x 0.59 inches (approximately 10 x 4 x 1.5 cm)
Item Weight	1.76 ounces (approximately 50 grams)
Special Feature	Voice Search
Compatible Devices	LG Smart Televisions





Figure 6.1: Dimensions of the ECONTROLLY MR22GA remote control.

7. MAINTENANCE

- Keep the remote control dry. Moisture can damage the internal circuitry.

- Avoid exposing the remote to extreme temperatures.
- Do not drop or subject the remote to strong impacts.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. As a replacement product, warranty terms may vary. Please retain your proof of purchase for any warranty claims.

For further assistance, you may also visit the ECONTROLLY brand's official support channels if available.

© 2024 ECONTROLLY. All rights reserved. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DHS3SXJB>

More documents and user manuals: <https://manuals.plus/>