

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY A-TV10 WP-U1434LA Universal Television Remote Control User Manual

ECONTROLLY A-TV10 WP-U1434LA

ECONTROLLY A-TV10 WP-U1434LA Universal Television Remote Control User Manual

INTRODUCTION

Thank you for choosing the ECONTROLLY A-TV10 WP-U1434LA Universal Television Remote Control. This remote is designed for ease of use with large, clearly labeled buttons and features a waterproof design for enhanced durability. It is pre-programmed for compatibility with a wide range of television brands, offering a convenient replacement or secondary remote solution.



Image: Front view of the ECONTROLLY A-TV10 WP-U1434LA Universal Remote Control, showcasing its large buttons and ergonomic design.

SETUP

Battery Installation

The remote control requires two AAA ALKALINE batteries for operation. Please ensure you use ALKALINE batteries and **do not use rechargeable batteries**, as they may not provide sufficient power or may damage the remote.

1. Locate the battery compartment on the back of the remote control.
2. Gently pull the waterproof rubber cover from the bottom edge to open the battery compartment.

3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the indicators inside the compartment.
4. Carefully re-insert the waterproof rubber cover, ensuring it is securely sealed to maintain the remote's waterproof feature.

INSTALLING THE BATTERIES

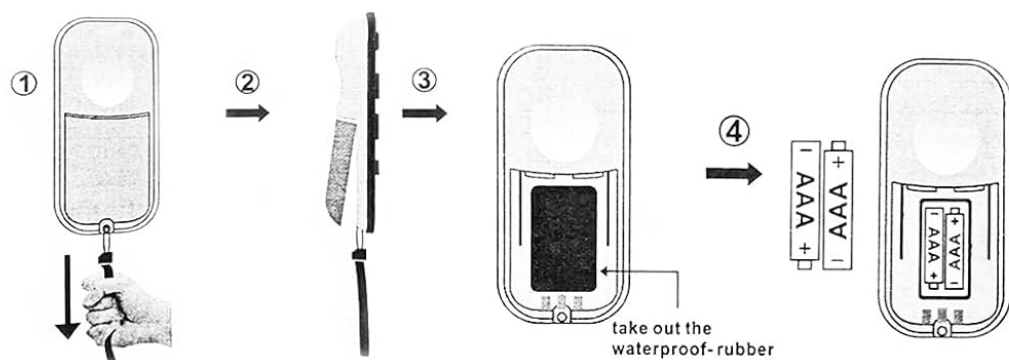


Image: A visual guide demonstrating the four steps for installing AAA batteries into the ECONTROLLY A-TV10 WP-U1434LA remote control, including opening the waterproof cover and inserting batteries correctly.

Initial Use

The ECONTROLLY A-TV10 WP-U1434LA remote control is **pre-programmed** for immediate use with most major television brands. No complex setup or code entry is typically required. Simply insert the batteries, point the remote at your television, and begin operating.

OPERATING INSTRUCTIONS

This remote control utilizes infrared (IR) technology. Ensure there is a clear line of sight between the remote's IR emitter and your television's IR receiver for optimal performance. The maximum effective range is approximately 33 feet (10 meters).



Image: A user holding the ECONTROLLY A-TV10 WP-U1434LA remote control, pointing it towards a television set, demonstrating typical usage.

Button Functions

- **Power (Red Button):** Turns the television on or off.
- **VOL ▲ / ▼:** Increases or decreases the television volume.
- **CH ▲ / ▼:** Changes the television channel up or down.
- **Mute (Speaker with X):** Mutes or unmutes the television audio.
- **AV:** Switches between video input sources (e.g., HDMI 1, HDMI 2, AV).
- **SET:** This button is typically used for advanced programming or learning functions, if applicable. Refer to specific TV

manuals if custom programming is needed, though this remote is generally pre-programmed.

MAINTENANCE

Cleaning

Due to its waterproof design, the remote can be easily cleaned. Use a soft, damp cloth to wipe the surface. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish or the waterproof seal.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA ALKALINE batteries at the same time. Dispose of old batteries responsibly according to local regulations.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with fresh AAA ALKALINE batteries.
 - Ensure there is no obstruction between the remote and the TV's IR receiver.
 - Verify you are within the effective operating range (approximately 33 feet).
- **Specific buttons not working:**
 - This may indicate a faulty button or a need for battery replacement.
 - Ensure the remote is clean and free of debris that might obstruct button presses.
- **Remote does not control my TV:**
 - While pre-programmed for wide compatibility, some older or less common TV models may not be fully supported.
 - Ensure your TV's IR receiver is functional.

SPECIFICATIONS

Brand	ECONTROLLY
Model Name	A-TV10 WP-U1434LA
Model Number	A-TV10 WP-U1434LA
Special Feature	Pre Programmed
Color	Black
Max Number of Supported Devices	1 (Television)
Compatible Devices	Television (LG, Hisense, Sony, TCL, Dynex, Insignia, Sanyo, Toshiba, Samsung, Philips, Sharp, Element, Hitachi, Westinghouse, JVC, Emerson, Magnavox, NEC, Polaroid, Quasar, RCA, Sylvania, Funai, Mitsubishi, Proscan)

Connectivity Technology	Infrared
Button Quantity	12
Controller Type	Button Control
Maximum Range	33 Feet (approx. 10 meters)
Battery Type	AAA Alkaline (2 required, not included)
Item Weight	50 Grams
Item Dimensions (L x W x H)	5.76" x 2.18" x 0.56"





Image: Diagram illustrating the dimensions of the ECONTROLLY A-TV10 WP-U1434LA remote control, showing a length of 5.7 inches and a width of 2.17 inches.

WARRANTY

This ECONTROLLY A-TV10 WP-U1434LA remote control comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact the seller or manufacturer directly through your purchase platform. Provide your model number (A-TV10 WP-U1434LA) and a detailed description of the issue for efficient support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DHS4CYZB>

More documents and user manuals: <https://manuals.plus/>