

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [JESIMAIK](#) /

› [JESIMAIK R16 Pro Motorcycle Helmet Bluetooth Headset User Manual](#)

JESIMAIK R16 Pro

JESIMAIK R16 Pro Motorcycle Helmet Bluetooth Headset User Manual

Model: R16 Pro

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your JESIMAIK R16 Pro Motorcycle Helmet Bluetooth Headset. Please read this manual thoroughly before using the device to ensure proper function and safety. Keep this manual for future reference.



Image 1.1: JESIMAIK R16 Pro main units with included microphones and speakers.

2. PRODUCT OVERVIEW

2.1. Key Features

- **Crystal Clear HD Stereo Audio:** Equipped with 44mm HD speakers and 4 customizable sound effects (Direct, Bass, Rock, Pop).
- **10-Way 2KM Live Intercom:** Supports communication for up to 10 riders with a range of 2 kilometers (1.24 miles). Cross-brand compatible.
- **Multitasking Audio:** Dual Qualcomm Bluetooth chips enable simultaneous music listening, GPS navigation, and intercom communication.
- **Advanced Noise Reduction:** Cancels up to 99% of background noise for clear communication and audio at speeds up to 120 km/h.
- **IP67 Waterproof:** Provides complete protection against rain, dust, mud, and snow.
- **Easy Installation & Glove-Friendly Design:** Features dual microphone options (boom and soft mic) and large, easy-to-operate buttons.

- **Long Battery Life:** 1000mAh battery provides 1.5 hours charging time, 30 hours music time, 35 hours talk time, and 360 hours standby time.

2.2. Package Contents

The JESIMAIK R16 Pro package includes the following items:

- R16 Bluetooth Intercom Unit (x2)
- Type-C Connector Speaker (x2)
- Hard Microphone (x2)
- Soft Microphone (x2)
- Headphone Velcro (x4)
- Microphone Velcro (x4)
- Metal Mounting Bracket (x2)
- Adhesive Back Clip (x2)
- Type-C Charging Cable (x2)
- User Manual (x2)



Image 2.1: Detailed view of all components included in the R16 Pro package.

2.3. Device Layout



Image 2.2: Overview of the R16 Pro unit with labeled controls: Volume +, Volume -, Intercom Button, Power Button, Phone Call Button, LED Indicator, Charging Port, Audio Port.

3. INSTALLATION

The R16 Pro offers dual installation methods and is compatible with various helmet types.

3.1. Mounting the Unit

Choose between the metal mounting bracket (clip) or the adhesive back clip for installation.

1. Install the bracket (clip or adhesive) on the side of your helmet.
2. Insert the R16 Pro unit from above into the installed bracket.
3. Plug the speakers and microphone into the host ports on the R16 Pro unit.

3.2. Speaker and Microphone Placement

Use the provided Velcro pads to secure the speakers inside the helmet's ear pockets. For the microphone, select either the boom microphone (for open-face helmets) or the soft microphone (for full-face helmets). Position the microphone close to your mouth for optimal voice clarity.



Image 3.1: Step-by-step guide for installing the R16 Pro, including bracket installation, unit insertion, speaker/microphone connection, and speaker/microphone placement.



Image 3.2: The R16 Pro is compatible with various helmet types including full, retro, uncover, and motocross helmets, and comes with both boom and soft microphones.

3.3. Removing the Unit

To safely remove the R16 Pro from its bracket:

1. Use your right hand to press the plastic button located below the [+] button on the unit.
2. While holding the button, use your left hand to push the R16 Pro unit in the direction of the arrow to slide it out of the bracket.



Image 3.3: Instructions for safely removing the R16 Pro unit from its mounting bracket.

4. BASIC OPERATION

4.1. Power On/Off

- **Power On:** Press and hold the Power Button until the LED indicator lights up.
- **Power Off:** Press and hold the Power Button until the LED indicator turns off.

4.2. Bluetooth Pairing with Mobile Device

1. Ensure the R16 Pro is powered off.
2. Press and hold the Power Button until the LED indicator flashes red and blue, indicating pairing mode.
3. On your mobile device, enable Bluetooth and search for "JESIMAIK R16 Pro".
4. Select the device to pair. The LED will turn solid blue once connected.

4.3. Volume Control

Use the Volume + and Volume - buttons to adjust the audio level.

4.4. Phone Call Functions

- **Answer Call:** Press the Phone Call Button once.
- **End Call:** Press the Phone Call Button once during a call.
- **Reject Call:** Press and hold the Phone Call Button.
- **Redial Last Number:** Double-press the Phone Call Button.

Glove-friendly Large Button

It's never been easier to operate the buttons!



Image 4.1: The R16 Pro features large, glove-friendly buttons for easy operation while riding.

5. INTERCOM FUNCTIONS

5.1. Intercom Pairing (Multiple Units)

The R16 Pro supports up to 10 riders for group intercom communication.

1. Ensure all R16 Pro units are powered off.
2. On two units, press and hold the Intercom Button until the LED flashes red and blue.
3. Once paired, one unit's LED will turn solid blue, and the other will flash blue.
4. Repeat the process for additional units, pairing each new unit to an already paired unit.

5.2. Initiating/Ending Intercom Calls

- **Initiate Intercom:** Press the Intercom Button once on any paired unit.
- **End Intercom:** Press the Intercom Button once during an active intercom call.

5.3. Intercom Range and Compatibility

The R16 Pro offers an intercom range of up to 2 kilometers (1.24 miles) in optimal conditions. It is designed for seamless group rides and is cross-brand compatible with certain popular models. Note that cross-brand connection can only be established with one other brand at a time.

10-Way 2KM Communication System

For up to **10 riders** intercom at a range of **2km/1.24mi**

The image features a night-time scene of a multi-lane highway with several motorcycles riding away from the camera. Dashed white lines connect ten blue Bluetooth icons positioned above each motorcycle, illustrating a 10-way communication network. An inset in the top left shows a close-up of the intercom device on a motorcycle handlebar. At the bottom, a horizontal bar contains ten motorcycle icons, each with a Bluetooth symbol above it, and a dashed line with dots below them, representing the 10-way system.

Image 5.1: The R16 Pro supports a 10-way intercom system with a range of up to 2 kilometers.



Image 5.2: The R16 Pro offers seamless pairing with other brands for enhanced communication.

6. AUDIO FUNCTIONS

6.1. Music Playback and Sound Effects

Once paired with your mobile device, you can play music. The R16 Pro features 4 customizable sound effects:

- Direct (Default)
- Bass
- Rock
- Pop

Refer to the quick start guide for instructions on switching between sound effects.



Image 6.1: The R16 Pro offers four distinct sound effects for an optimized audio experience.

6.2. Multitasking Audio

The dual Qualcomm Bluetooth chips allow for simultaneous audio functions. You can listen to music or GPS navigation while maintaining an active intercom conversation.

Multitasking Audio

Dual chips for intercom and music/GPS at the same time

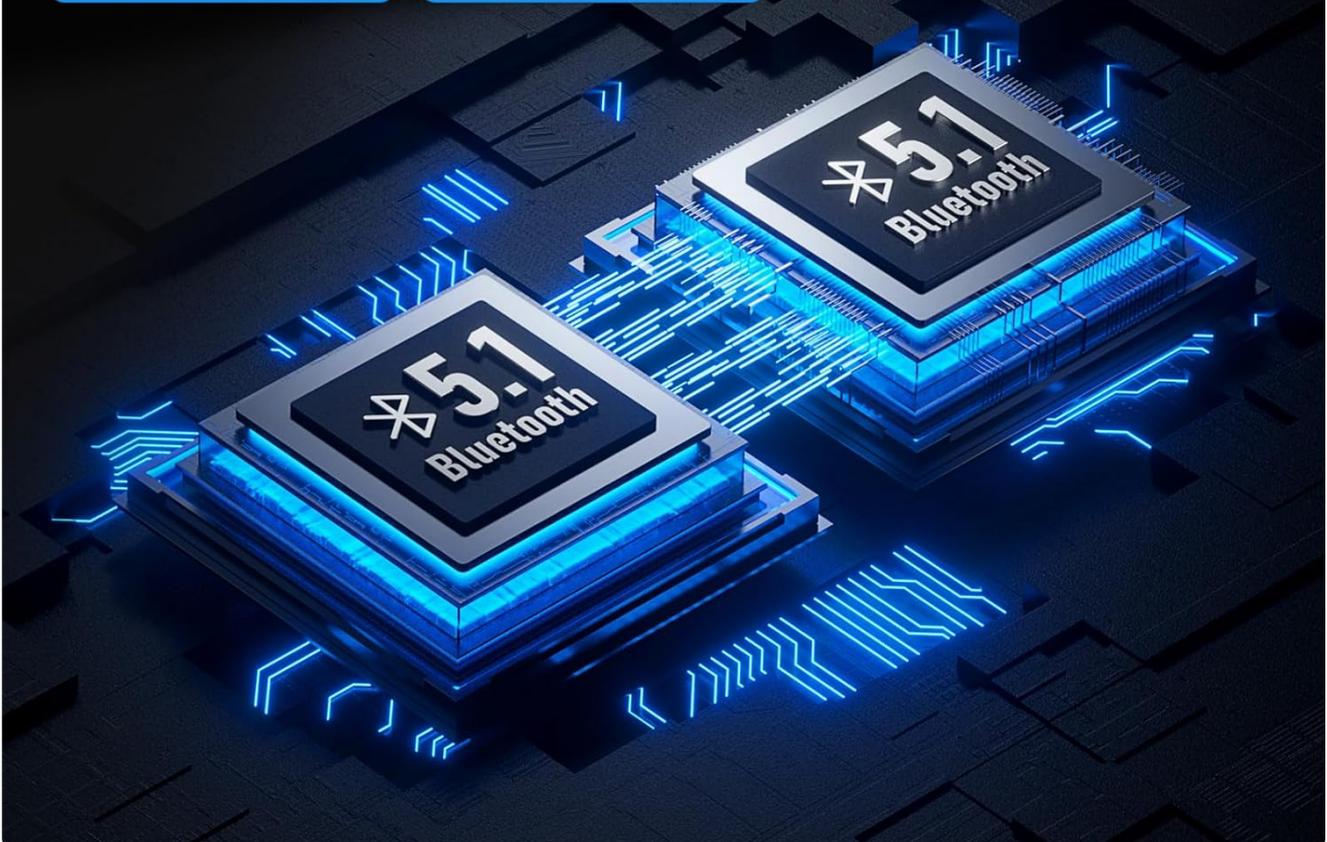
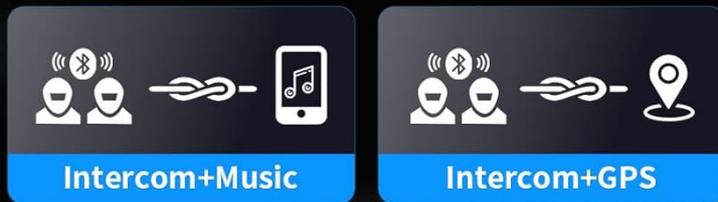


Image 6.2: Multitasking audio allows for simultaneous intercom and music/GPS functions.

6.3. Music Sharing

The R16 Pro supports music sharing, allowing you to share the same audio with a passenger or another rider within a 10-meter range.



Image 6.3: Share music with a passenger or another rider for a synchronized audio experience.

7. MAINTENANCE

7.1. Charging the Battery

Connect the R16 Pro to a power source using the provided Type-C charging cable. A full charge takes approximately 1.5 hours. The LED indicator will show charging status.

- Charging Time: 1.5 hours
- Music Time: 30 hours
- Talk Time: 35 hours
- Standby Time: 360 hours

1000mAh All-Day Power



Image 7.1: The R16 Pro features a 1000mAh battery providing extended usage times.

7.2. Waterproofing and Cleaning

The R16 Pro has an IP67 waterproof rating, protecting it from rain, dust, mud, and snow. To clean the unit, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners.

IP67 Waterproof



Image 7.2: The IP67 rating ensures the R16 Pro is protected against various environmental elements.

8. TROUBLESHOOTING

If you encounter issues with your R16 Pro, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not power on	Low battery	Charge the device for at least 1.5 hours.
Cannot pair with phone	Device not in pairing mode; Bluetooth off on phone	Ensure R16 Pro is in pairing mode (flashing red/blue LED). Enable Bluetooth on your phone and search again.
Intercom connection unstable or screeching noise	Interference; improper pairing sequence	Disconnect and re-pair the intercom units. Ensure units are within range and clear of major obstructions.

Problem	Possible Cause	Solution
Poor audio quality (music/calls)	Microphone not positioned correctly; volume too low/high; environmental noise	Adjust microphone position closer to mouth. Adjust volume. Ensure noise reduction is active.
Water damage	Exposure to water beyond IP67 rating; improper sealing	While IP67 rated, extreme conditions or prolonged submersion can cause damage. Ensure all ports are sealed. If damage occurs, contact support.

9. SPECIFICATIONS

Feature	Specification
Model Number	R16 Pro
Item Weight	1.59 pounds
Package Dimensions	7.36 x 5.67 x 3.46 inches
Batteries	2 AAA batteries required (included)
Water Resistance Level	IP67 Waterproof
Manufacturer	Shenzhen Xingyaoda Technology Co., Ltd.
Compatible Devices	Motorcycles

10. WARRANTY AND SUPPORT

10.1. Warranty Information

The JESIMAIK R16 Pro comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper installation.

10.2. Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact JESIMAIK customer support through the retailer where the product was purchased or refer to the contact information provided in the original product packaging.

Related Documents - R16 Pro

<p>JESIMAIK</p>  <p>R16 バイク用インカム 取扱説明書</p>	<p>JESIMAIK R16 Motorcycle Intercom User Manual</p> <p>Comprehensive user manual for the JESIMAIK R16 motorcycle intercom, covering features, installation, pairing, operation, troubleshooting, and specifications. Learn how to connect, communicate, and use advanced features like 'Listen & Talk' and Music Sharing.</p>
<p>JESIMAIK</p>  <p>バイク用インカム R16 Pro 取扱説明書</p>	<p>JESIMAIK R16 Pro Motorcycle Intercom User Manual</p> <p>This user manual provides detailed instructions for the JESIMAIK R16 Pro motorcycle intercom, covering features, installation, operation, pairing, and troubleshooting.</p>
<p>JESIMAIK</p>  <p>バイク用インカム Motorcycle Bluetooth Headset X6S 取扱説明書</p>	<p>JESIMAIK X6S Motorcycle Bluetooth Headset User Manual</p> <p>Comprehensive user manual for the JESIMAIK X6S Motorcycle Bluetooth Headset. Discover features for rider communication, music playback, and phone calls, along with detailed installation, safety, and operation instructions.</p>
<p>JESIMAIK (ジェスマイク)</p>  <p>インバーター発電機JM4000Xi 取扱説明書</p>	<p>JESIMAIK JM4000Xi Portable Generator User Manual and Operation Guide</p> <p>Comprehensive guide for the JESIMAIK JM4000Xi portable generator, covering safety, operation, specifications, maintenance, and troubleshooting. Ensure safe and efficient use of your generator.</p>
<p>JESIMAIK (ジェスマイク)</p>  <p>インバーター発電機JM6000XiE 取扱説明書</p>	<p>JESIMAIK JM6000XiE 5.0kVA Inverter Generator User Manual</p> <p>Comprehensive user manual for the JESIMAIK JM6000XiE 5.0kVA inverter generator, covering operation, safety, maintenance, and specifications.</p>
<p>JESIMAIK</p>  <p>インバーター発電機JM1800Xi 取扱説明書</p>	<p>JESIMAIK JM1800Xi Inverter Generator User Manual</p> <p>Comprehensive user manual for the JESIMAIK JM1800Xi inverter generator, covering operation, safety precautions, maintenance, troubleshooting, and specifications. Learn how to safely and effectively use your generator.</p>



[JESIMAIK R16 Pro Motorcycle Intercom User Manual](#)

This user manual provides detailed instructions for the JESIMAIK R16 Pro motorcycle intercom, covering features, installation, operation, pairing, and troubleshooting.

lang: score:24 filesize: 3.72 M page_count: 24 document date: 2024-10-24