

Portronics POR-2336

Portronics Harmony II Portable Bluetooth Speaker User Manual

Model: POR-2336

INTRODUCTION

Thank you for choosing the Portronics Harmony II Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

WHAT'S IN THE BOX

- 1N Portronics Harmony II Speaker
- 1N User Manual
- 1N Power Cable (Type-C)

PRODUCT OVERVIEW

The Portronics Harmony II is a 60W HD Sound portable Bluetooth speaker designed for a rich audio experience with versatile connectivity and a premium design.



Figure 1: Front view of the Portronics Harmony II Portable Bluetooth Speaker.

Key Features:

- **60W HD Sound:** Delivers powerful and clear audio with deep bass.
- **Bluetooth 5.3V:** Ensures stable and efficient wireless connectivity.
- **Bass Boost Technology:** Enhances low-frequency sounds for a more immersive experience.
- **Bass/Treble Adjustment:** Allows for personalized audio tuning.
- **Long Playtime:** Up to 5-6 hours of continuous playback on a single charge.
- **Versatile Connectivity:** Supports Bluetooth, USB, and AUX input.
- **Premium Design:** Features a luxurious leather finish and an integrated handle for portability.
- **Fast Charging:** Equipped with a Type-C port for quick charging.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C power cable to the speaker's charging port and the other end to a compatible USB power adapter (not included). The charging indicator will show the charging status.



Figure 2: Close-up of the Type-C fast charging port and Bluetooth 5.3V indicator.

A full charge typically takes a few hours and provides up to 5-6 hours of playtime.

2. Powering On/Off

Press and hold the power button (usually marked with a power symbol) located on the control panel until you hear an audible prompt or see an indicator light illuminate.

Bass Boost Technology



Figure 3: Top control panel showing the power button, mode button, and bass/treble adjustment knobs.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED light).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Portronics Harmony II" from the list of devices.
4. Once paired, the speaker will indicate a successful connection, and the LED light will become solid.



Type C
Fast Charging



Bluetooth
Version 5.3

Figure 4: Illustrates Bluetooth 5.3 connectivity with a mobile device.

2. AUX Input

Connect an audio device to the speaker's AUX-in port using a 3.5mm audio cable (not included). The speaker will automatically switch to AUX mode or you may need to press the 'M' (Mode) button to select AUX input.



Figure 5: Rear view showing USB and AUX input ports for wide compatibility.

3. USB Playback

Insert a USB flash drive containing audio files into the USB port. The speaker will automatically detect and begin playing music from the drive. Use the control buttons to navigate tracks.



Figure 6: Rear view showing the USB input port.

4. Volume and Tone Adjustment

Use the dedicated volume knob/buttons on the speaker's control panel to adjust the master volume. The Harmony II also features independent bass and treble adjustment knobs/buttons, allowing you to fine-tune the audio to your preference.

Bass Boost Technology



Figure 7: Close-up of the top panel with Bass Boost Technology and Bass/Treble Adjustment controls.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Water Resistance:** This speaker is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode. Make sure Bluetooth is enabled on your device. Move the speaker closer to your device. Forget the device from your phone's Bluetooth settings and try pairing again.
No sound from speaker.	Check volume levels on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, USB) is selected. If using AUX, check the cable connection.
Poor sound quality.	Adjust Bass/Treble settings. Ensure the speaker is not too far from the Bluetooth source or obstructed. Try a different audio source or file.

SPECIFICATIONS

Feature	Detail
Model Name	Harmony II
Model Number	POR-2336
Output Power	60 Watts
Bluetooth Version	5.3V
Battery Capacity	5000 mAh Lithium Polymer
Playtime	Up to 5-6 Hours
Charging Port	Type-C
Connectivity Options	Bluetooth, AUX, USB
Material	ABS Plastic, Leather Finish
Control Method	Touch
Product Dimensions	28D x 22.5W x 16H Centimeters
Item Weight	2.4 kg (2400 Grams)
Impedance	4 Ohm
Country of Origin	China

WARRANTY AND SUPPORT

Portronics products come with a standard manufacturer's warranty. For warranty details, service, or technical support,

please contact Portronics customer service:

- **Email:** help@portronics.com
- **Phone:** +91 9555-245-245
- **Manufacturer Address:** Portronics Digital Pvt Ltd, First Floor Property No D 8 Upper Basement Sector 8 Noida Uttar Pradesh 201301

Please retain your purchase receipt for warranty claims.

© 2024 Portronics. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question