

[Manuals.plus](#) /

› [Borofone](#) /

› Borofone BR44 Colorful LED Flashing Wireless Sports Bluetooth Speaker User Manual

## Borofone BR44

# Borofone BR44 Colorful LED Flashing Wireless Sports Bluetooth Speaker User Manual

Model: BR44

## INTRODUCTION

---

Thank you for choosing the Borofone BR44 Colorful LED Flashing Wireless Sports Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.



Image: The Borofone BR44 speaker in dark red, showcasing its cylindrical design, integrated strap, control buttons, and the colorful LED light strip along its side.

## SAFETY INFORMATION

---

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Refer to qualified service personnel.
- Keep the speaker away from water and other liquids.
- Use only the specified charging cable and adapter.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- 1 x Borofone BR44 Colorful LED Flashing Wireless Sports Bluetooth Speaker
- 1 x Charging Cable
- 1 x User Manual



Image: The Borofone BR44 speaker's retail packaging, illustrating the product's design and key features on the box.

## PRODUCT OVERVIEW

---

Familiarize yourself with the various parts of your Borofone BR44 speaker:

- **Power Button:** Used to turn the speaker on/off.
- **Mode Button (M):** Switches between Bluetooth, FM, TF card, USB disk, and AUX modes.
- **Play/Pause Button:** Controls playback, answers/ends calls.
- **Volume Down / Previous Track Button (-):** Decreases volume, skips to previous track.
- **Volume Up / Next Track Button (+):** Increases volume, skips to next track.
- **LED Light Strip:** Displays colorful flashing effects.
- **Charging Port:** For connecting the charging cable.
- **TF Card Slot:** For inserting a TF (MicroSD) card.
- **USB Disk Port:** For inserting a USB flash drive.
- **AUX Port:** For connecting external audio devices via a 3.5mm audio cable.



Image: A collection of Borofone BR44 speakers in various colors, highlighting the design consistency across different color options.

## SETUP

---

### Charging the Speaker

1. Connect the charging cable to the speaker's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status. A full charge takes approximately 2 hours.
4. Once fully charged, disconnect the charging cable.

*Note: For optimal battery life, fully charge the speaker before first use.*

### Powering On/Off

- **To Power On:** Press and hold the Power button for a few seconds until you hear an audible prompt and the LED lights illuminate.
- **To Power Off:** Press and hold the Power button again for a few seconds until you hear an audible prompt and the LED lights turn off.

## OPERATING INSTRUCTIONS

---

### Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, press the Mode (M) button to switch to Bluetooth mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "BR44" from the list of found devices.
4. Once paired, the speaker will give an audible confirmation, and the blue LED will stop flashing.

5. You can now play audio from your device through the speaker.

## FM Radio Mode

1. Press the Mode (M) button to switch to FM radio mode.
2. Press the Play/Pause button once to automatically scan and save available FM stations.
3. Use the Volume Up (+) and Volume Down (-) buttons (short press) to switch between saved stations.

## TF Card / USB Disk Playback

1. Insert a TF (MicroSD) card or USB flash drive with MP3 audio files into the respective slot/port.
2. The speaker will automatically switch to TF card or USB disk mode and begin playing music.
3. Use the Play/Pause button to control playback.
4. Use the Volume Up (+) and Volume Down (-) buttons (short press) to skip tracks.

## AUX Mode

1. Connect one end of a 3.5mm audio cable (not included) to the speaker's AUX port.
2. Connect the other end to the audio output jack of your external device (e.g., MP3 player, computer).
3. The speaker will automatically switch to AUX mode.
4. Control playback and volume from your external device.

## TWS (True Wireless Stereo) Mode

TWS mode allows you to pair two Borofone BR44 speakers together for a stereo sound experience.

1. Ensure both BR44 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), double-press the Mode (M) button. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.
5. Audio will now play in stereo through both speakers.

*To exit TWS mode, double-press the Mode (M) button on either speaker.*

## LED Lighting Effects

The Borofone BR44 features colorful LED lighting that can flash with the music melody.

- The LED lights are typically active when the speaker is powered on.
- Specific controls for changing LED patterns or turning them off may vary. Refer to the product's physical buttons for any dedicated light control.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the surface of the speaker. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.

- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use, to prevent deep discharge.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker for at least 30 minutes.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far apart.	Ensure speaker is in Bluetooth pairing mode. Turn on Bluetooth on your device. Move speaker closer to device (within 10 meters).
No sound.	Volume too low; incorrect mode; device not playing.	Increase speaker and device volume. Ensure correct mode (Bluetooth, AUX, TF, USB). Check if audio is playing on the source device.
Poor FM radio reception.	Weak signal.	Move the speaker to a location with better signal.

## SPECIFICATIONS

Feature	Detail
Model	BR44
Bluetooth Version	5.4 (JL AC6965E chip)
Battery Capacity	1200mAh
Charging Time	Approx. 2 hours
Music Playback Time	Up to 2 hours
Speaker Size	45mm x 2
Output Power	5W x 2 (Total 10W)
Dimensions (L x W x H)	220.9 x 76 x 76 mm
Weight	520g (0.52 kg)
Supported Modes	Bluetooth, FM, TF card, USB disk, Aux, TWS
Material	Plastic
Color	Dark Red (as per product title)

## WARRANTY AND SUPPORT

The Borofone BR44 speaker comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the official Borofone customer service.

Manufacturer: Shenzhen Hoco Technology Development Co., Ltd.

*Note: Warranty terms may vary by region and retailer. Keep your purchase receipt as proof of purchase.*



© 2024 Borofone. All rights reserved.