

COBIZI Pop Up Gazebo

COBIZI 15x15 Pop Up Gazebo Screen Tent Instruction Manual

Model: Pop Up Gazebo

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions and warnings before assembling, using, or storing this product. Failure to follow these instructions may result in serious injury or product damage.

- Users should exercise caution when handling the metal frame, stakes, and other components.
- Ensure the shelter is securely anchored to the ground using all provided stakes and wind ropes to prevent tipping or collapse, especially in windy conditions.
- Adhere to weight limits and capacity guidelines to avoid structural damage or injury. This gazebo is designed for 25-30 people.
- Do not use this product during heavy rain, strong winds, lightning storms, or other severe weather conditions. Disassemble and store the gazebo to prevent damage.
- Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- Always supervise children around the gazebo.
- Inspect all components for damage before each use. Do not use if any parts are damaged or missing.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Portable Screen Tent (1 pc)
- Carrying Bag (1 pc)
- Stakes (24 pcs)
- Wind Ropes (15 pcs)
- Door Frame Rods (2 pcs)



Figure 2.1: Visual representation of the packing list, showing the tent, carrying bag, ropes, stakes, and door frame rods.

3. PRODUCT OVERVIEW

The COBIZI 15x15 Pop Up Gazebo Screen Tent is designed for quick and easy setup, providing a spacious and comfortable outdoor shelter with mosquito netting. It features a sturdy metal frame and waterproof, UV-resistant fabric.

LARGE SPACE

Comfortably fits 25-30 people, Plus a furniture set



Figure 3.1: The COBIZI Pop Up Gazebo set up in a grassy area, showcasing its spacious interior and mesh walls.

15FTx15FT

— Pop up Gazebo —



Weight



Waterproof



UV Proof



Portable



Quick Set

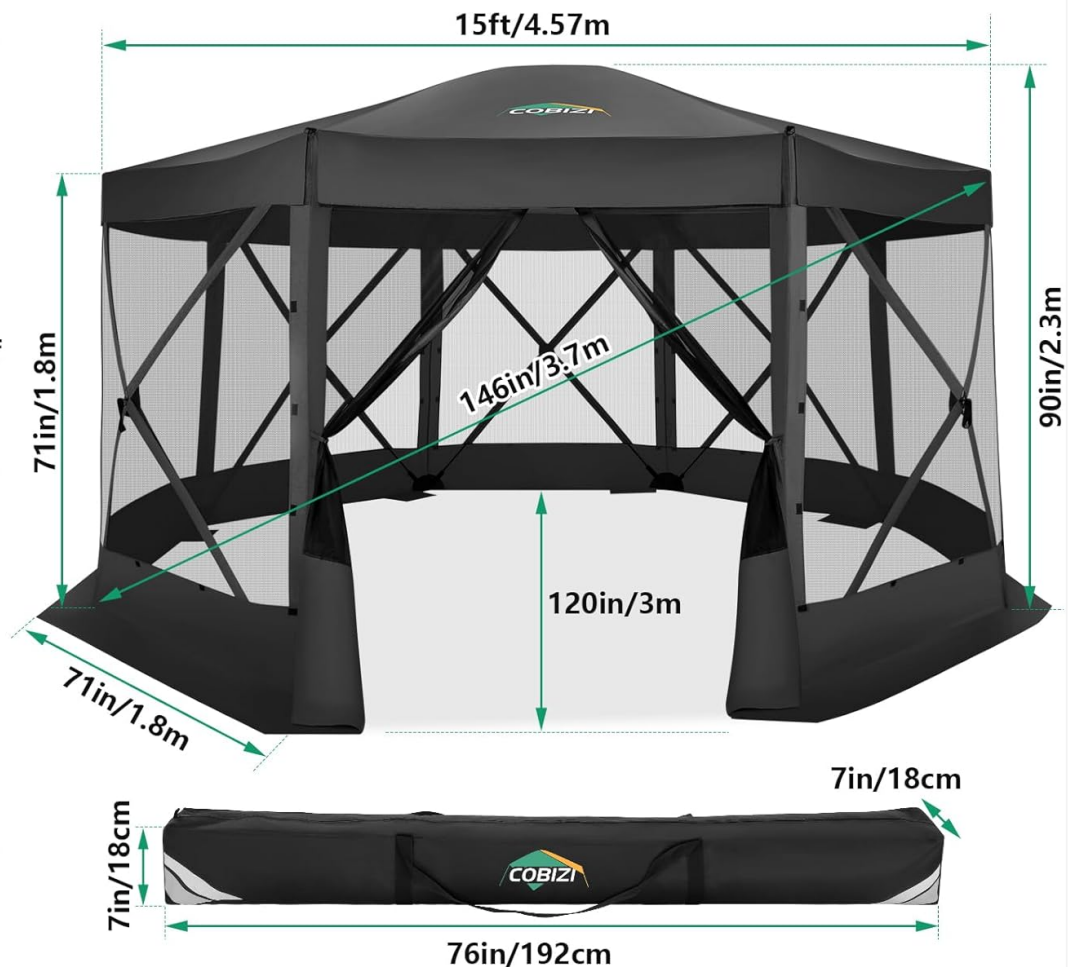 


Figure 3.2: Detailed dimensions of the 15x15ft octagonal gazebo, including height and width measurements.

Key Features:

- **Quick Instant & Easy Setup:** One-piece frame, no installation required, can be set up by one person in under 60 seconds.
- **Spacious and Comfortable:** 15FT x 15FT size, accommodates 25-30 people and furniture, with high ceilings.
- **Durable and Long-Lasting:** Sturdy metal frame, waterproof and UV-resistant banded roof panels (210D polyester fabric with UV 50+ rating).
- **Protection From The Elements:** Tightly woven mesh panels keep bugs out while allowing air circulation.

Product Videos:

Your browser does not support the video tag.

Video 3.1: Detailed installation guide for the COBIZI Pop Up Gazebo, demonstrating each step for quick and easy setup.

Your browser does not support the video tag.

Video 3.2: A demonstration of the large interior space of the COBIZI Pop Up Canopy, highlighting its capacity for multiple people and furniture.

4. SETUP INSTRUCTIONS

The COBIZI Pop Up Gazebo is designed for quick and easy assembly, typically taking one person less than 60 seconds.

1. **Step 1: Stand Shelter Up on the Center Hub.** Remove the gazebo from its carrying bag. Stand the folded gazebo upright, ensuring the center hub is at the top.

EASY SET UP **IN 60 SECONDS!**
COMFORT & CONVENIENCE

STEP 1
STAND SHELTER UP ON THE CENTER HUB

STEP 2
OPEN WITH ROOF FACING UP WITH POLES ON THE INSIDE

STEP 3
PULL HUB-SUPPORT STRAPS ON EACH PANEL

STEP 4
PUSH THE TOP CENTER HUB UPWARDLY

Figure 4.1: A person standing the folded gazebo upright by holding the center hub.

2. **Step 2: Open with Roof Facing Up.** Lay the gazebo flat on the ground with the roof facing upwards and the poles on the inside.

Packing List

 
Portable Screen Tent



Ropes 15pcs



Door frame rods 2pcs

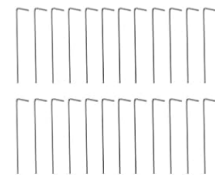

Stakes 24pcs



◀ Carrying bag 1pcs

Figure 4.2: The gazebo laid flat on the ground, ready for expansion.

- Step 3: Pull Hub-Support Straps.** With the poles on the inside, reach inside and pull each panel by its hub-support strap while holding the roof line with the opposite hand.

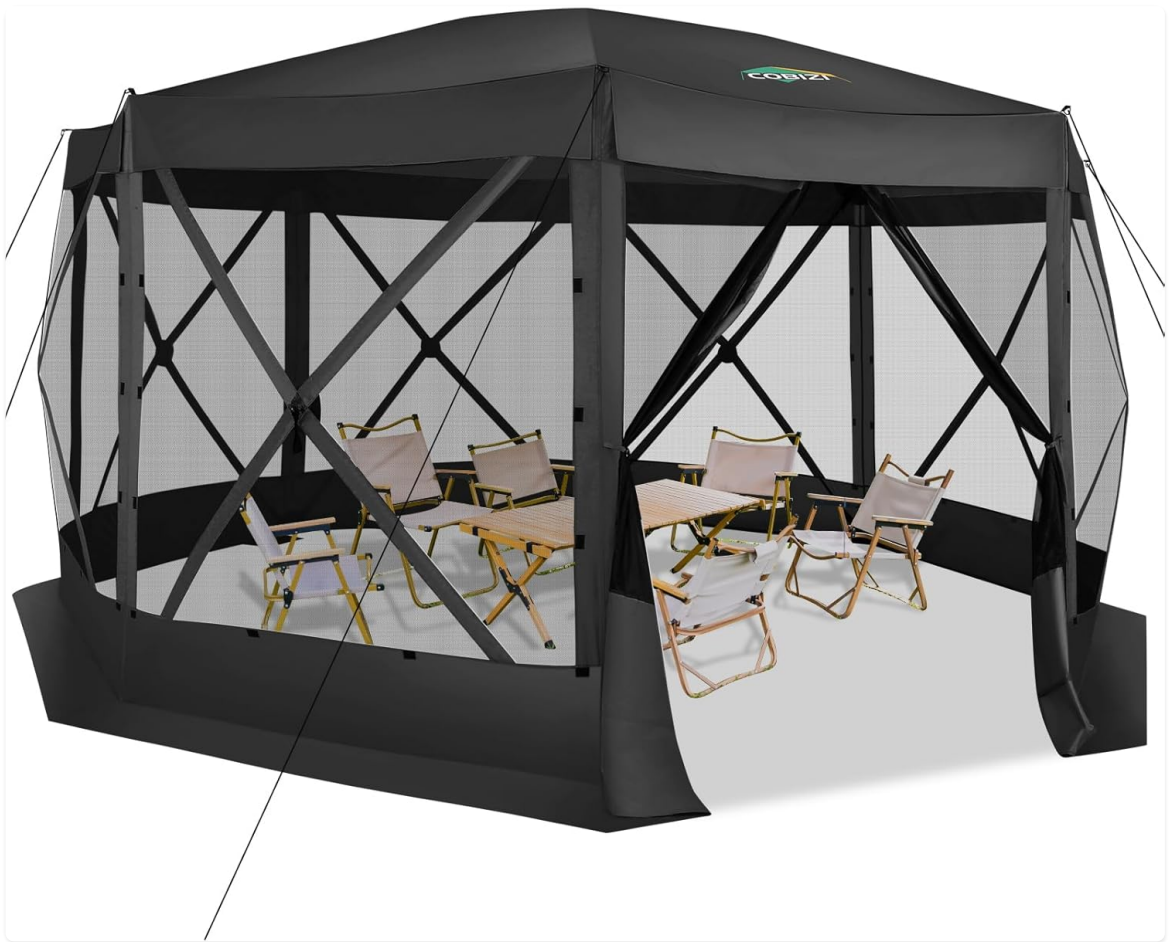 


Figure 4.3: A person pulling the hub-support straps to expand the gazebo's frame.

- Step 4: Push Top Center Hub Upward.** Enter through the door and push the roof's center hub upward until it locks into place and the gazebo is fully erect.
- Step 5: Secure with Stakes and Ropes.** Use the provided stakes to anchor the gazebo's base to the ground. Attach wind ropes to the designated loops on the roof and secure them to the ground with additional stakes for enhanced stability.
- Step 6: Install Door Frame Rods.** Insert the two door frame rods into the sleeves at the bottom of the door openings to maintain their shape. Note that door frame rods may be gray or black and installed differently based on color.

5. OPERATION

The COBIZI Pop Up Gazebo is designed for ease of use once assembled.

- **Entry and Exit:** The gazebo features zippered doors for easy access. Ensure zippers are fully closed to keep insects out.
- **Ventilation:** The mesh panels provide excellent ventilation while protecting against mosquitoes and other insects.
- **Privacy/Weather Protection (Optional):** If you have purchased optional sidewalls, attach them using the integrated Velcro fasteners for added privacy or protection from sun and light rain.

6. CARE AND MAINTENANCE

Proper care will extend the lifespan of your COBIZI Pop Up Gazebo.

- **Cleaning:** Clean the fabric with a mild soap solution and a soft cloth. Rinse thoroughly with water and allow to air dry completely before storage. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Always disassemble the gazebo and pack it away during heavy rain, strong winds, or when not in use. Store in the provided carrying bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect the frame, fabric, zippers, and mesh for any signs of wear, tear, or damage. Address any issues promptly to prevent further damage.

7. TROUBLESHOOTING

Here are some common issues and their potential solutions:

- **Gazebo is unstable:** Ensure all support straps are pulled taut and the center hub is fully locked. Verify that all stakes and wind ropes are securely fastened to the ground.
- **Water pooling on the roof:** This can occur during heavy rain. While the roof is waterproof, prolonged exposure to heavy rain can cause pooling. It is recommended to disassemble the gazebo during such conditions.
- **Zippers are sticking:** Apply a small amount of zipper lubricant or a graphite pencil to the zipper teeth to improve smoothness.
- **Mesh is damaged:** Small tears can often be repaired with a mesh repair kit. For larger damage, contact customer service for replacement options.

8. PRODUCT SPECIFICATIONS

Specification	Detail
Brand	COBIZI
Model Number	Pop Up Gazebo
Material	Metal (Frame), 210D Polyester Fabric (Canopy)
Color	Black
Product Dimensions (L x W x H)	78"L x 78"W x 98"H (Note: This seems to be a smaller dimension than 15x15ft, likely referring to a specific part or folded size. The 15x15ft refers to the octagonal floor area.)
Floor Area	225 Square Feet (15x15ft Octagonal)
Occupancy	25-30 persons
UV Protection	UV 50+ rating
Water Resistance Level	Waterproof
Assembly Required	No (Instant Pop-Up Design)

9. WARRANTY AND SUPPORT

Your COBIZI Pop Up Gazebo comes with a **5-year warranty**.

For any questions, concerns, or warranty claims, please contact COBIZI customer service. You can typically find contact information on the product packaging or through the retailer where the product was purchased.

For support related to your purchase on Amazon, you may contact the seller, COBIZI Direct, through your Amazon order details page.