

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [XIAOMI](#) /
- › [XIAOMI Vacuum Cleaner G20 Max User Manual](#)

## XIAOMI G20 Max (BHR8828EU)

# XIAOMI Vacuum Cleaner G20 Max User Manual

Model: G20 Max (BHR8828EU)

- [Introduction](#)
- [Safety](#)
- [Components](#)
- [Setup](#)
- [Operation](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Specifications](#)
- [Warranty & Support](#)

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your XIAOMI Vacuum Cleaner G20 Max. Please read it thoroughly before first use and retain it for future reference. The G20 Max features 180AW strong suction power, an LED display, a specialized pet hair brush, and a 60-minute run time for comprehensive cleaning.

# XIAOMI CORDLESS VACUUM



	 <b>G20Max</b>	 <b>G20</b>	 <b>G20Lite</b>
Surface Recommendation	All Floor	All Floor	All Floor
Suction Power	180 AW	150 AW	/
Vacuum Degree	25 KPA	25 KPA	18 KPA
Dust Bin Capacity	0.6 Litres	0.6 Litres	0.55 Litres
Cleaning Mode	High / Medium / Low	High / Medium / Low	High / Low
Run Time	up to 60 min	up to 60 min	up to 45 min
Charging Time	3.5H	3.5H	5H
Motorised Brush LED Lights	White Lighting	White Lighting	White Lighting
One-Tap Emptying	YES	YES	YES
Filtration Rate	99.9%	99.9%	99.9%
LED Display	YES	NO	NO
Pet Hair Detangled	YES	YES	YES
Wall Dok	Multi Accessory Holder & Charging Station	Multi Accessory Holder Only	Multi Accessory Holder Only
Accessories In Box	<ul style="list-style-type: none"> <li>Motorised Brush with LED Lights</li> <li>Fabric and Mattress Tool</li> <li>Combination Crevice Tool</li> <li>Extension Hose</li> <li>Pet Groom Tool</li> <li>Wall Dok with Charging Station</li> <li>Wall Dok Multi Accessory Holder</li> </ul>	<ul style="list-style-type: none"> <li>Motorised Brush with LED Lights</li> <li>Combination Crevice Tool</li> <li>Fabric and Mattress Tool</li> <li>Wall Dok Multi Accessory Holder</li> </ul>	<ul style="list-style-type: none"> <li>Motorised Brush with LED Lights</li> <li>Combination Crevice Tool</li> <li>Wall Dok Multi Accessory Holder</li> </ul>

Image: The main unit of the XIAOMI Vacuum Cleaner G20 Max, showcasing its sleek design.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance, including the following:

- Read all instructions before using the appliance.
- Do not leave the appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.

### 3. PRODUCT COMPONENTS AND ACCESSORIES

---

The XIAOMI Vacuum Cleaner G20 Max comes with a comprehensive set of accessories designed for versatile cleaning tasks. Familiarize yourself with each component:

- **Main Vacuum Unit:** The core device housing the motor, dustbin, and controls.
- **Motorised Brush with LED Lights:** For general floor cleaning, illuminating hidden dust.
- **Fabric and Mattress Tool:** Designed for upholstery and bedding.
- **Combination Crevice Tool:** A versatile tool for narrow spaces and dusting.
- **Extension Hose:** Provides extended reach for cleaning high or awkward areas.
- **Pet Groom Tool:** Specifically designed for grooming pets and collecting loose hair.
- **Wall Dock with Charging Station:** For convenient storage and charging.
- **Accessory Kit:** Additional small parts and brushes.
- **Adapter:** Power supply for charging.

# Ausgezeichnete maximale Saugleistung von 180AW

## Sofortige Entfernung von hartnäckigem Schmutz

**25,000Pa**

Maximale Saugleistung\*

**20%**

bessere Saugleistung\*



Image: A comparison table highlighting features and accessories across different Xiaomi vacuum models, including the G20 Max.

# 2-in-1-Düsenaufsatz

## Müheleose Reinigung von Ritzen und Oberflächen

Wechsle zur vielseitigen 2-in-1-Bürstendüse, um enge Räume und Möbeloberflächen mühelelos zu reinigen und keine Stelle unberührt zu lassen.



### Wechseln zur flachen Saugdüse

Tiefenreinigung von Sofas und Fensterritzen



### Wechseln zum Bürstenaufsatz

Reinigen von Tastaturen, Vorhängen und Möbeloberflächen

Image: The 2-in-1 nozzle attachment, useful for cleaning crevices and surfaces.

## 4. SETUP AND INITIAL USE

---

### 4.1 Assembly

1. Unpack all components and ensure all parts are present.
2. Connect the main vacuum unit to the extension wand until it clicks into place.
3. Attach the desired cleaning head (e.g., motorised brush) to the end of the extension wand.
4. For handheld use, attach accessories directly to the main unit.

### 4.2 Charging the Battery

Before first use, fully charge the vacuum cleaner. The battery provides up to 60 minutes of runtime in Eco mode.

- Mount the wall dock in a suitable location near a power outlet.
- Connect the adapter to the charging station and plug it into a power outlet.
- Place the vacuum cleaner onto the charging station. The LED display will indicate charging status.

- A full charge typically takes approximately 3.5 hours.

# Vielseitiger 2-in-1-Ständer für Laden und Aufbewahrung

Schnelles Laden, leichter Zugang.



Image: The wall-mounted charging dock, providing a convenient storage and charging solution for the vacuum.

## 5. OPERATING THE VACUUM CLEANER

---

### 5.1 Power On/Off and Mode Selection

Press the power button on the handle to turn the vacuum on or off. Use the mode selection button to cycle through the three power modes: Eco, Standard, and High Power.

- **Eco Mode:** For light cleaning and extended battery life (up to 60 minutes).
- **Standard Mode:** For daily cleaning of small particles and general floor surfaces.
- **High Power Mode:** For stubborn dirt and large debris, providing maximum suction.

# LED HD-Farbdisplay Überprüfung des Reinigungsstatus auf einen Blick



Image: The LED display on the vacuum cleaner, indicating battery level and current operating mode.

## 5.2 Using Attachments

Select the appropriate attachment for your cleaning task:

- **Motorised Brush with LED Lights:** Ideal for all floor types. The built-in LED lamp reveals hidden dust for a more thorough clean.
- **Pet Groom Tool:** Use this tool to gently groom your pet and simultaneously vacuum loose hair. Ensure your pet is comfortable with the tool before use.
- **Combination Crevice Tool:** Perfect for reaching into tight corners, between sofa cushions, or for dusting delicate surfaces.
- **Extension Hose:** Connect this to the main unit or extension wand with an accessory for increased flexibility and reach, useful for cleaning high shelves or inside vehicles.

# Elektrische Bodendüse mit Licht für verschiedene Bodenbeläge Sorgfältige Reinigung im gesamten Haus

Die elektrische Bodendüse eignet sich für eine Vielzahl von Oberflächen wie Dielen, Fliesen und Teppiche. Mit seinem integrierten LED-Licht deckt er versteckten Staub in dunklen Bereichen auf und sorgt so für eine gründlichere Reinigung.



Image: The motorised floor nozzle with LED lights, highlighting its ability to reveal dust on a hard floor surface.



# Spezielle Tierhaarbürste

## Gleichzeitiges Kämmen und Saugen, um lose Haare zu beseitigen

Die speziell für lang- und kurzhaarige Haustiere entwickelte Bürste glättet und entwirrt nicht nur, sondern dringt auch tief in das Fell ein, um lose Haare zu entfernen. Die Kammzähne sind abgerundet, damit die Haut deines Haustiers nicht verletzt wird. Haare können durch Drücken der PUSH-Taste einfach vom Kamm entfernt werden.



\* Wenn du den Staubsauger mit dem Bürstenaufsatz für Haustiere verwendest, empfiehlt es sich, den Energiespar- und den Standardmodus zu verwenden. Wenn das Tier nicht mitspielt, brich den Reinigungsversuch sofort ab. Ergreife Vorsichtsmaßnahmen, um die Sicherheit von Personen und Tieren während der Verwendung zu gewährleisten.

Image: The specialized pet hair brush attachment in use, demonstrating its function for grooming and vacuuming pet fur.

# Verlängerungsrohr

Kompatibel mit der 2-in-1-Bürstendüse und der Tierhaarbürste zum Reinigen von Oberflächen wie Schränken und Fensterbänken oder zum Entfernen von Tierhaaren.



Image: The vacuum cleaner equipped with the extension hose and a crevice tool, reaching a high surface for cleaning.

## 6. MAINTENANCE AND CARE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 6.1 Emptying the Dustbin

The 0.6-liter dustbin should be emptied regularly, especially when the MAX line is reached.

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Press the dustbin release button to detach it from the main unit.
3. Position the dustbin over a waste bin and press the bottom release button to open the flap and empty the contents.
4. Close the flap and reattach the dustbin to the main unit until it clicks securely.

# Leicht zu entleerendes Design

Der Staubbehälter öffnet sich automatisch, um Ihnen das Entleeren zu erleichtern und Ihre Hände sauber zu halten.



Image: A hand demonstrating the process of emptying the vacuum cleaner's dustbin.

## 6.2 Cleaning Filters

The G20 Max features a 5-stage precision filtration system with washable components, including a HEPA filter. Clean filters regularly to maintain suction power.

1. Remove the dustbin as described above.
2. Twist and pull out the filter assembly from the dustbin.
3. Separate the individual filter components.
4. Rinse all washable filter parts under running water until clean. Do not use detergents.
5. Allow all filter components to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Ensure they are completely dry to prevent mold or damage.

# Abwaschbare Filtereinheiten

Wiederverwendbar, umweltfreundlich und sparsam.



Image: Various washable filter components being cleaned under running water, illustrating the ease of maintenance.

## 6.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris. Use scissors to cut away any tangled hair and remove it. The brush roll can often be removed for easier cleaning.

## 7. TROUBLESHOOTING

If you encounter issues with your XIAOMI Vacuum Cleaner G20 Max, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Loss of suction power	Dustbin is full Filters are clogged Hose or brush head is blocked	Empty the dustbin Clean or replace filters Check and clear any blockages
Battery not charging	Charger not properly connected Faulty adapter or charging dock	Ensure adapter is securely plugged into both the dock and power outlet Contact customer support if issues persist

Problem	Possible Cause	Solution
Brush roll not spinning	Hair or debris tangled in brush Brush head attachment not properly connected	Clean the brush roll, removing any obstructions Reattach the brush head securely

If the problem persists after attempting these solutions, please contact XIAOMI customer support for further assistance.

## 8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	XIAOMI
Model Number	Xiaomi Vacuum Cleaner G20 Max EU 57805
Colour	Titanium Grey
Product Dimensions	12.4 x 22.6 x 34 cm
Item Weight	3.7 kg
Capacity	0.6 litres
Power / Wattage	450 watts
Number of Speeds	3
Noise Level	72 Decibels
Runtime	Up to 1 hour (in Eco mode)
Special Features	Bagless, Cordless, HEPA, Lightweight, Spotless Cleaning
Filter Type	HEPA Filter
Included Components	Accessory Kit, Adapter, Charging Dock, Crevice Tool, Dusting Brush
Is Cordless?	Yes







## 9. WARRANTY AND CUSTOMER SUPPORT

Your XIAOMI Vacuum Cleaner G20 Max is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact XIAOMI customer service through their official website or the contact information provided in your product documentation. When contacting support, please have your model number (BHR8828EU) and purchase date ready.

You can find more information and support resources on the official XIAOMI website: [www.mi.com/global/support](http://www.mi.com/global/support)

## Related Documents - G20 Max (BHR8828EU)

	<p><a href="#">Xiaomi Vacuum Cleaner G20/G20 Max Filter Kit User Manual</a></p> <p>User manual for the Xiaomi Vacuum Cleaner G20/G20 Max Filter Kit, providing instructions for filter replacement and product specifications.</p>
	<p><a href="#">Xiaomi Vacuum Cleaner G20 User Manual - Comprehensive Guide</a></p> <p>This document provides a comprehensive user manual for the Xiaomi Vacuum Cleaner G20. It covers safety instructions, product overview, installation guides, charging procedures, usage tips, care and maintenance, troubleshooting common issues, technical specifications, environmental notices, and warranty information.</p>
	<p><a href="#">Xiaomi Vacuum Cleaner G20 Max User Manual</a></p> <p>User manual for the Xiaomi Vacuum Cleaner G20 Max, providing instructions on safety, product overview, installation, charging, usage, maintenance, troubleshooting, specifications, and warranty information.</p>
	<p><a href="#">Xiaomi Vacuum Cleaner G20 Lite User Manual</a></p> <p>This user manual provides detailed instructions for the Xiaomi Vacuum Cleaner G20 Lite, covering product overview, installation, charging, usage, care and maintenance, troubleshooting, specifications, and warranty information.</p>
	<p><a href="#">Xiaomi Vacuum Cleaner G20 Lite User Manual and Guide</a></p> <p>Comprehensive user manual for the Xiaomi Vacuum Cleaner G20 Lite, covering safety instructions, product overview, installation, charging, usage, maintenance, troubleshooting, specifications, environmental notice, and warranty information.</p>
	<p><a href="#">Xiaomi Robot Vacuum X20 Max User Manual</a></p> <p>Comprehensive user manual for the Xiaomi Robot Vacuum X20 Max, detailing setup, operation, maintenance, safety guidelines, and specifications for optimal performance of this advanced robotic cleaner.</p>