

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SKMEI](#) /

› [SKMEI 9334 Men's Quartz Chronograph Watch User Manual](#)

SKMEI 9334

SKMEI 9334 Men's Quartz Chronograph Watch User Manual

Model: 9334

INTRODUCTION

Thank you for choosing the SKMEI 9334 Men's Quartz Chronograph Watch. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.



Image: Overview of the SKMEI 9334 watch highlighting its key features including analog display, round dial, time, date, stopwatch functions, stainless steel strap, and 30m water resistance.

1. SETUP

1.1 Setting the Time

1. Pull the crown (B) out to position 2.
2. Turn the crown (B) to set the hour and minute hands to the desired time.
3. Push the crown (B) back to position 1.

1.2 Setting the Date

1. Pull the crown (B) out to position 1.
2. Turn the crown (B) clockwise or counter-clockwise to set the date.
3. Push the crown (B) back to the normal position.

Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism.

1.3 Adjusting the Bracelet

The stainless steel bracelet can be adjusted for a comfortable fit. If adjustment is needed, it is recommended to visit a professional watchmaker or jeweler to remove or add links. Improper adjustment can damage the bracelet or watch.



Image: Angled view of the SKMEI 9334 watch, showing the crown (B) and chronograph pushers (A and C) on the side of the case.

2. OPERATING THE WATCH

2.1 Basic Timekeeping

Once the time and date are set, the watch will keep accurate time using its quartz movement. The large hands indicate hours and minutes, while a smaller sub-dial typically indicates seconds.

2.2 Using the Chronograph (Stopwatch)

The chronograph function allows you to measure elapsed time.

1. Press button A (top pusher) to start the chronograph. The chronograph second hand will begin to move.
2. Press button A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. Press button C (bottom pusher) to reset the chronograph hands to their zero positions.

Note: The sub-dials on the watch face display chronograph minutes, seconds, and 1/10th seconds, depending on the specific movement.

3. MAINTENANCE

3.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe it regularly with a soft, dry cloth. For the stainless steel bracelet, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials.

3.2 Water Resistance

This watch is rated for 30 meters (3 ATM) of water resistance. This means it is suitable for daily use, such as splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or showering with hot water, as steam and pressure changes can compromise the seals.

- Do not operate the crown or pushers when the watch is wet or submerged.
- Ensure the crown is fully pushed in after setting the time/date to maintain water resistance.



Image: The SKMEI 9334 watch being splashed with water, illustrating its 30-meter water resistance capability.

3.3 Battery Replacement

The watch is powered by a quartz battery. When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and function.




Image: Rear view of the SKMEI 9334 watch, showing the stainless steel case back with model number (9334) and water resistance rating (WR30M).

4. TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Date not changing:** Ensure the date is not being set between 9:00 PM and 3:00 AM. If the issue persists, the movement may require inspection.
- **Chronograph hands not resetting to zero:** This may indicate a need for chronograph calibration. Consult a professional watch technician for adjustment.
- **Water inside the watch:** If condensation or water appears inside the watch, immediately take it to a professional watchmaker for inspection and repair to prevent further damage.

5. SPECIFICATIONS

Feature	Detail
Model Number	9334
Movement Type	Quartz
Display Type	Analog
Case Material	Zinc Alloy
Band Material	Stainless Steel
Dial Window Material	Scratch-resistant Glass
Case Diameter	4.6 cm
Case Thickness	1.4 cm
Strap/Lug Width	20 mm
Water Resistance	30M (3 ATM)
Functions	Time, Date, Chronograph
Item Weight	141.1 g

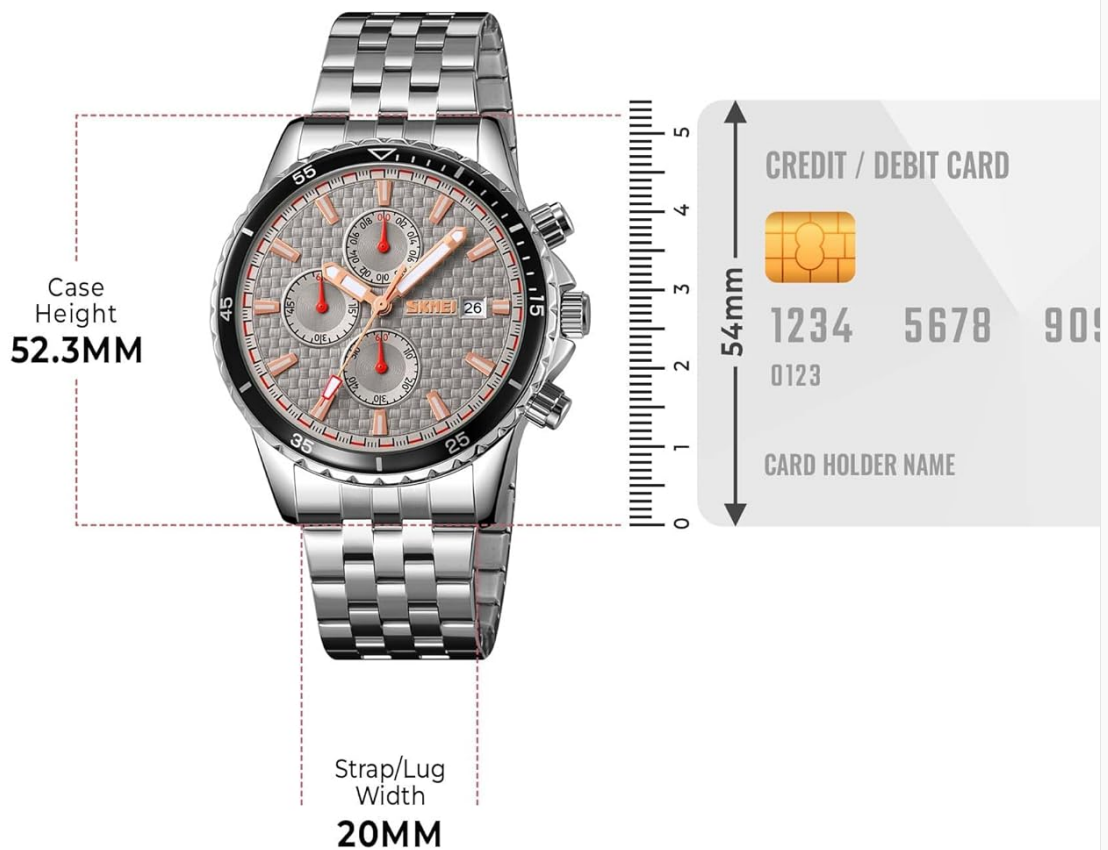

Case Width
46MM



Strap Material
Stainless Steel



Case Thickness
14MM

Image: Diagram illustrating the dimensions of the SKMEI 9334 watch, including case height, case width, strap/lug width, and case thickness.

6. WARRANTY INFORMATION

This SKMEI watch comes with a limited warranty. The specific terms and duration of the warranty may vary by region and retailer. Please refer to the warranty card included with your purchase or contact your point of sale for detailed information regarding coverage and claims.

The warranty typically covers manufacturing defects under normal use. It generally does not cover damage resulting from improper handling, accidents, unauthorized repairs, normal wear and tear, or battery depletion.

7. CUSTOMER SUPPORT

For any questions, technical assistance, or service requests not covered in this manual, please contact the retailer where you purchased the watch or refer to the official SKMEI website for support contact information.

When contacting support, please have your watch model number (9334) and purchase details readily available.

© 2024 SKMEI. All rights reserved.