



Manuals.plus /

- › SKMEI /
- › SKMEI 2305 Sport Analog Watch User Manual

## SKMEI SKMEI\_2305

# SKMEI 2305 Sport Analog Watch User Manual

Model: SKMEI\_2305

## INTRODUCTION

---

This manual provides detailed instructions for the proper use and maintenance of your SKMEI 2305 Sport Analog Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

## PRODUCT OVERVIEW

---

The SKMEI 2305 is a sport analog watch designed for men, featuring a durable silica gel band, stopwatch functionality, and water resistance up to 50 meters. Its robust construction and clear display make it suitable for various activities.



Image: Front view of the SKMEI 2305 Sport Analog Watch.

## Key Features

- **Display Type:** Analog
- **Dial Shape:** Tonneau
- **Functions:** Date, Stopwatch
- **Strap Material:** Silica Gel
- **Water Resistance:** 50 meters (5 ATM)
- **Movement Type:** Quartz

# Key Features

Display  
**Analog**

Dial Shape  
**Tonneau**

Features  
**Date, Stopwatch**

Strap Material  
**Silica Gel**

Water Resistance  
**50 m**



Image: Visual representation of the watch's key features.

## SETUP

### Initial Time and Date Setting

1. **Pull out the Crown:** Gently pull the crown (the knob on the side of the watch) to position 2.
2. **Set the Time:** Rotate the crown to adjust the hour and minute hands to the correct time. Ensure AM/PM is correctly set if your watch has a 24-hour indicator or date changes at midnight.
3. **Set the Date:** For watches with a date function, pull the crown to position 1 (halfway out) and rotate it to set the correct date. Push the crown back in to position 0 once set.
4. **Push in the Crown:** Once the time and date are set, push the crown back into position 0 to start the watch movement.

### Adjusting the Strap

The silica gel strap is designed for comfort and adjustability. To adjust the strap, locate the buckle and thread the strap through it. Secure the strap by inserting the pin into one of the holes, ensuring a snug but comfortable fit on your wrist.

## OPERATING INSTRUCTIONS

---

### Basic Time Display

The watch displays time using analog hour, minute, and second hands. Ensure the crown is fully pushed in for accurate timekeeping.

### Stopwatch Function

The SKMEI 2305 features a stopwatch function, typically operated by the pushers located above and below the crown.

1. **Start:** Press the top pusher to start the stopwatch.
2. **Stop/Pause:** Press the top pusher again to stop or pause the stopwatch.
3. **Reset:** With the stopwatch stopped, press the bottom pusher to reset it to zero.

### Date Function

If your watch includes a date display, it will typically advance automatically at midnight. To manually adjust the date, refer to the 'Initial Time and Date Setting' section under Setup.

## MAINTENANCE

---

### Water Resistance

This watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, showering, and general water exposure. It is **not** suitable for diving, snorkeling, or high-pressure water activities. Avoid operating the crown or pushers when the watch is wet to prevent water ingress.



Image: Rear view of the watch, indicating 5 ATM water resistance and battery code SR920SW.

## Cleaning

To clean your watch, wipe the case and strap with a soft, damp cloth. For stubborn dirt on the silica gel band, a mild soap solution can be used, followed by rinsing with clean water and thorough drying. Avoid using harsh chemicals or abrasive materials.

## Battery Replacement

The watch is powered by a quartz movement, requiring a battery. The battery code is SR920SW. When the watch stops or the hands move erratically, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in	Replace battery; Push crown fully into position 0
Incorrect time	Time not set correctly; Crown accidentally pulled out	Reset time as per 'Setup' instructions; Ensure crown is fully pushed in
Date not changing	Time set incorrectly (e.g., AM/PM issue); Date not manually advanced	Adjust time to pass midnight correctly; Manually set date if needed
Water inside watch	Crown/pushers operated underwater; Exceeded water resistance depth	Immediately take to a service center; Avoid water exposure until repaired

## SPECIFICATIONS

---

- **Model Number:** SKMEI\_2305
- **Display Type:** Analog
- **Movement Type:** Quartz
- **Case Material:** PC (Polycarbonate)
- **Band Material:** Silica Gel
- **Crystal Material:** Resin
- **Case Diameter:** 41.2 mm
- **Case Thickness:** 1.72 cm
- **Band Width:** 2.5 cm
- **Band Length:** 24 cm
- **Item Weight:** 63.2 g
- **Water Resistance Depth:** 50 Metres (5 ATM)
- **Closure Type:** Buckle



Case Width  
**44.3MM**



Strap Material  
**Silica Gel**



Case Thickness  
**17.2MM**

Image: Detailed dimensions of the watch case and strap.

## WARRANTY AND SUPPORT

### Warranty Information

Your SKMEI 2305 Sport Analog Watch comes with a **9-month Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

### Customer Support

For any service-related inquiries, feedback, or warranty support, please contact the Skmei India Helpline:

- **Helpline Number:** 1800-889-6251
- **Operating Hours:** Monday to Saturday, 9:00 AM to 6:00 PM (IST)

