

[Manuals.plus](#) /

› [GE](#) /

› GE X5 Power Pro Series 14.1 MP Digital Camera Instruction Manual

GE X5 Power Pro

GE X5 Power Pro Series 14.1 MP Digital Camera Instruction Manual

Model: X5 Power Pro

1. INTRODUCTION

Thank you for choosing the GE X5 Power Pro Series 14.1 MP Digital Camera. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly to ensure proper use and to maximize your photographic experience.

The GE X5 Power Pro is a versatile digital camera featuring a 14.1-megapixel sensor, a powerful 15x optical zoom lens, and a 2.7-inch LCD display. It includes advanced features such as face detection, image stabilization, and in-camera red-eye removal to help you capture high-quality images and videos.

2. PACKAGE CONTENTS

Please check that all the following items are included in your camera package:

- GE X5 Power Pro Digital Camera
- USB Cable
- Wrist Strap
- Warranty Card
- Instruction Manual (this document)

Note: AA batteries and an SD/SDHC memory card are not included and must be purchased separately.

3. CAMERA PARTS AND CONTROLS

Familiarize yourself with the various parts and controls of your GE X5 Power Pro camera.



Figure 3.1: Front View. This image shows the front of the GE X5 Power Pro camera. Key features visible include the large lens with 15x optical zoom, the GE logo, and the pop-up flash unit in its closed position. The ergonomic grip is also prominent.



Figure 3.2: Rear View. This image displays the back of the GE X5 Power Pro camera. The prominent 2.7-inch LCD screen is visible, along with various control buttons to its right, including 'evf/lcd', 'disp', 'func/ok', and 'menu'. The electronic viewfinder is located above the LCD.

Front Controls

- **Lens:** 15x optical zoom lens.
- **Flash:** Pop-up flash unit.
- **Shutter Button:** Press halfway to focus, fully to capture.
- **Power Button:** Turns the camera on or off.

Rear Controls

- **LCD Screen:** 2.7-inch display for viewing images, videos, and menus.
- **EVF/LCD Button:** Switches between Electronic Viewfinder and LCD display.
- **DISP Button:** Changes the information displayed on the LCD.
- **Playback Button (▶):** Enters playback mode to view captured media.
- **FUNC/OK Button:** Accesses function menu or confirms selections.
- **Directional Pad:** Navigates menus and settings.
- **MENU Button:** Opens the main menu.
- **Delete Button:** Deletes selected images or videos.

4. SETUP

4.1 Inserting Batteries

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert four AA alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

4.2 Inserting a Memory Card

The camera supports SD and SDHC memory cards up to 16GB.

1. Open the memory card slot cover, usually located near the battery compartment.
2. Insert the SD/SDHC card with the metal contacts facing the front of the camera until it clicks into place.
3. Close the memory card slot cover.

4.3 Attaching the Wrist Strap

Thread the wrist strap through the strap lug on the side of the camera and secure it to prevent accidental drops.

4.4 Initial Power On and Date/Time Setting

When you power on the camera for the first time, you may be prompted to set the date and time. Use the directional pad to navigate and the FUNC/OK button to confirm your selections.

5. OPERATING THE CAMERA

5.1 Turning On/Off

Press the Power button located on the top of the camera to turn it on or off.

5.2 Basic Photography (Auto Mode)

1. Turn the camera on. The camera will typically start in Auto mode.
2. Frame your subject using the LCD screen or electronic viewfinder.
3. Press the shutter button halfway down to allow the camera to focus. The focus frame will turn green when focus is achieved.
4. Press the shutter button fully down to capture the image.

5.3 Zoom Operation

Use the zoom lever, typically located around the shutter button, to adjust the optical zoom. Push it towards 'W' for wide-angle (zoom out) and 'T' for telephoto (zoom in).

5.4 Flash Modes

To use the flash, manually pop it up. Once open, you can cycle through flash modes (Auto, Red-eye Reduction, Fill-in, Slow Sync, Off) using the appropriate button or menu option.



Figure 5.1: Flash Open. This image shows the GE X5 Power Pro camera with its pop-up flash unit in the open position, ready for use in low-light conditions.

5.5 Reviewing Photos and Videos

Press the Playback button (▶) to enter playback mode. Use the directional pad to scroll through your captured images and videos.

5.6 Deleting Photos and Videos

In playback mode, select the image or video you wish to delete, then press the Delete button. Confirm your selection when prompted.

5.7 Connecting to a Computer

Use the provided USB cable to connect your camera to a computer. The camera will appear as a removable disk, allowing you to transfer photos and videos.

6. MAINTENANCE

6.1 Cleaning the Camera

- **Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water.
- **Lens:** Use a lens brush or a soft, lint-free cloth specifically designed for camera lenses. Avoid touching the lens surface with your fingers.
- **LCD Screen:** Gently wipe with a soft, dry cloth. Avoid pressing too hard.

6.2 Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if the camera will not be used for an extended period.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Batteries are dead or inserted incorrectly.	Replace with fresh AA batteries or reinsert them with correct polarity.
Cannot take pictures.	Memory card is full or not inserted.	Delete unnecessary files or insert a new memory card. Ensure card is properly inserted.
Images are blurry.	Camera shake or out of focus.	Hold the camera steady. Press the shutter button halfway to ensure focus before fully pressing. Use image stabilization.
Flash does not fire.	Flash is closed or set to 'Off'.	Manually pop up the flash. Check flash mode settings.

8. SPECIFICATIONS

Feature	Detail
Model Name	GE X5 Power Pro
Effective Still Resolution	14.1 Megapixels
Photo Sensor Technology	CCD (1/2.3-inch)
Optical Zoom	15x
Digital Zoom	6x
Focal Length	27mm - 405mm (35mm equivalent)
Image Stabilization	Optical
Display	2.7-inch LCD (230,000 dots)

Feature	Detail
Internal Memory	18 MB
Memory Card Support	SD/SDHC up to 16GB
File Format (Still)	JPEG
Video Resolution	480p
Video Capture Format	MPEG-4
Power Source	4 x AA Alkaline Batteries
Connectivity	USB 2.0
Special Features	Face Detection, Smile Detection, Blink Detection, Face Auto-exposure, In-camera Red-eye Removal
Weight	1.6 Pounds (approx.)

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This GE X5 Power Pro Digital Camera comes with a 90-day limited warranty from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. For detailed terms and conditions, please refer to the warranty card included in your package.

9.2 Customer Support

For technical assistance, troubleshooting, or warranty service, please contact the retailer or the manufacturer's customer support. Refer to the contact information provided on your warranty card or the official GE consumer electronics website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DHSS6CWW>

More documents and user manuals: <https://manuals.plus/>