

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PUSOKEI](#) /

› [PUSOKEI Robot Vacuum Cleaner Instruction Manual \(Model PUSOKEIc23e8rnomu-12\)](#)

## PUSOKEI PUSOKEIc23e8rnomu-12

# PUSOKEI Robot Vacuum Cleaner Instruction Manual

Model: PUSOKEIc23e8rnomu-12

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

## 1. INTRODUCTION

---

Thank you for choosing the PUSOKEI Robot Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. Please read it thoroughly before use and retain it for future reference.

This robot vacuum cleaner features a slim 8.2cm body, powerful suction, a 100ml external water tank for mopping, and smart app control capabilities. It is designed to efficiently clean various floor types including hard floors, carpets, tiles, and marble.

## 2. SETUP

---

### 2.1 Unpacking and Component Check

Carefully remove all components from the packaging. Ensure all items listed below are present:

- Robot Vacuum Cleaner
- Charging Dock
- Power Adapter
- Mopping Cloth
- Cleaning Brush
- User Manual (this document)



Image: Robot Vacuum Cleaner with its accessories.

## 2.2 Charging Dock Placement

Place the charging dock against a wall in an open area, ensuring there are no obstacles within 1 meter (3 feet) to the front and 0.5 meters (1.5 feet) to the sides. Connect the power adapter to the charging dock and plug it into a power outlet.

## APP Remote Intelligent Control Cleaner

Large Suction Power, WIFI Connection APP, Automatic Recharge, Reservation Cleaning, Anti Fall, Voice Reminder



Image: Robot vacuum charging at its dock, demonstrating app connectivity.

### 2.3 Initial Charging

Place the robot vacuum onto the charging dock. Ensure the charging contacts on the robot align with those on the dock. The indicator light on the robot will show charging status. Fully charge the robot before first use (approximately 4-5 hours).

### 2.4 App Installation and Connection

Download the dedicated control app from your smartphone's app store. Follow the in-app instructions to connect your robot vacuum to your home Wi-Fi network. This will enable remote control, scheduling, and access to advanced features.

### 2.5 Filling the Water Tank (for Mopping)

If you intend to use the mopping function, detach the 100ml external water tank. Fill it with clean water. Attach the super fine fiber mopping cloth securely to the tank. Reattach the water tank assembly to the robot vacuum.

## External Physical Water Tank


Uniform water discharge, no overflow




Uniform Water Discharge



Mopping and Drying

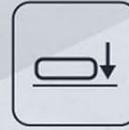

Wet Mopping

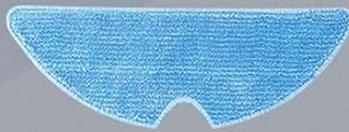

Water Locked Cleaning Mop



100ml External Water Tank

Image: External water tank and mopping cloth for the robot vacuum.

## 3. OPERATION

---

### 3.1 Starting and Stopping Cleaning

- **Manual Start:** Press the power button on the robot's top panel to start a cleaning cycle.
- **Manual Stop/Pause:** Press the power button again to pause or stop the cleaning cycle.
- **App Control:** Use the dedicated app to start, pause, or stop cleaning remotely.



Image: Top view of the robot vacuum, highlighting control buttons.

### 3.2 Cleaning Modes

The robot automatically adjusts its cleaning path based on the environment. Specific modes (e.g., edge cleaning, spot cleaning) can typically be selected via the mobile app.

### 3.3 App Remote Control

The app allows for comprehensive control:

- **Schedule Tasks:** Set specific times for the robot to clean automatically.
- **Monitor Progress:** View the robot's cleaning status and path in real-time.
- **Adjust Suction Power:** Select between 1200Pa and 1800Pa suction levels as needed.
- **Voice Reminders:** The robot provides voice prompts for status updates or issues.

### 3.4 Automatic Recharge and Obstacle Avoidance

The robot is designed to return to its charging dock automatically when its battery is low. It also features intelligent obstacle avoidance and fall prevention sensors to navigate your home safely and efficiently.

## 4. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum cleaner.

#### 4.1 Emptying the Dust Box

The dust box has a capacity of 335ml. It should be emptied after each cleaning cycle or when full. Open the top cover of the robot, remove the dust box, empty its contents, and clean any debris from the filter.

#### 4.2 Cleaning the Water Tank and Mopping Cloth

After each mopping session, remove the external water tank, empty any remaining water, and rinse it. Detach the mopping cloth, wash it thoroughly, and allow it to air dry before reattaching or storing.

#### 4.3 Cleaning Brushes

Periodically inspect and clean the main brush and side brushes. Use the provided cleaning brush to remove hair and debris tangled around them. Replace brushes if they become worn or damaged.



Image: Underside of the robot vacuum, showing brushes.

#### 4.4 Cleaning Sensors

Wipe the cliff sensors, wall sensors, and charging contacts with a clean, dry cloth to ensure proper functionality and navigation.

### 5. TROUBLESHOOTING

---

If you encounter issues with your robot vacuum, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Robot does not start or respond.	Low battery; Power switch off; Robot stuck.	Charge the robot; Ensure power switch is ON; Clear any obstructions.
Poor cleaning performance.	Full dust box; Clogged brushes/filter; Low suction setting.	Empty dust box; Clean brushes and filter; Increase suction via app.
Robot does not return to charging dock.	Charging dock obstructed; Robot too far from dock; Dirty charging contacts.	Clear area around dock; Manually place robot on dock; Clean charging contacts.
Mopping function is ineffective.	Empty water tank; Dry mopping cloth; Clogged water outlet.	Refill water tank; Wet mopping cloth; Check for blockages in water tank.

## 6. SPECIFICATIONS

Feature	Detail
Brand	PUSOKEI
Model Name	PUSOKEIc23e8rnomu-12
Suction Power	1200Pa, 1800Pa (Adjustable)
Motor Power	16W
Built-In Battery	3000mAh Polymer Battery
Battery Life	60-90 Minutes (depending on mode)
Working Noise	65db
External Water Tank Capacity	100ml
Dust Box Capacity	335ml
Charging Time	4-5 Hours
Height	Approx. 8.2cm (3.2 inches)
Product Dimensions (L x W x H)	18.89" x 16.53" x 5.51"
Item Weight	4.1 Kilograms (9.02 pounds)
Filter Type	Cloth
Surface Recommendation	Hard floors, carpets, tiles, marble

## 7. WARRANTY AND SUPPORT

For technical support, warranty claims, or further assistance, please contact PUSOKEI customer service through the retailer where the product was purchased or refer to the contact information provided in the product packaging. While the battery life is rated for 3 years, specific warranty terms for the entire product may vary. Please consult your purchase documentation for detailed warranty information.

